



Data Entry Foot Switch Operation Manual

Contents

Overview	3
Introduction	3
Instructions	4
Installation & Setup	4
Operation	4
Support	5
Contact Us	5
Warranty	5

Overview

INTRODUCTION

The footswitch can significantly improve the speed at which data collection takes place by allowing the operator to focus on the task without needing to click a mouse button or press a key on the keyboard. The actual use of the footswitch is application dependent, and is documented in the manual that accompanied your Crystal Engineering software package. For example, in FastCalXP, the foot switch acts as a Next Data Point function, allowing the operator to keep his hands on the comparator during data collection.

Crystal Engineering is the company that designs, manufactures, markets, and services the nVision reference recorder, XP2i digital test gauge, 30 series pressure calibrators, MultiCal multimeter pressure adapters, and a variety of industry specific pressure measuring equipment. Crystal Engineering pioneered features like full temperature compensation and “of reading” rated gauges and calibrators. Pressure measuring equipment is the only thing we do and that’s why we say:

 **Pressure** Is our **Business**™

Instructions

INSTALLATION & SETUP

The foot switch comes in two pieces. The Control Module, which has an attached USB cable and two 1/8" sockets, and the Foot Switch, which has an attached cable ending in an 1/8" plug.

Note: When connecting the Foot Switch to a computer for the first time, it is best to connect it after your computer has booted up and is logged in. This will enable the "new device detected" message to be displayed, which usually completes within less than a minute. The process will be repeated if you plug the device into a different USB port, even on the same computer.

1 Connect the control module to any available USB port.

Note: No drivers are required for operation. The foot switch may be connected before or after the installation of your Crystal Engineering software.

2 Plug the foot switch into the left socket on the control module, as shown in the photo, and place the foot pedal in a convenient location.

Note: If using the Elite 2 foot switch, plug the cable into the right socket.

OPERATION

Pressing the foot switch should have no effect except as appropriate within your Crystal application, and should not have any affect on other Windows applications. See your software user's manual for more information.



Control Module and Foot Switch



Foot Switch cable plugged into the left socket

Support

CONTACT US

USA

Crystal Engineering • California

Tel +1 (800) 444 1850

Fax +1 (805) 595 5466

crystal@ametek.com

Mansfield & Green • Florida

Tel +1 (800) 527 9999

cal.info@ametek.com

United Kingdom

Tel +44 (0)1243 833 302

jofra@ametek.co.uk

France

Tel +33 (0)1 30 68 89 40

general.lloyd-instruments@ametek.fr

Germany

Tel +49 (0)2159 9136 510

info.mct-de@ametek.de

Denmark

Tel +45 4816 8000

jofra@ametek.com

India

Tel +91 22 2836 4750

jofra@ametek.com

Singapore

Tel +65 6484 2388

jofra@ametek.com

China

Shanghai

Tel +86 21 5868 5111

Beijing

Tel +86 10 8526 2111

Guangzhou

Tel +86 20 8363 4768

jofra.sales@ametek.com.cn

If calling, have ready the model number, serial number, date of purchase, and reason for return. You will receive instructions for returning the device to us.

WARRANTY

Crystal Engineering Corporation warrants the Data Entry Foot Switch to be free from defects in material and workmanship under normal use and service for one (1) year from date of purchase to the original purchaser. It does not apply to batteries or when the product has been misused, altered or damaged by accident or abnormal conditions of operation.

Crystal Engineering will, at our option, repair or replace the defective device free of charge and the device will be returned, transportation prepaid. However, if we determine the failure was caused by misuse, alteration, accident or abnormal condition of operation, you will be billed for the repair.

CRYSTAL ENGINEERING CORPORATION MAKES NO WARRANTY OTHER THAN THE LIMITED WARRANTY STATED ABOVE. ALL WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED TO A PERIOD OF ONE (1) YEAR FROM THE DATE OF PURCHASE. CRYSTAL ENGINEERING SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT, TORT OR OTHERWISE.

Note: (USA only) Some states do not allow limitations of implied warranties or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.



© 2015 Crystal Engineering Corporation

708 Fiero Lane, Suite 9, San Luis Obispo, California 93401-8701

