Pressure Module (PM)

ACCURACY

MPa (Gauge Pressure)

300 kPa, 1 MPa, and 3 MPa modules

0 to 30% of Range: ± (0.0075% of Full Scale)

30 to 110% of Range: ± (0.025% of Reading)

Vacuum: For 300 kPa and 1 MPa

± (0.06% of Full Scale*)

For 3 MPa

± (0.06% of Full Scale*) ±1 LSD

* Full Scale = -99.9 kPa

10, 30, 70, and 100 MPa modules

0 to 30% of Range: \pm (0.015% of Full Scale)

30 to 110% of Range: ± (0.05% of Reading)

Includes all effects of linearity, hysteresis, repeatability, temperature, and stability for one year.

All models indicate vacuum, but vacuum specification applies to 300 kPa, 1 MPa, and 3 MPa models only.

Not recommended for continuous use at high vacuum.

Refer to XP2i-DP data sheet for gauges that are intended for continuous high vacuum use.

MPaA (Pressure with BARO module)

300 kPa module

1.38 to 100.00 kPaA: ± 0.08 kPaA

100.00 to 400.00 kPaA: \pm (0.025% of Reading)

+ 0.03 kPaA

1 MPa module

 $0.00138 \text{ to } 0.10000 \text{ MPaA: } \pm 0.00008 \text{ MPaA}$

0.10000 to 0.40000 MPaA: ± 0.00010 MPaA

0.40000 to 1.10000 MPaA: \pm (0.025% of Reading)

3 MPa module

 $0.0014 \text{ to } 0.1000 \text{ MPaA: } \pm 0.0001 \text{ MPaA}$

0.1000 to 1.000 MPaA: ± 0.0003 MPaA

1.000 to 3.1000 MPaA: \pm (0.025% of Reading)

10 MPa module

0.1000 to 3.1000 MPaA: ± 0.0015 MPaA

3.1000 to 10.1000 MPaA: \pm (0.05% of Reading)

30 MPa module

0.100 to 9.100 MPaA: ± 0.005 MPaA

9.100 to 30.100 MPaA: \pm (0.05% of Reading)

70 MPa module


0.100 to 21.100 MPaA: ± 0.011 MPaA


21.100 to 70.100 MPaA: **± (0.05% of Reading)**

100 MPa module


0.100 to 30.100 MPaA: \pm 0.015 MPaA

30.100 to 100.100 MPaA: \pm (0.05% of Reading)

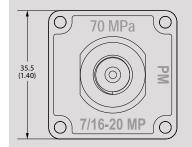

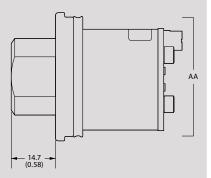



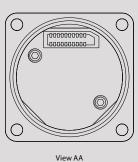

4793. M nVision MPa Data Sheet Page 1 of 10





DIFFERENTIAL PRESSURE MEASUREMENT UNCERTAINTIES WITH TARE

The Tare function can improve measurement uncertainties on two modules with the same full scale pressure range installed into one nVision Reference Recorder. Requires the use of an equalizing valve.

The following specifications apply to the measurement system with a logging interval of 1 second/reading:

Full Scale Range of Both Sensors	The Greater of (+/-)							
MPa	mbar	psi	inH ₂ O	mmH ₂ O		% of DP Reading		
300 (kPa)	0.04	0.0005	0.014	0.4	or	0.025%		
1	0.10	0.0015	0.04	1.0	or	0.025%		
3	0.4	0.005	0.14	4.0	or	0.025%		
10	1.0	0.02	0.4	10.0	or	0.05%		
30	4.0	0.05	1.4	n/a	or	0.05%		
70	10.0	0.2	4.0	n/a	or	0.05%		
100	15.0	0.3	6.0	n/a	or	0.05%		

Unit must be enabled in CrystalControl

DIFFERENTIAL PRESSURE MEASUREMENT UNCERTAINTIES WITHOUT TARE

The total nVision Reference Calibrator measurement uncertainty in the ΔP mode configuration will need to consider the uncertainties of both pressure modules. We recommend the module uncertainties to be combined with the preferred square root of the sum of the squares (or "root sum squares") method.

The following table lists the possible combinations of using Pressure Modules (PM) with different accuracy statements. The uncertainties reported below are without the use of the Tare feature, which will greatly improve your measurement uncertainty.

		Upper Pressure Modu (of Static Line Pressure	
		0.025%	0.05%
Lower Pressure Module Uncertainties	0.025%	0.035%	0.056%
(of Static Line Pressure) (of Reading)	0.05%	0.056%	0.071%





SENSOR

Wetted Materials: (WRENCH TIGHT) 316 stainless steel

(FINGER TIGHT) 316 stainless steel

and Viton® (internal o-ring)

Diaphragm Seal Fluid: Silicone Oil

Connection: Crystal CPF * Female

All welded, with a permanently filled diaphragm seal.

Metal to metal cone seal; O-ring can be removed if necessary.

1/4" medium pressure tube system compatible with HIP LM4 and LF4 Series, Autoclave Engr SF250CX Male and Female Series.

CPF Adapters to NPT, BSP, and M20 available.

BAROMETRIC REFERENCE (BARO)

Accuracy: ± 0.5 mbar, ± 0.00725 psi

Range: 700.0 to 1100.0 mbarA,

10.153 to 15.954 psiA

Units and Resolution: mbar..... 0.1

psi..... 0.001 inHg...... 0.001 mmHg 0.01

Pressure Connection: Cylindrical sensor fitting of 5.8mm

OD. A flexible 4.8 mm [3/16"] ID tube is recommended to connect for

for calibration.

Mounting: Secured using a 3/8" 4-40 plastic screw.

Includes all effects of linearity, hysteresis, repeatability, temperature, and stability for one year.

Exposure to environmental extremes of temperature, shock, and/ or vibration may warrant a more frequent recertification period.

Other units available depending on the installed modules.

Plastic non-conductive screw must be used to comply with hazardous location requirements.



U.S. Patent No. 8,794,677



nVision Reference Recorder MPa

Current, Voltage, & Switch Test Module (MA20)

Intended for use with a 4-20mA loop measurement. This module is also capable of measuring supply voltages and has an auxiliary fixed output for use in switch open/closure testing. Each MA20 module includes a super flexible silicone test lead kit (P/N 3952).

CURRENT & VOLTAGE MEASUREMENT

Current (mA) Input

Accuracy: \pm (0.015% of rdg + 0.002 mA)

Range: 0 to 55 mA (MA20)

Max Allowable Current: 93.3 mA

Resolution: **0.001 mA or 0.01%**

Units: **mA, % 4-20, % 10-50**

Input Resistance: $< 17.2 \Omega$

Voltage Burden @ 20mA: < 0.35 V

Voltage Burden @ 50mA: < 0.86 V

HART Resistance: **250** Ω

Connection: 2mm jacks

Includes all effects of linearity, hysteresis, repeatability, temperature, and stability for one year.


For hazardous location product warnings, refer to the operation manual.


Inputs protected by a resettable fuse.

mA can be displayed as a percentage, where 0 to 100% corresponds to either 4 to 20 mA or 10 to 50 mA.

Jacks are compatible with safety sheathed banana plugs.



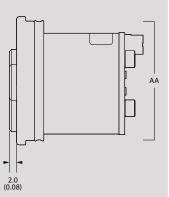

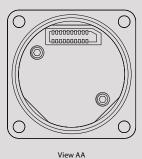

Voltage (VDC) Input

Accuracy: \pm (0.015 % of rdg + 0.002 VDC)

Range: 0 to 28 VDC

Max Allowable Voltage: **30 VDC**

Resolution: 0.001 VDC

Units: **VDC**

Includes all effects of linearity, hysteresis, repeatability, temperature, and stability for one year.

Switch Test

Switch Type: **Dry Contact**

Closed State Resistance: $< 10 \Omega$

Switch state change indicated by bright green LED flash.

Open State Resistance: > 10 $M\Omega$

Switch test screen reports switch open, close, and

deadband values.



ECEX ATEX and IECEx Scheme Entity Parameters

The MA20 Module has these specific input entity parameters:

Ui = 28 V $U_0 = 6.6 \text{ V}$ li = 93.3 mAlo = 4.45 mAPi = 653.3 mW Po = 7.34 mWCi = 0.36 uFCo = 0.5 uF*Li = 39.1 uH Lo = 12 uH**

- * Dependent on the supply to the terminals but shall not be greater than 0.5 uF
- ** Total cable inductance between all modules

4793. M nVision MPa Data Sheet

Page 4 of 10



Temperature Module (RTD100)

Calibrated for Pt100 RTD/PRT (100 Ohms at 0°C Platinum Resistance Temperature Detector) sensors conforming to DIN/ IEC 60751 (or IEC751) with US, Euro, or Lab calibration curves. An RTD is not included, but each RTD100 includes P/N 3953 RTD Connection Kit.

Includes all effects of linearity, hysteresis,

one year.

repeatability, temperature, and stability for

TEMPERATURE MEASUREMENT

Resistance Input

Accuracy: \pm (0.015% of rdg + 0.02 Ω)

Range: 0 – 400 Ohms range for use with 100 Ohm PRTs

Resolution: 0.01 on all scales

Units: ${}^{\circ}C$, K, ${}^{\circ}F$, R, Ω

TCRs: $0.003850 \Omega/\Omega/^{\circ}C$ (IEC 60751), $0.003911 \Omega/\Omega/^{\circ}C$


(US Industrial Std), $0.003926 \Omega/\Omega/^{\circ}C$


Wiring: 2-, 3-, 4-wire support


Connection: M8 connector cable or terminal block

The proper selection of the RTD sensing element is very important as the error associated with this device is the majority of the overall system measurement uncertainty. IEC 751 is the standard that defines the temperature versus resistance for 100Ω , $0.00385 \Omega/\Omega/^{\circ}$ C platinum RTDs. IEC 751 defines two classes of RTDs: Class A and B. Class A RTDs operate over the -200 to 630°C range versus -200 to 800°C for the Class B elements. For example, the Class A uncertainty is about half that of the Class B elements as illustrated in the following table.


			Class A					Cla	ss B	
Temperature °C	nVi: Uncer	sion tainty	Class A nVision + Class A Uncertainty Uncertainty		Class B nVision + C Uncertainty Uncertain					
C	±Ω	±°C	±Ω	±℃	±Ω	±°C	±Ω	±°C	±Ω	±°C
-200	0.02	0.05	0.24	0.55	0.24	0.55	0.56	1.30	0.56	1.30
0	0.04	0.09	0.06	0.15	0.07	0.17	0.12	0.30	0.12	0.31
200	0.05	0.13	0.2	0.55	0.21	0.56	0.48	1.30	0.48	1.31
400	0.06	0.17	0.33	0.95	0.33	0.96	0.79	2.30	0.79	2.31
600	0.07	0.21	0.43	1.35	0.44	1.37	1.06	3.30	1.06	3.31
800	0.08	0.25	0.52	1.75	0.53	1.77	1.28	4.30	1.28	4.31

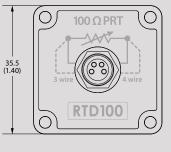



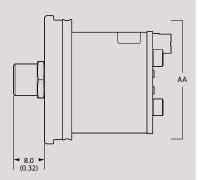



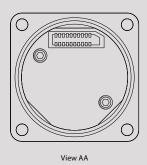



ECEX ATEX and IECEx Scheme Entity Parameters

The RTD100 Module has these specific input entity parameters:

Ui = 0V $U_0 = 9.73 \text{ V}$ Ii = 0 Alo = 1.6642 APi = 0 WPo = 1.1 W

Co = 0.5 uF

Lo = 12 uH*

* Total cable inductance between all modules

4793. M nVision MPa Data Sheet

Page 5 of 10

nVision Chassis (NV)

OPERATING TEMPERATURE

Temperature Range: -20 to 50° C (-4 to 122° F)

< 95% RH, non-condensing. No change in accuracy over operating temperature range. Gauge must be zeroed to achieve rated specification.

Applies to all modules.

DISPLAY

Screen: 255 x 160 pixel graphical display

LCD readable in sunlight with bright backlight.

Display Rate: 4 readings/second (standard)

up to 10 readings/second (recording)

POWER

The nVision is Intrinsically Safe only if powered by one of the following battery types.

ATEX/IECEx:

Approved Battery Type	Ta=	Marking	
Rayovac Max Plus 815	-20 to 50° C	Ex ia IIB T4 Ga	
Duracell MN1500	-20 to 45° C	EX IA IIB 14 GA	
Energizer E91, EN91	20 to 50°C	Fu in IID TO Co	
Duracell MN1500	-20 to 50° C	Ex ia IIB T3 Ga	

CSA:

:	Approved Battery Type	Ta=	Marking		
	Rayovac Max Plus 815	-20 to 50° C	Class I, Division 1, Grp C, D T4		
	Duracell MN1500	-20 to 45° C	Class I, Division 1, Grp C, D 14		
	Energizer E91		Class I, Division 1, Grp C, D T3B		
	Energizer EN91	-20 to 50° C	Class I, Division 1, Grp C, D T3A		
	Duracell MN1500		Class I, Division 1, Grp C, D T3C		


 $4 \times AA$: 200 hours, typical

Ultra Low Power: Up to 60 days, typical*

*2 installed modules, 1 reading per 5 minute recording interval, and 23°C ambient temperature.

Uses 4 alkaline AA (LR6) batteries. Use of backlight reduces operating time.

For hazardous location product warnings, refer to the operation manual.

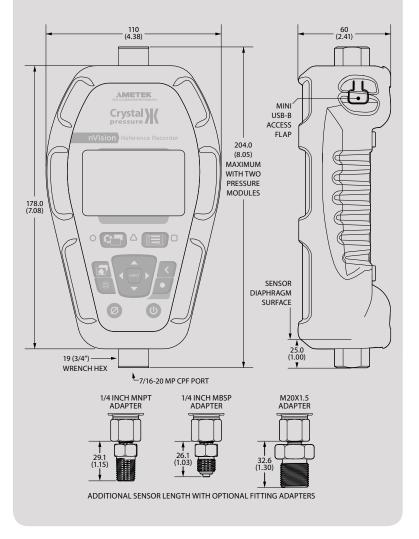



nVision Reference Recorder MPa

DATA/COMMUNICATION

Digital Interface: mini-USB The mini USB will power the nVision with or without the battery

pack installed.

For hazardous location product warnings, refer to the

operation manual.

DATALOGGING

Capacity: Approx. 1,000,000 data points* *Single Module Recording

Storage Type: Non-volatile flash memory Limit of 64 individual recordings.

The included CrystalControl software is compatible with Vista Fastest Interval: 10 per second (SP 2), Windows 7 (SP 1), Windows 8.1 and Windows 10.

Slowest Interval: 1 per hour Produces csv, xls, pdf, or signed pdf files, and uses Excel template files (samples included) to automatically format and graph data.

ENCLOSURE

Weight: 680 g (24.0 oz) Weight includes one pressure module, one RTD module, 4AA

battery module, and protective boot. Rating: IP66 and IP67

Submersible to 1 m for 30 minutes [IEC 60529]. Housing: Impact resistant injection molded


LCD protected from impact damage by 1.5 mm (0.06") thick Keypad and Labels: UV Resistant Polyester

polycarbonate lens. Mounting: M4 x 0.7 [8 mm (0.31")] deep

> threaded insert mounting locations For hazardous location product warnings, refer to the

> > operation manual.

Skydrol® compatible.

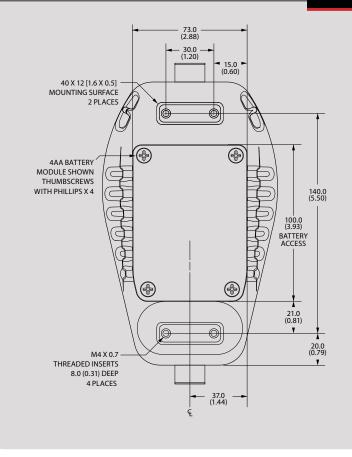



nVision Reference Recorder MPa

STORAGE TEMPERATURE

Temperature Range: -40 to 75° C (-40 to 167° F)

Batteries should be removed if stored for more than one month.

SPECIAL FEATURES

The following requires the use of our free CrystalControl software

Averaging Screen: Averages all points in a recording run.

Data Point Counter: Screen for counting the data points logged.

Display Screens: Turn on and rearrange display screens.

Estimated Recording Time: A CrystalControl calculation based on active screens and logging interval.

Live PC Graph: During a recording, graph directly to your PC.

Password Protect: Changes to configuration or userspan calibration factor(s).

Pressure Switch Test: Using a PM and MA20, get deadband and state-change pressure.

Remove: Unwanted pressure units.

Run Tags: Create and enable run tags that will identify logging runs.

Screen Numbers: Number each display screen to make writing procedures around the nVision easier.

Secure Documents: **Download into secure pdf documents for tamper proof records.**

Start-up Screen: Define a 32-character prompt which requires user acknowledgement at startup.

User Defined Unit: Define and display any pressure units not included, or to use the gauge to display force,

level or other pressure related parameters.

CERTIFICATIONS



II 1G Ex ia IIB T4 Ga or T3 **SIRA 09 ATEX 2008X**





Ex ia IIB T4 Ga or T3 IECEx SIR 09.0053X



Exia Intrinsically Safe and Non-incendive for Hazardous Locations: Class I, Division 1, Groups C and D, Temperature Code T4/T3A/TCB/T3C. For hazardous location product warnings, refer to the operation manual.



nVision complies with the Electromagnetic Compatibility and the Pressure Equipment Directives.



nVision complies with the Australian Radiocommunications (Electromagnetic Compatibility) Standard 2008.



nVision is approved for use as a portable test instrument for Marine use and complies with Det Norske Veritas' Rules for Classification of Ships, High Speed & Light Craft and Offshore Standards.

STANDARD DELIVERY

- nVision Recorder
- CD Manual
- ISO 17025 Accredited Calibration Certificate, NIST Traceable
- Soft Carrying Case P/N 4087
- Protective Boot P/N 3985
- Mini-USB Cable P/N 3951

COMPLEMENTARY PRODUCTS

Crystal Engineering offers a wide range of products that work with the nVision:

- Fittings that connect without tools, safely and without leaks
- Lightweight, super flexible high pressure hoses
- Fitting kits and adapters
- Pneumatic hand pumps
- Hydraulic hand pumps
- Portable pressure comparators
- Software, for the quickest way to calibrate pressure transmitters and gauges

ACCESSORIES

BARO Calibration Kit P/N 4547

Magnetic Hanging Strap P/N 5177

24 Volt Loop Power Supply P/N 24VDCPS

Waterproof Carrying Case P/N 2888

RTD Terminal Block P/N 3953 (included with RTD100 module)

Test Lead Kit P/N 3952 (included with MA20 Module)

4793. M nVision MPa Data Sheet Page 8 of 10






RANGE & RESOLUTION TABLE

Disp	lay	Reso	lutior
------	-----	------	--------

			D.5p.u.,	50.00.		
РМ	Range (MPa)	Over- pressure	MPa	kPa	bar	mbar
300KPA	300(kPa)	3.0 x		0.01	0.0001	0.1
1MPA	1	2.0 x	0.00001	0.01	0.0001	0.1
3MPA	3	2.0 x	0.0001	0.1	0.001	1
10MPA	10	2.0 x	0.0001	0.1	0.001	
30MPA	30	1.5 x	0.001	1	0.01	
70MPA	70	1.5 x	0.001	1	0.01	
100MPA	100	1.3 x	0.001	1	0.01	

(Add one digit of resolution for differential mode.)

ORDERING INFORMATION*

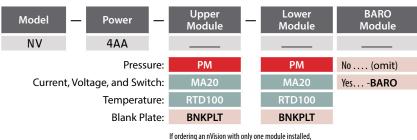

enter BNKPLT in the empty module slot.

SAMPLE PART NUMBERS

NV-4AA-300KPA-30MPA-BARO

nVision with 300 kPa pressure module (upper) and 30 MPa pressure module (lower); and a BARO module option.

NV-4AA- RTD100 - 70MPA - GWX-W... nVision with RTD100 temperature module (upper)

and 70 MPa pressure module (lower); a System G pump system; and a waterproof carrying case.

Pu	ımp System*
No I	Pump (omit)
Syst	tem AAXX
Syst	tem AAHX
Syst	tem BBXX
Syst	tem BBHX
Syst	tem CCXX
Syst	tem C CHX
Syst	tem DDOX
Syst	tem D DWX
Syst	tem E EOX
Syst	tem F FOV
Syst	tem F FWV
Syst	tem GGOX
Syst	tem GGWX
Syst	tem HHOX

Carrying Case~ Aluminum ... (omit) Waterproof.....-W an **option** for Systems A, B, the only option for Systems

AMETEK offers a variety of solutions for pressure generation and measurement. Our line of products for pressure generation includes everything from small pneumatic hand pumps to a precision, hydraulic pressure comparator capable of generating up to 15 000 psi/1000 bar/100 MPa.

All of our pumps may be ordered as part of a Pump System, complete with an nVision and delivered in a sturdy carrying case with custom insert.

*Refer to the following page for a more detailed description of each pump system.

► Ordering a Pump System Only

Any pump system, carrying case, and connection fittings for an nVision reference recorder may be ordered separately from the gauge. Enter NV-NONE followed by the Pump System part number and the Carrying Case option code.

SAMPLE PART NUMBERS

and Conly. The Waterproof Case is

G and H.

NV-NONE-GWX-W... System G pump system with a waterproof carrying case.







PUMP SYSTEMS OVERVIEW

Pump								Case Options		
System	Part Number	Pressure Range	Pneumatic	Hydraulic	Hand Pump	Bench Top	Included Pump	Aluminum	Waterproof (Pelican Case)	
Contain A	AXX	0 to 30psi /2 bar	•		•		T-960-CPF	•	■	
System A	AHX	0 to 580 psi /40 bar	•		•		T-970-CPF	•	•	
System B	BXX	-25 inHg to 30 psi /-0.85 to 2 bar	•		•		T-965-CPF	-	■ or)	
System b	ВНХ	-27 inHg to 580 psi /-0.91 to 40 bar	-		-		T-975-CPF	•	•	
System C	CXX	0 to 3000 psi /200 bar		■ (Oil)	-		T-620-CPF	-	■ or) ————	
System C	CHX	0 to 5000 psi /350 bar		■ (Oil)	•		T-620H-CPF	•	•	
System D	DOX	0 to 5000 psi /350 bar		■ (Oil)		•	P-018-CPF	•		
System D	DWX	0 to 5000 psi /350 bar		■ (Water)		-		-		
System E	EOX	0 to 10 000 psi /700 bar		■ (Oil)		•	P014-CPF			
System F	FOV	0 to 15 000 psi /1000 bar		■ (Oil)		-	T-1-CPF	•		
System F	FWV	0 to 15 000 psi /1000 bar		■ (Water)		-		•		
System G	GOX	0 to 15 000 psi/1000 bar		■ (Oil)		-	GaugeCalHP		•	
System d	GWX	0 to 15 000 psi/1000 bar		■ (Water)		-			•	
System H	HOX	-27 inHg to 580 psi /-0.91 to 40 bar	•		-		T-975-CPF — (and) ———		•	
Jystelli fi	HOX	0 to 5000 psi /350 bar		■ (Oil)	•		T-620H-CPF		•	

