

Reference manual
Reference Temperature Calibrator
Jofra RTC-156/157/158/159/168/187/250/700
A/B/C



Reference Manual

Reference Temperature Calibrator

JOFRA RTC-156/157/158/159/168/187/250/700 A/B/C

© Copyright 2012 AMETEK Denmark A/S



About this manual....

- **The structure of the manual**

This manual is divided into 11 sections. These describe how to set up, operate, service and maintain the calibrator. The technical specifications are described and accessories may be ordered from the list of accessories.

Along with the calibrator, you should have received a user manual, which sets out the operating instructions for the instrument. It is designed to provide a quick reference guide for use in the field.

- **Safety symbols**

This manual contains a number of safety symbols designed to draw your attention to instructions that must be followed when using the instrument, as well as any risks involved.



Warning

Conditions and actions that may compromise the safe use of the instrument and result in considerable personal injury or material damage.



Caution...

Conditions and actions that may compromise the safe use of the instrument and result in slight personal or material damage.



Note...

Special situations, which demand the user's attention.

List of contents

1.0	Introduction	5
1.1	Warranty	7
1.2	Receiving the Reference Temperature Calibrator	7
1.3	Dimensioning drawings	9
2.0	Safety instructions	10
3.0	Setting up the calibrator for use	15
3.1	Preparing the dry-block calibrator	15
3.1.1	When setting up the dry-block calibrator, you must	16
3.2	Choosing an insertion tube	17
3.2.1	Standard insertion tubes	17
3.3	Inserting the sensors	19
3.4	Preparing the liquid bath calibrator (RTC-158/168/250 A/B/C only)	22
3.4.1	When setting up the liquid bath calibrator, you must	23
3.4.2	Selection of fluids	27
3.4.3	Handling of lids	28
3.4.4	Inserting the sensors	28
3.4.4	Liquid container	29
3.5	External reference sensor	29
4.0	Calibrator Interface	30
4.1	Keypad-Functions	30
4.2	Display - Functions	31
4.2.2	Main screen display information	32
4.2.3	Main screen temperature values	33
4.2.4	Stability of temperature values	33
4.3	Input/Output Connections	34
4.4	Input sections (B and C versions only)	35
5.0	Operating the calibrator	36
5.1	Operating principle	36
5.1.1	Horizontal Menu	36
5.1.2	Vertical Menu	36
5.1.3	Parameter Fields	37
5.1.4	Working with lists	38
5.2	Starting the calibrator	40
5.3	Setting the temperature	41
5.4	Calibration	41
5.4.1	Running a calibration	42
5.4.2	Viewing calibration results	44
5.4.3	Displaying calibration information	45
5.4.4	Deleting workorders	46
5.5	Switch test menu	48
5.5.1	Running a switch test	48
5.5.2	Showing switch test results	50
5.6	Auto step menu	53
5.6.1	Running an Auto step calibration	53
5.6.2	Auto Step test results	55
5.7	Sensor Setup menu	56
5.7.1	Setting the additional stability time (A version)	56
5.7.2	Setting the parameters for TRUE – reference sensor (B and C versions only)	57
5.7.3	Setting the parameters for DLC– dynamic load compensation (B and C versions only)	58
5.7.4	Setting the parameters for SUT– Sensor under test (B versions only)	58
5.7.5	Viewing the Reference and DLC data (B and C versions only)	60
5.8	Calibrator Setup menu	61
5.8.1	Setting the temperature parameters	61
5.8.2	Setting the temperature resolution	62
5.8.3	Setting the sound, volume and operating mode	63
5.8.4	Setting recalibration interval	63
5.8.5	Changing language	63
5.8.6	Changing the date and time	64

5.8.7	Saving a setup	64
5.8.8	Loading a setup	65
5.8.9	Resetting the instrument setup to factory defaults.....	65
5.8.10	Network Configuration (for service use only).....	65
5.9	Selecting the stirrer speed (RTC-158/168/250 A/B/C only).....	67
5.10	Information Screen	68
5.11	About the calibrator.....	68
5.12	Simulation or training	69
6.0	After use.....	70
6.1	Storing and transporting the calibrator	70
6.1.1	Transporting the dry-block calibrator	72
6.1.2	Transporting the liquid bath calibrator	72
6.2	Emptying the well (liquid baths only)	72
7.0	Error messages (List of alarms).....	74
8.0	Returning the calibrator for service.....	77
9.0	Maintenance	79
9.1	Replacing the main fuses	79
9.2	Cleaning.....	80
9.3	Adjusting and calibrating the instrument.....	81
9.4	Maintenance of STS-reference sensor.....	82
9.5	Maintenance of DLC-sensor.....	83
9.6	Testing the overtemperature function	83
10.0	Technical specifications	84
11.0	List of accessories	129

1.0 Introduction

Congratulations on your new AMETEK JOFRA RTC Calibrator!

With this AMETEK JOFRA calibrator, you have chosen an extremely effective instrument, which we hope will live up to all your expectations.

This RTC calibrator is a fast, timesaving, and reliable true industrial temperature calibrator designed for on-site use.

Over the past many years, we have acquired extensive knowledge of industrial temperature calibration. This expertise is reflected in our products, which are all designed for daily use in an industrial environment. Please note that we are very interested in hearing from you, if you have any ideas or suggestions for changes to our products.

This reference manual applies to the following instruments:

- **JOFRA RTC-156 A - Temperature calibrator**
- **JOFRA RTC-156 B - Temperature calibrator with sensor and reference inputs**
- **JOFRA RTC-156 C - Temperature calibrator with reference input**
- **JOFRA RTC-157 A – Temperature calibrator**
- **JOFRA RTC-157 B – Temperature calibrator with sensor and reference inputs**
- **JOFRA RTC-157 C - Temperature calibrator with reference input**
- **JOFRA RTC-158 A – Temperature calibrator**
- **JOFRA RTC-158 B – Temperature calibrator with sensor and reference inputs**
- **JOFRA RTC-158 C - Temperature calibrator with reference input**
- **JOFRA RTC-159 A – Temperature calibrator**
- **JOFRA RTC-159 B – Temperature calibrator with sensor and reference inputs**
- **JOFRA RTC-159 C - Temperature calibrator with reference input**
- **JOFRA RTC-168 A – Temperature calibrator**
- **JOFRA RTC-168 B – Temperature calibrator with sensor and reference inputs**
- **JOFRA RTC-168 C - Temperature calibrator with reference input**
- **JOFRA RTC-187 A – Temperature calibrator**
- **JOFRA RTC-187 B – Temperature calibrator with sensor and reference inputs**
- **JOFRA RTC-187 C - Temperature calibrator with reference input**
- **JOFRA RTC-250 A – Temperature calibrator**

- **JOFRA RTC-250 B – Temperature calibrator with sensor and reference inputs**
- **JOFRA RTC-250 C - Temperature calibrator with reference input**
- **JOFRA RTC-700 A - Temperature calibrator**
- **JOFRA RTC-700 B - Temperature calibrator with sensor and reference inputs**
- **JOFRA RTC-700 C - Temperature calibrator with reference input**

Model A



Model B



Model C



Patented temperature calibrator technology.

- Patented DLC system that insures high uniformity in the calibration zone. All models.
- Patented fast cooling technology. RTC-700 only.
- Patented cooling technology giving the broadest temperature range for ultracooler calibrators. RTC-159 only.

Beside patents the RTC series offers unique Jofra features and functions:

- Automatic Reference sensor protection
- Automatic Intelligent Recalibration Information - IRI
- Selectable Silent or fast mode operation

ISO-9001 certified

AMETEK Denmark A/S was ISO-9001 certified in September 1994 by Bureau Veritas Certification Denmark.

CE/UKCA-labels



Your new temperature calibrator bears the CE label and conforms to the Electromagnetic Compatibility (EMC) Directive 2014/30/EU, the Low Voltage Directive 2014/35/EU and the RoHS Directive 2011/65/EU amended by Directive 2015/863/EU.*



Your new temperature calibrator bears the UKCA label and conforms to The Electromagnetic Compatibility Regulations 2016, The Electrical Equipment (Safety) Regulations 2016, and The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (RoHS).

Technical assistance

Please contact the dealer from whom you acquired the instrument if you require technical assistance.

* RTC-156 A / RTC-156 B / RTC-156 C from serial no. xxxxxx-01236, RTC-157 A / RTC-157 B / RTC-157 C from serial no. xxxxxx-01231, RTC-158 A / RTC-158 B / RTC-158 C from serial no. xxxxxx-01348, RTC-159 A / RTC-159 B / RTC-159 C from serial no. xxxxxx-00689, RTC-168 A / RTC-168 B / RTC-168 C from serial no. xxxxxx-00001, RTC-187 A / RTC-187 B / RTC-187 C from serial no. xxxxxx-00072, RTC-250 A / RTC-250 B / RTC-250 C from serial no. xxxxxx-00262 and RTC-700 A / RTC-700 B / RTC-700 C from serial no. xxxxxx-00832.

1.1 Warranty

This instrument is warranted against defects in workmanship, material and design for two (2) years from date of delivery to the extent that AMETEK will, at its sole option, repair or replace the instrument or any part thereof which is defective, provided, however, that this warranty shall not apply to instruments subjected to tampering or, abuse, or exposed to highly corrosive conditions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED AND AMETEK HEREBY DISCLAIMS ALL OTHER WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY. AMETEK SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, ANY ANTICIPATED OR LOST PROFITS.

This warranty is voidable if the purchaser fails to follow any and all instructions, warnings or cautions in the instrument's User Manual.

If a manufacturing defect is found, AMETEK will replace or repair the instrument or replace any defective part thereof without charge; however, AMETEK's obligation hereunder does not include the cost of transportation, which must be borne by the customer. AMETEK assumes no responsibility for damage in transit, and any claims for such damage should be presented to the carrier by the purchaser.

1.2 Receiving the Reference Temperature Calibrator

When you receive the instrument...

- 1) Unpack and check the calibrator and the accessories carefully.
- 2) Check the parts according to the list shown below.

If any of the parts are missing or damaged, please contact the dealer who sold you the calibrator.

You should receive:

- 1 RTC Calibrator
- 1 USB memory stick containing electronic manuals and software package: JOFRACAL, AMETRIM and CON050
- 2 sets of test leads and test clips (2 black and 2 red – B versions only)
- Thermal protection shield (RTC-700 only)
- 1 tool for insertion tube
- 1 USB cable
- 1 Calibration certificate (International traceable, A-versions)
- 2 Calibration certificates (International traceable, C-versions)
- 3 Calibration certificates (International traceable, B-versions)
- 1 set of rubber cones for insulation plugs (RTC-156/157/158/159/168/187/250 only)
- 1 insulation collar (RTC-156 only)

- RTC-158/168/250 A/B/C only (liquid bath) – OPTIONAL :
 - 1 liquid bath kit consisting of :
 - 1 sensor basket with temperature equalizer tube
 - 2 lids for transportation / calibration (RTC-158/250)
 - 1 lid for transportation (RTC-168)
 - 1 lid for calibration (RTC-168)
 - 3 stirring magnet
 - 1 stirring magnet remover (RTC-158/250)
 - 1 liquid drainage syringe
 - 1 bottom shield
 - 1 silicone oil
 - 1 oil material safety data sheet



When reordering, please specify the part numbers according to the list of accessories, section 11.0.

Optional parts can also be found in the list of accessories




Caution

Do not use the RTC-158/168 insulation plug (black POM) with the RTC-250 instrument due to the risk of melting.


Always use the correct - yellow/brown PEEK - insulation plug with the RTC-250 instrument.

1.3 Dimensioning drawings


RTC-156/157/187 A/B/C

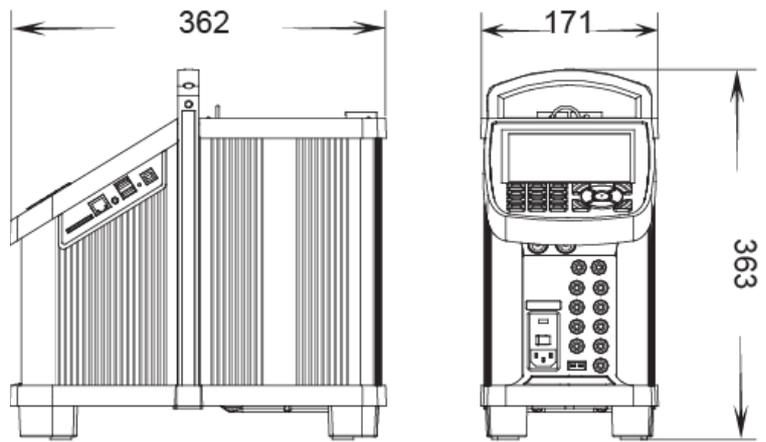


RTC-158/168/250 A/B/C

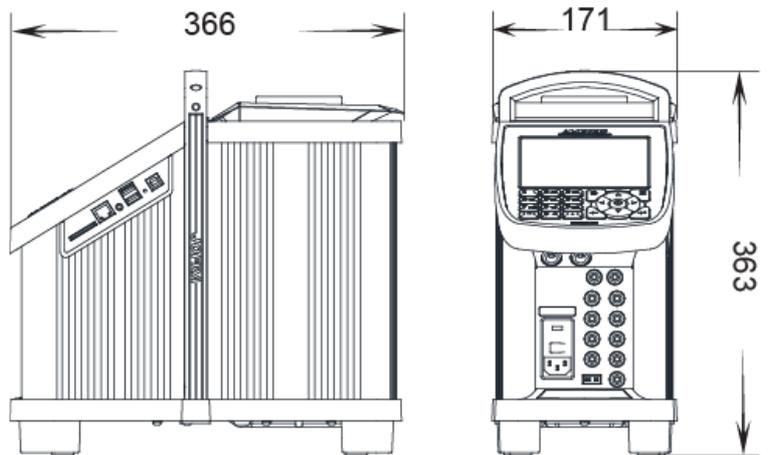

RTC-159 A/B/C

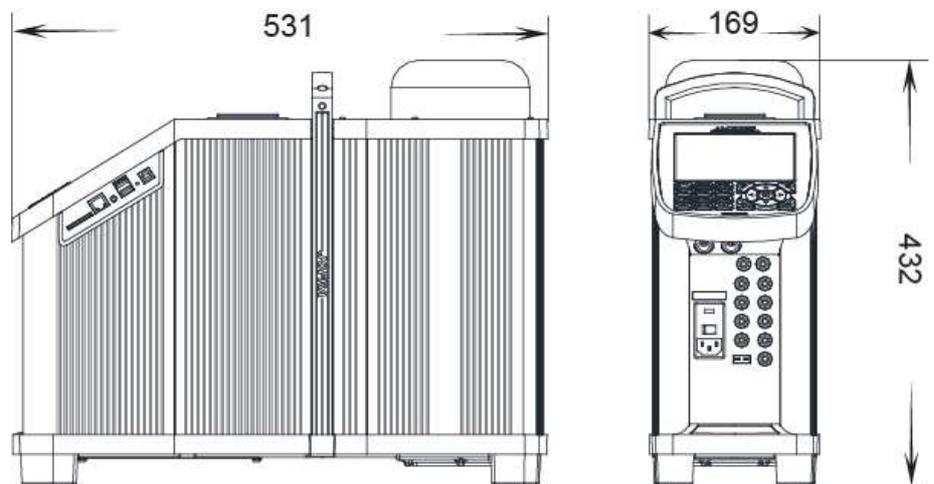

RTC-700 A/B/C

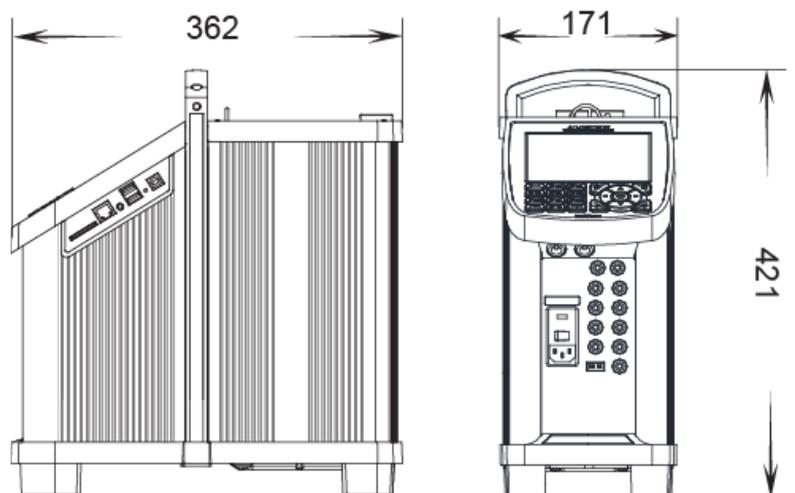


2.0 Safety instructions



Read this manual carefully before using the instrument!

Please follow the instructions and procedures described in this manual. They are designed to allow you to get the most out of your calibrator and avoid any personal injuries and/or damage to the instrument.

The screen menus shown in this manual represent the menus displayed when using a B-version.



Disposal – WEEE Directive

These calibrators contain Electrical and Electronic circuits and must be recycled or disposed of properly (in accordance with the WEEE Directive 2012/19/EU).



Warning

About the use:

- Always supply the calibrator using a power circuit which is separate from essential safety equipment and vital hospital equipment etc., to prevent fatal consequential damages from a potential electrical failure.
- The calibrator **must not** be used for any purposes other than those described in this manual, as it might cause a hazard.
- The calibrator has been designed for **indoor use only** and is not to be used in wet locations.
- The calibrator is **not to be used in hazardous areas**, where vapour or gas leaks, etc. may constitute a danger of explosion.
- The calibrator is **not** designed for operation in altitudes above 2000 meters.
- The calibrator is a CLASS I product and must be connected to a mains outlet with a protective earth connection. Ensure the ground connection of the calibrator is properly connected to the protective earth before switching on the calibrator. Always use a mains power cable with a mains plug that connects to the protective earth.
- To ensure the connection to protective earth any extension cord used **must** also have a protective earth conductor.
- Only use a mains power cord with a current rating as specified by the calibrator and which is approved for the voltage and plug configuration in your area.
- Before switching on the calibrator make sure that it is set to the voltage of the mains electricity supply.
- **Always** position the calibrator to enable easy and quick disconnection of the power source (mains inlet socket).
- The calibrator **must** be kept free within an area of 20 cm on all sides and 1 metre above the calibrator due to fire hazard.
- After transport or storage in humid conditions or if the calibrator has not been heated up to minimum 100°C within the last 10 days, the instrument needs to be operated with a well temperature of at least 140°C for 2 hours before it can be assumed to meet all safety requirements of EN61010-1 (RTC-250/700 only).
- If the calibrator is wet or has been in a wet environment, do not apply power until the moisture has been removed for example by storage at 50°C in a low humidity environment for at least 4 hours.

- **Never** use heat transfer fluids such as silicone, oil, paste, etc. in the dry-block calibrators. These fluids may penetrate the calibrator and cause electrical hazard, damage or create poisonous fumes.
- The calibrator **must** be switched off before any attempt to service the instrument is made. There are no user serviceable parts inside the calibrator.
- When cleaning the well or the insertion tube, **REMEMBER** to wear goggles when using compressed air in the dry-block calibrator and cleaning oil in the liquid bath calibrator.
- Use protection shield when calibrating at high temperatures (RTC-700)
- The RTC-159 contains R-1270 and R-704 under pressure. The calibrator must **under no circumstances** be stored at ambient temperatures above 50°C (122°F) or operated at ambient temperatures above 40°C (104°F). Doing so may cause a hazard.
- Remember to use appropriate protective equipment or get help when carrying the calibrator (for a longer distance) in order to prevent injuries from dropping the calibrator.

About the front panel:

- For B and C versions only, the sockets on the input module must **NEVER** be connected to voltages exceeding 30V with reference to ground.
- Thermostats connected to the switch test input must **not** be connected to any other voltage source during a test.

About insertion tubes, insulation plugs, well and sensor:

- **Never** leave hot insertion tubes which have been removed from the calibrator unsupervised – they may constitute a fire hazard or personal injury.

If you intend to store the calibrator in the optional carrying case after use, you **must** ensure that the instrument has cooled down to a temperature **below 50°C/122°F** before placing it in the carrying case.

- **Never** place a hot insertion tube in the optional carrying case.
- Use only insulation plugs supplied by AMETEK Denmark A/S.

About the fuses:

- The fuse box must not be removed from the power control switch until the mains cable has been disconnected.
- The two main fuses must have the specified current and voltage rating and be of the specified type. The use of makeshift fuses and the short-circuiting of fuse holders are prohibited and may cause a hazard.

About the liquid bath (RTC-158/168/250 A/B/C only):

- Product information on the fluid must be carefully investigated before use.
- When using liquids in the calibrator, ensure proper ventilation or local extraction to handle vapor and other airborne particles, as recommended for the particular liquid in accordance with the MSDS (Material Safety Data Sheet) of the liquid and in accordance with the local environmental regulations.
- When handling the liquid, ensure to immediately wipe up and handle spillages in accordance with the MSDS (Material Safety Data Sheet) of the liquid and in accordance with the local environmental regulations.
- For liquid bath ensure that the sensor is absolutely clean and dry as a few drops of water in the well (liquid baths) might cause a steam explosion.
- **Do not pour** cold fluid into a hot well – it might cause an explosion.
- AMETEK Denmark A/S **does not** take any responsibility, if the well is filled with other fluids than those recommended.

- Liquid baths should **only** be operated by trained personal.
- Heat transfer fluids must **only** be used in calibrators prepared as a liquid bath. If these fluids are heated above specified temperature they will create noxious or toxic fumes. Proper ventilation must be used.
- To avoid hazards from treating fluids in a wrong manner, **always** reduce the "Max. SET-temperature allowed" in the CALIBRATOR SETUP MENU according to the specifications of the fluid to be used.
If using a calibrator outside of the fluids specifications there is a risk of fire hazards, personal injury or chemical release.
By reducing the "Max. SET-temperature allowed", the calibrator cannot be used outside this temperature range.
Be aware of the flash point, the boiling point and other fluid properties applicable to the usage when setting the Max. SET-temperature. Read the MSDS (Material Safety Data Sheet) of the liquid before use. The Max. SET-temperature must never exceed (liquid flash point – 50°C).
- **Always** remove the liquid from the calibrator before transportation.
- **Do not** handle hot fluid.
- If the oil is heated beyond the flash point, it may constitute a fire hazard.
- **Do not pour** water or any other fluids into a bath filled with hot oil, because only a few drops of water might cause a steam explosion, if poured into above 100°C hot oil.
- **Do not** under any circumstances pour water on burning oil. It might cause a dangerous steam explosion.



Caution – Hot surface



This symbol is visible on the grid plate.

- **Do not touch** the grid plate, the well or the insertion tube as the calibrator is heating up – they may be very hot and cause burns.
- **Do not touch** the lid or the spill tray as the calibrator is heating up – they may be very hot and cause burns (RTC-158/168/250 A/B/C only).
- **Do not touch** the tip of the sensor when it is removed from the insertion tube/well – it may be very hot and cause burns.
- **Do not touch** the handle of the calibrator during use – it may be very hot and cause burns.
- **Over 50°C/122°F**
If the calibrator has been heated up to temperatures above 50°C/122°F, you must wait until the instrument reaches a temperature **below 50°C/122°F** before you switch it off.
- **Do not** remove the insert from the calibrator before the insert has cooled down to less than 50°C/122°F.



Caution – Cold surface

Below 0°C/32°F (applies only to the RTC-156/157/158/159/168/187 A/B/C models)

- **Do not touch** the well or insertion tube when these are below 0°C/32°F - they might create frostbite.
- If the calibrator has reached a temperature below 0°C/32°F, ice crystals may form on the insertion tube and on the well. This, in turn, may cause the material surfaces to oxidize.

To prevent this from happening, the insertion tube and the well must be dried. This is done by heating up the calibrator to min. 100°C/212°F until all water left has evaporated.

Remove the insulation plug while heating up.

It is very important that humidity in the well and insertion tube is removed to prevent corrosion and frost expansion damages.



Caution...

About the use:

- **Do not** use the instrument if the internal fan is out of order.
- Before cleaning the calibrator, you **must** switch it off, allow it to cool down and remove all cables.
- Always place power cable and cables to attached accessories, such as sensors, in a safe way to reduce the risk of tripping.
- When transporting (carrying) the calibrator, be extra careful not to drop it on other materials, equipment, and body parts.
- Ensure that the allowed temperature range of the external sensors is not exceeded by the calibrator's temperature range. See section 5.8.1 to setup the calibrator's allowed temperature range.
- Acoustic noise emitted from the calibrator may contribute to the existing noise environment. Be aware of the total noise exposure and act accordingly to maintain a safe, healthy, and pleasant working environment.

About the liquid bath (RTC-158/168/250 A/B/C only):

- Before use, ensure that all external equipment and accessories in contact with the liquid is suited to this exposure.
- Be careful **not to overfill** the well with liquid.
- Avoid getting silicone oil on the clothes. It is impossible to wash off.
- The silicone oil level rises several centimetres when the temperature is rising. Please read instructions in section 3.4.2 about oil level. To stop overflow switch off the main power or set a low temperature and the oil level will decrease when cooled down.
- In case of liquid spillages into holes, slots or crevices in the calibrator, attempt to wipe up the liquid as soon as possible. If the liquid is electrically conductive or corrosive, immediately power off the calibrator and contact the dealer to send in the calibrator for service.
- Carefully wipe off all silicone oil from the sensor under test to avoid spreading of the silicone oil.
- Be careful to select the right oil for the right task. Using other than the recommended oils might cause damage to the calibrator or degrade the performance.
- Remove excess hot fluid with the outmost care, as it might be very hot.
- **Do not** attempt to remove hot fluid with the liquid drainage tube, as it might melt.

About the well, insertion tube and sensor:

- The well and the insertion tube **must** be clean and dry before use.
- **Do not** pour any form of liquids into the well. It might damage the well or cause a hazard.
- **Do not** use any alkali, acid or ionic fluids in the aluminium well as it might be damaged.

- Scratches and other damage to the insertion tubes should be avoided by storing the insertion tubes carefully when not in use.
- The insertion tube must **never** be forced into the well. The well could be damaged as a result, and the insertion tube may get stuck.
- **Before** using new insertion tubes for the calibration, the insertion tubes **must** be heated up to maximum temperature – 250°C (482°F) / 700°C (1292°F) - for a period of minimum 30 minutes (RTC-250/700 A/B/C only).
- The insertion tube must **always** be removed from the calibrator after use. The humidity in the air may cause corrosion oxidation on the insertion tube inside the instrument. There is a risk that the insertion tube may get stuck if this is allowed to happen.
- If the calibrator is to be transported, the insertion tube **must** be removed from the well to avoid damage to the instrument.
- The tip of the sensor should rest at the bottom of the sensor basket for optimum results (liquid baths only).
- Be careful **not to** submerge the handle or wire inlet of the sensor-under-test in the fluid, as this might damage the sensor (liquid baths only).



Note...

The product liability **only** applies if the instrument is subject to a manufacturing defect. This liability becomes void if the user fails to follow the instructions set out in this manual or uses unauthorized spare parts.

3.0 Setting up the calibrator for use

3.1 Preparing the dry-block calibrator



Warning

- The calibrator **must not** be used for any purposes other than those described in this manual, as it might cause a hazard.
- The calibrator has been designed for **indoor use only** and is not to be used in wet locations.
- The calibrator is **not to be used in hazardous areas**, where vapour or gas leaks, etc. may constitute a danger of explosion.
- The calibrator is **not** designed for operation in altitudes above 2000 meters.
- The calibrator is a CLASS I product and must be connected to a mains outlet with a protective earth connection. Ensure the ground connection of the calibrator is properly connected to the protective earth before switching on the calibrator. Always use a mains power cable with a mains plug that connects to the protective earth.
- To ensure the connection to protective earth any extension cord used **must** also have a protective earth conductor.
- Only use a mains power cord with a current rating as specified by the calibrator and which is approved for the voltage and plug configuration in your area.
- Before switching on the calibrator make sure that it is set to the voltage of the mains electricity supply.
- **Always** position the calibrator to enable easy and quick disconnection of the power source (mains inlet socket).

The calibrator **must** be kept free within an area of 20 cm on all sides and 1 metre above the calibrator due to fire hazard.
- After transport or storage in humid conditions or if the calibrator has not been heated up to minimum 100°C within the last 10 days, the instrument needs to be operated with a well temperature of at least 140°C for 2 hours before it can be assumed to meet all safety requirements of EN61010-1 (RTC-250/700 only).
- If the calibrator is wet or has been in a wet environment, do not apply power until the moisture has been removed for example by storage at 50°C in a low humidity environment for at least 4 hours.
- The RTC-159 contains R-1270 and R-704 under pressure. The calibrator must **under no circumstances** be stored at ambient temperatures above 50°C (122°F) or operated at ambient temperatures above 40°C (104°F). Doing so may cause a hazard.



Note...

The instrument must **not** be exposed to draughts.

3.1.1 When setting up the dry-block calibrator, you must...

- ① Place the calibrator on an even horizontal surface where you intend to use it.



Caution...

Do not use the instrument if the internal fan is out of order.


- ② Ensure a free supply of air to the internal fan located at the bottom of the instrument (pos. 2). The area around the calibrator should be free of draught, dirt, flammable substances, etc.
- ③ Check that the fuse size corresponds to the applied voltage on (pos. 3). The fuse is contained in the power control switch (on/off switch). To check; do as follows (see fig. 1):



Warning

The two main fuses must have the specified current and voltage rating and be of the specified type. The use of makeshift fuses and the short-circuiting of fuse holders are prohibited and may cause a hazard.

Fig. 1
Changing fuses

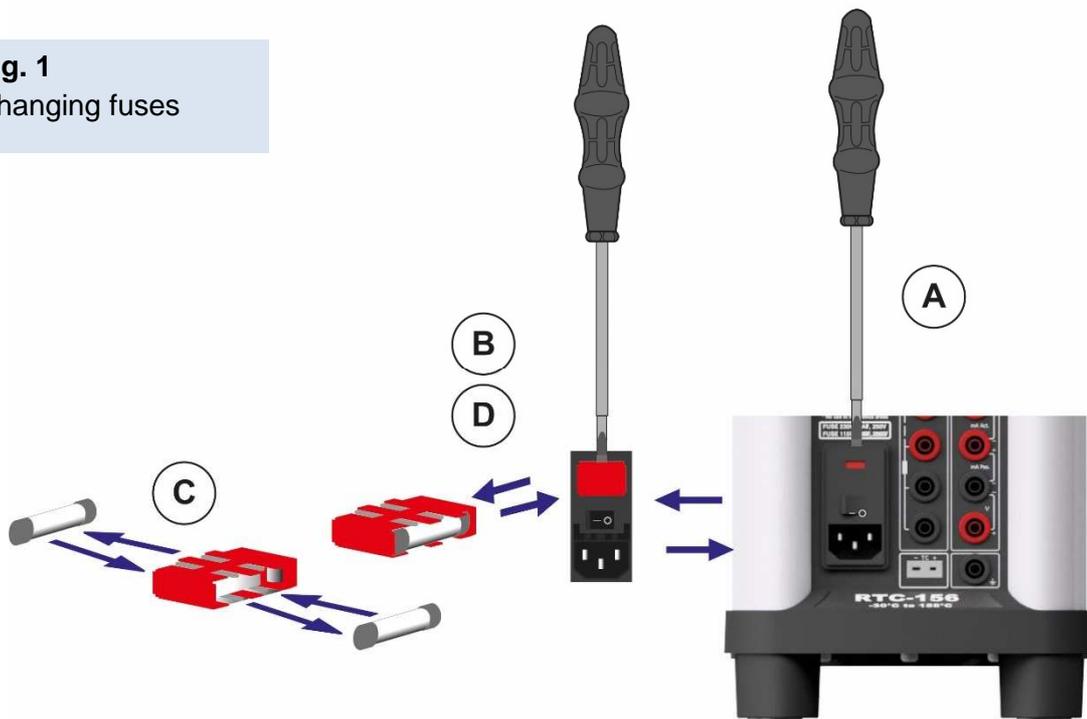

- A. Open the fuse box lid using a screwdriver.
 - B. Take out the fuse box.
 - C. Remove both fuses replacing them with two new fuses. These must be identical and should correspond to the line voltage. See section 11.0.
 - B. Slide the fuse box back into place.
- ④ Check that the earth connection for the instrument is present and attach the cable.
 - ⑤ Select an insertion tube with the correct bore diameter. See section 3.2 for information on how to select insertion tubes.

The calibrator is now ready for use.

3.2 Choosing an insertion tube



Caution...

To get the best results out of your calibrator, the insertion tube dimensions, tolerance and material are critical. We highly advise using the JOFRA insertion tubes, as they guarantee trouble free operation. Use of other insertion tubes may reduce performance of the calibrator and cause the insertion tube to get stuck.



Caution...

Before using new insertion tubes for calibration in the RTC-250/700 instruments, the insertion tubes **must** be heated up to maximum temperature 250°C (482°F) / 700°C (1292°F) - for a period of minimum 30 minutes.

Insertion tubes are selected on the basis of the diameter of the sensor to be calibrated.

Use the table for insertion tubes in section 3.2.1 to find the correct part number.

Alternatively, you may order an undrilled insertion tube and drill the required hole yourself. The finished dimensions should be as follows:

- Sensor diameter $\text{ØD}+0.2\text{mm } +0.05/-0$
- DLC hole : $\text{Ø}3.1\text{mm } +0.05/-0$ (RTC-156/157/158/159/168/187/250 A/B/C)
 $\text{Ø}4.2\text{mm } +0.05/-0$ (RTC-700 A/B/C)
- Reference sensor holes : $\text{Ø}4.2\text{mm } +0.05/-0$ and $\text{Ø}6.55\text{mm } +0.05/-0$



Note...

When drilling the holes it is important that the distance of the material between the drillings is at least 2mm. If the distance is less than 2 mm the calibration result could be compromised.

For RTC-156/157/158/159/168/187 A/B/C only:

In order to get optimum results and prevent ice from building up in the well of the cooling calibrators, a proper sized insulation plug must be placed over the well during the calibration process.

The holes in the plug must have a tight fit and unused holes must be covered using e.g. silicone plugs (spare part no. 126280).

3.2.1 Standard insertion tubes



Caution...

To get the best results out of your calibrator, the insertion tube dimensions, tolerance and material are critical. We highly advise using the JOFRA insertion tubes, as they guarantee trouble free operation. Use of other insertion tubes may reduce performance of the calibrator and cause the insertion tube to get stuck.

PARTS NO. FOR UNDRILLED INSERTION TUBES						
Sensor Size	RTC-156/157/187 A/B/C (Aluminium tubes)	RTC-159 A/B/C (Aluminium tubes)	RTC-158 A/B/C (Aluminium tubes)	RTC-168 A/B/C (Aluminium tubes)	RTC-250 A/B/C (Aluminium tubes)	RTC-700 A/B/C (Alu. Bronze tubes)
Undrilled	127299	128453	124899	130489	127758	127197
Undrilled with DLC hole	127300	128454	127829	130488	127834	127198
Undrilled with DLC and ref. holes	127301	128455	127831	130486	127835	127199

PARTS NO. FOR STANDARD INSERTION TUBES – MULTI-HOLE - METRIC			
Insert type	RTC-156/157/187 A/B/C (Aluminium tubes)	RTC-159 A/B/C (Aluminium tubes)	RTC-700 A/B/C (Alu. Bronze tubes)
Type M01	127329	128456	127200
Type M02	127330	128457	127201
Type M03	127331	128458	127202
Type M04	127332	128459	127203
Type M07	127241	128462	127244
Type M08	127242	128463	127245
Type M09	127243	128464	127246
Set of 4 pcs. Inserts, 3mm to 13mm.	127326	128466	127252

PARTS NO. FOR STANDARD INSERTION TUBES – MULTI-HOLE - IMPERIAL			
Insert type	RTC-156/157/187 A/B/C (Aluminium tubes)	RTC-159 A/B/C (Aluminium tubes)	RTC-700 A/B/C (Alu. Bronze tubes)
Type M05	127327	128460	127204
Type M06	127328	128461	127205
Type M10	127247	128465	127249
Set of 3 pcs. Inserts, 1/8" to 1/2" (7/16")*	127311	128467*	127254

PARTS NO. FOR STANDARD INSERTION TUBES – MULTI-HOLE - METRIC			
Insert type	RTC-158 A/B/C (Aluminium tubes)	RTC-168 A/B/C (Aluminium tubes)	RTC-250 A/B/C (Aluminium tubes)
Type M01	124897	130490	127759

PARTS NO. FOR STANDARD INSERTION TUBES – MULTI-HOLE - IMPERIAL			
Insert type	RTC-158 A/B/C (Aluminium tubes)	RTC-168 A/B/C (Aluminium tubes)	RTC-250 A/B/C (Aluminium tubes)
Type M02	124898	130491	127760

PARTS NO. FOR STANDARD INSERTION TUBES WITH HOLES FOR 4 MM AND 1/4" REF. SENSORS AND DLC SENSOR - IMPERIAL

Sensor size	RTC-156/157/187 A/B/C (Aluminium tubes)	RTC-159 A/B/C (Aluminium tubes)	RTC-700 A/B/C (Alu. Bronze tubes)
1/8"	127302	128468	127164
3/16"	127303	128469	127165
1/4"	127304	128470	127166
5/16"	127305	128471	127167
3/8"	127306	128472	127168
7/16"	127307	128473	127169
1/2"	127308	128474	127170
9/16"	127309	128475	127171
5/8"	127310	128476	127172
Set of 9 pcs. Imperial inserts	127335	128491	127173





PARTS NO. FOR STANDARD INSERTION TUBES WITH HOLES FOR 4 MM AND 1/4" REF. SENSORS AND DLC SENSOR - METRIC

Sensor size	RTC-156/157/187 A/B/C (Aluminium tubes)	RTC-159 A/B/C (Aluminium tubes)	RTC-700 A/B/C (Alu. Bronze tubes)
3 mm	127312	128477	127148
4 mm	127313	128478	127149
5 mm	127314	128479	127150
6 mm	127315	128480	127151
7 mm	127316	128481	127152
8 mm	127317	128482	127153
9 mm	127318	128483	127154
10 mm	127319	128484	127155
11 mm	127320	128485	127156
12 mm	127321	128486	127157
13 mm	127322	128487	127158
14 mm	127323	128488	127159
15 mm	127324	128489	127160
16 mm	127325	128490	127161
Set of 14 pcs. Metric inserts	127336	128492	127162

NOTE: All insertion tubes (metric and imperial) for RTC-156/157/158/159/168/187/250 are supplied with a matching insulation plug.

The insulation plug for the RTC-158 can be used in both the RTC-158 and the RTC-168 instruments.

The insulation plug for the RTC-168 can **ONLY** be used in the RTC-168 instrument.

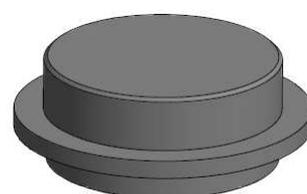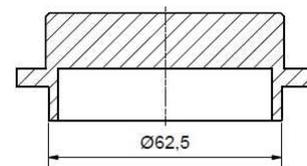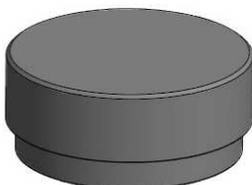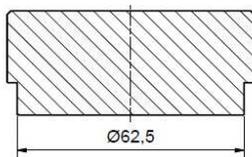

3.3 Inserting the sensors

The sensor setup comes in different variations depending on the instrument model.



RTC-156

RTC-157

RTC-158

RTC-159



RTC-168

RTC-250

RTC-700

Before inserting the sensors and switching on the calibrator, please note the following important warning:



Warning

- **Never** use heat transfer fluids such as silicone, oil, paste, etc. in the dry-block calibrators. These fluids may penetrate the calibrator and cause electrical hazard, damage or create poisonous fumes.
- **Never** try to modify the insulation plugs to make them fit the sensor. Use only insulation plugs supplied by AMETEK Denmark A/S.

Insert the sensors as shown in fig. 2.



Fig. 2
Inserting sensors and insertion tube

The DLC sensor must be placed in the hole that is intended for the DLC sensor. Standard insertion tubes from AMETEK Denmark are marked with a dot on the rim to indicate the placement of the DLC hole, and the insulation plugs are marked with the letter D (RTC-156/157/158/159/168/187/250 A/B/C only). See fig. 3.

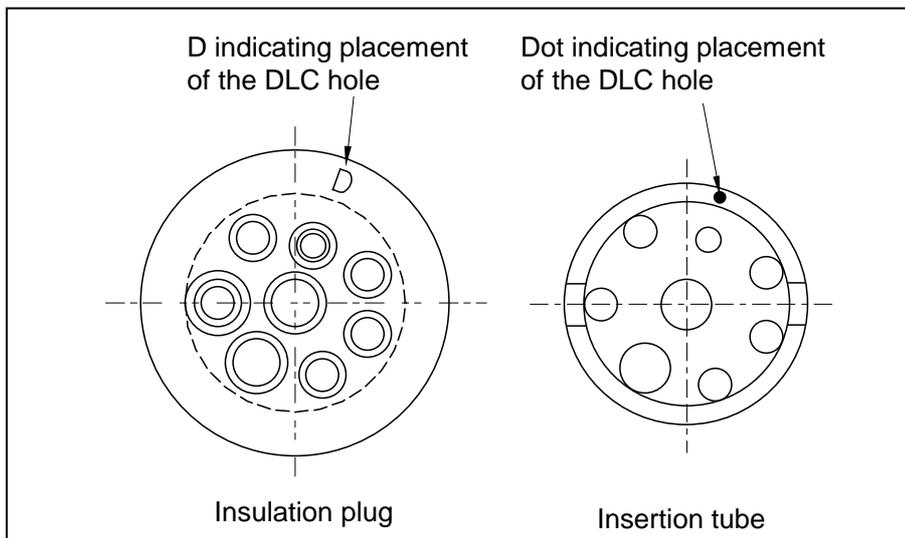


Fig. 3
Placement of DLC hole in insertion tube.



Caution...

- The well and the insertion tube **must** be clean before use.
- Scratches and other damage to the insertion tubes should be avoided by storing the insertion tubes carefully when not in use.
- The insertion tube must **never** be forced into the well. The well could be damaged as a result, and the insertion tube may get stuck.



Caution – Hot surface

- **Do not touch** the grid plate, the well or the insertion tube while the calibrator is heating up – they may be very hot and cause burns.
- **Do not touch** the tip of the sensor when it is removed from the insertion tube/well – it may be very hot and cause burns.
- **Do not touch** the handle of the calibrator during use – it may be very hot and cause burns.
- **Do not remove** the insertion tube from the calibrator before the insertion tube has cooled down to less than 50°C/122°F.



Caution – Cold surface

Below 0°C/32°F (applies only to the RTC-156/157/158/159/168/187 A/B/C models)

- If the calibrator has reached a temperature below 0°C/32°F, ice crystals may form on the insertion tube and on the well. This, in turn, may cause the material surfaces to oxidize.
To prevent this from happening, the insertion tube and the well must be dried. This is done by heating up the calibrator to min. 100°C/212°F until all water left has evaporated.
Remove the insulation plug while heating up.
It is very important that humidity in the well and insertion tube is removed to prevent corrosion and frost expansion damages.
- **Do not touch** the well or insertion tube when these are below 0°C/32°F – they might create frostbite.

3.4 Preparing the liquid bath calibrator (RTC-158/168/250 A/B/C only)



Warning

- The calibrator **must not** be used for any purposes other than those described in this manual, as it might cause a hazard.
- The calibrator has been designed for **indoor use only** and is not to be used in wet locations.
- The calibrator is **not to be used in hazardous areas**, where vapour or gas leaks, etc. may constitute a danger of explosion.
- The calibrator is **not** designed for operation in altitudes above 2000 meters.
- The calibrator is a CLASS I product and must be connected to a mains outlet with a protective earth connection. Ensure the ground connection of the calibrator is properly connected to the protective earth before switching on the calibrator. Always use a mains power cable with a mains plug that connects to the protective earth.
- To ensure the connection to protective earth any extension cord used **must** also have a protective earth conductor.
- Only use a mains power cord with a current rating as specified by the calibrator and which is approved for the voltage and plug configuration in your area.
- Before switching on the calibrator make sure that it is set to the voltage of the mains electricity supply.
- **Always** position the calibrator to enable easy and quick disconnection of the power source (mains inlet socket).
- Liquid baths should **only** be operated by trained personal.

- AMETEK Denmark A/S **does not** take any responsibility, if the well is filled with other fluids than those recommended.
- Heat transfer fluids must **only** be used in calibrators with a liquid bath. If these fluids are heated above specified temperature they will create noxious or toxic fumes. Proper ventilation must be used.
- Product information on the fluid must be carefully investigated before use.
- The calibrator **must** be kept free within an area of 20 cm on all sides and 1 metre above the calibrator due to fire hazard.
- After transport or storage in humid conditions or if the calibrator has not been heated up to minimum 100°C within the last 10 days, the instrument needs to be operated with a well temperature of at least 140°C for 1 hour before it can be assumed to meet all safety requirements of EN61010-1 (RTC-250/700 only).
- If the calibrator is wet or has been in a wet environment, do not apply power until the moisture has been removed for example by storage at 50°C in a low humidity environment for at least 4 hours.



Note...

The instrument must **not** be exposed to draughts.

3.4.1 When setting up the liquid bath calibrator, you must...

- ① Place the calibrator on an even horizontal surface where you intend to use it. Place it in a way that will minimize the risk of tilting.



Caution...

- To reduce the risk of overpressure in the well, ensure that the sealing lid on the spill tray is removed before any use of the calibrator.
- **Do not** use the instrument if the internal fan is out of order.
- The well **must** be clean before use.



- ② Ensure a free supply of air to the internal fan located at the bottom of the instrument (pos. 2). The area around the calibrator should be free of draught, dirt, flammable substances, etc.
- ③ Check that the fuse size corresponds to the applied voltage on (pos. 3). The fuse is contained in the power control switch (230V/115V) (on/off switch). To check; do as instructed in Section 3.1.1, Fig. 1.
- ④ Check that the earth connection for the instrument is present and attach the cable.
- ⑤ Place the parts from the liquid bath kit in the well in the following order (see Fig 4a+b):
 - **Bottom shield** – It is very important that the bottom shield is placed in the well before any calibration is attempted, as the bottom shield protects the well from being damaged during calibration. For RTC-168 the bottom shield is an integrated part of the sensor basket.

- **Stirring magnet** – It is very important that the stirring magnet is in place and spinning before any calibration is attempted. The stirring magnet ensures minimum temperature gradient in the fluid. The magnets teflon cover will over time be worn down, leaving the magnet flat on one side. This will reduce the spinning ability. A magnet with a flat side must therefore be replaced.
- **Sensor basket** – It is very important to place the sensor basket and temperature equalizer tube in the well, as it ensures that the sensors encounter maximum temperature stability and uniformity while ensuring that the stirring magnet is not blocked.
- **Silicone oil** – Fill the well with oil according to the tables of recommended oil volume. The recommended volumes must be adjusted to the actual job. For oil tables and further oil information – see section 3.4.2.

The sensor basket is marked with an optimum fluid level mark (100%). When filling the well with fluid and placing the sensors, this mark must **never** be exceeded.

Fig. 4a

Inserting the liquid bath kit
RTC-168

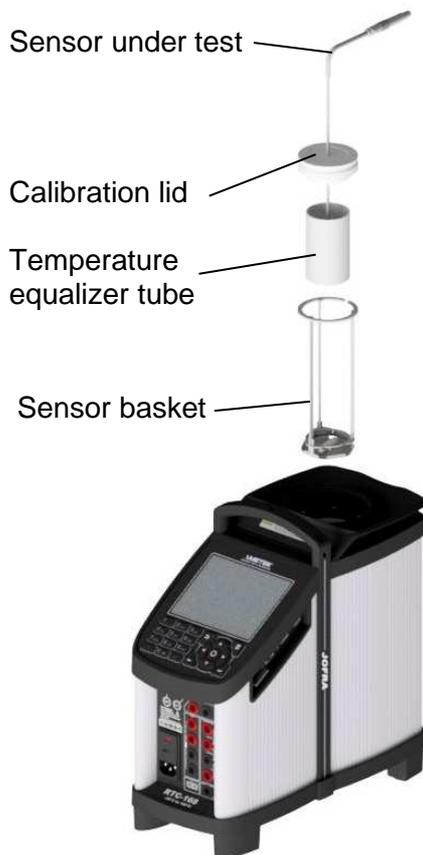


Fig. 4b

Inserting the liquid bath kit
RTC-158/250


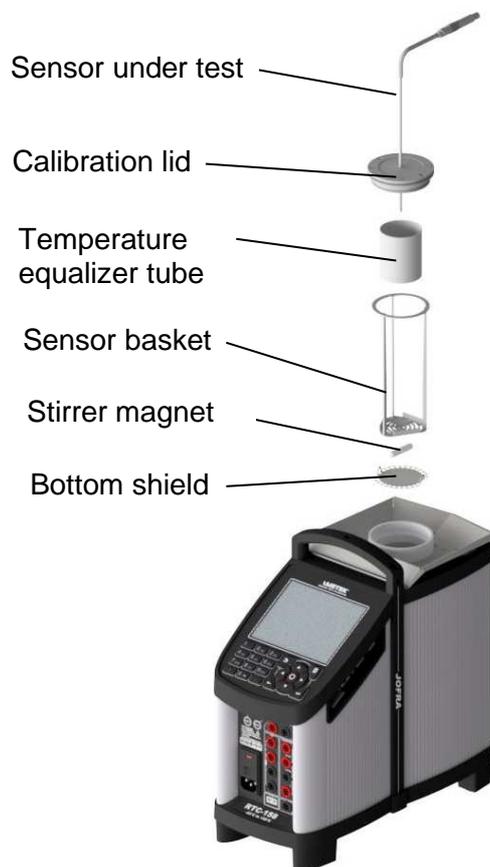


Fig. 4c

Sensor basket, stirrer magnet and bottom shield
RTC-168

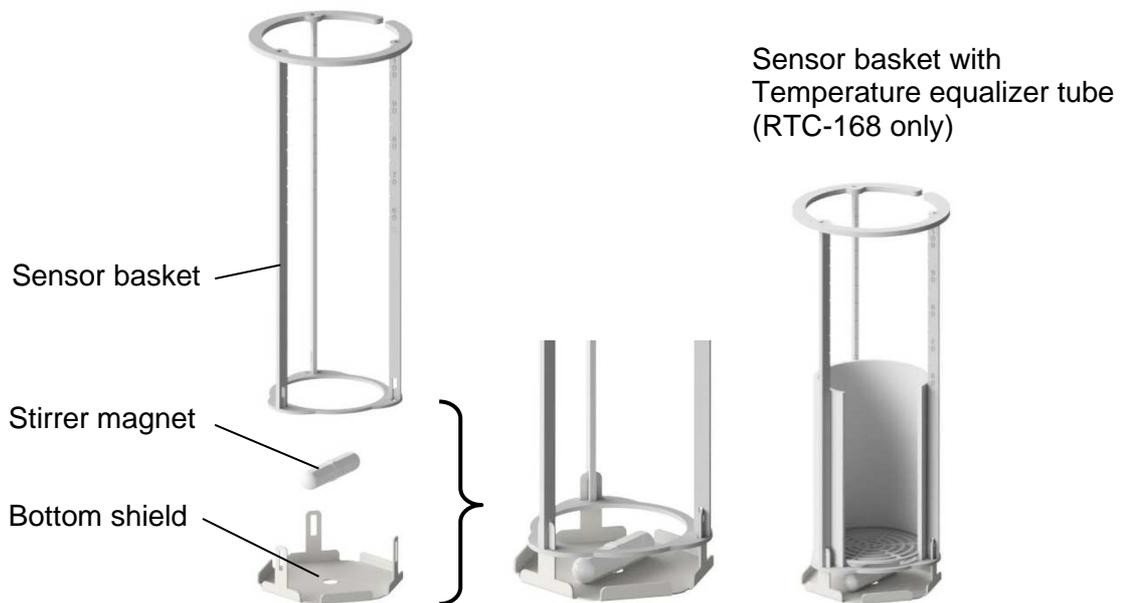

Warning

- When using liquids in the calibrator, ensure proper ventilation or local extraction to handle vapor and other airborne particles, as recommended for the particular liquid in accordance with the MSDS (Material Safety Data Sheet) of the liquid and the local environmental regulations.
- **Do not pour** cold fluid into a hot well – it might cause an explosion.
- **Do not pour** water or any other fluids into a bath filled with hot oil, because only a few drops of water might cause a steam explosion, if poured into e.g. above 100°C hot oil.
- **Always** remove the liquid from the calibrator before transportation.



Caution...

- In case of liquid spillages into holes, slots or crevices in the calibrator, attempt to wipe up the liquid as soon as possible. If the liquid is electrically conductive or corrosive, immediately power off the calibrator and send in the calibrator for service.
- Do not use any alkali, acid or ionic fluids in the aluminium well as it might be damaged.
- Be careful **not to overfill** the well with liquid.
- The silicone oil level rises several centimetres when the temperature is rising. Please read instructions in section 3.4.2 about oil level. To stop overflow switch off the mains power or set a low temperature and the oil level will decrease when cooled down.
- Remove excess hot fluid with the outmost care, as it might be very hot.
- **Do not** attempt to remove hot fluid with the liquid drainage syringe, as it might melt.

⑥ Start the stirring magnet by following the procedure in section 5.9

⑦ Place the calibration lid onto the well. See section 3.4.3 for drilling information.



Warning

To avoid hazards from treating fluids in a wrong manner, **always** reduce the "Max. SET-temperature allowed" in the CALIBRATOR SETUP MENU according to the specifications of the fluid to be used.

If using a calibrator outside of the fluids specifications there is a risk of fire hazards, personal injury or chemical release.

By reducing the "Max. SET-temperature allowed", the calibrator cannot be used outside this temperature range.

Be aware of the flash point, the boiling point and other fluid properties applicable to the usage when setting the Max. SET-temperature. Read the MSDS (Material Safety Data Sheet) of the liquid before use. The Max. SET-temperature must never exceed (liquid flash point – 50°C).

- ⑧ Select a SET-temperature according to the tables of recommended oil volume by following the procedure in section 5.3.



Warning

Ensure that the sensor is absolutely clean and dry, as a few drops of water might cause a steam explosion.

- ⑨ Place the sensor to be calibrated vertically into the well. It is recommended to use the optional support rod set for a correct position during calibration. See fig. 5.



Fig. 5

Inserting sensor using support rod set



Caution...

- The tip of the sensor should rest at the bottom of the sensor basket for optimum results.
- Be careful **not to** submerge the handle or wire inlet of the sensor-under-test in the fluid, as this might damage the sensor.

⑩ The calibrator is now ready for use.

3.4.2 Selection of fluids



Caution...

Be careful to select the right fluid for the right task. Using other than the recommended fluids might cause damage to the calibrator or degrade the performance.

AMETEK Denmark A/S recommends the following fluids:

Part no.*	Name	Recommended temperature range
130509	XIAMETER™ PMX-200 5cST	-30°C to 130°C
125033	XIAMETER™ PMX-200 10cST	-30°C to 163°C
124885	XIAMETER™ PMX-200 50cST	28°C to 250°C

*0.75 liters

Technical specifications for the liquid baths has been produced using the fluids mentioned above. It is recommended to use XIAMETER™ PMX-200 5cST below -20°C for best performance.

For proper handling, use and disposal of fluid – read fluid product information. When reading this information pay special attention to details regarding fume point, flash point, boiling point and point of decomposition.

When the fluid temperature approaches the fume point, it is necessary to use proper ventilation. An exhaust hood is recommended. When ventilation is applied take care not to expose the calibrator to alternating draft, as it might influent the temperature stability. If possible make the ventilation flow as constant as possible.

At low temperature the viscosity of the fluid can constitute a problem. When the viscosity becomes too low, the stirring magnet can't provide proper circulation in the well to maintain temperature uniformity. Therefore it is essential to investigate the physical property of the fluid before one is selected.

Tables of maximum recommended oil level @23°C well temperature

RTC-250 A/B/C

For recommended 50 cSt oil

0°C - 50°C	100%
50°C - 100°C	95%
100°C - 150°C	90%
150°C - 200°C	85%
200°C - 250°C	80%

RTC-158/168 A/B/C

For recommended 5/10 cSt oil

-30°C - 25°C	100%
25°C - 60°C	95%
60°C - 110°C	90%
110°C - 163°C	85%

For the best result, the oil should be in good condition and free of foreign objects. If water is accumulated in the oil due to melted ice crystals – the oil must be dried out, by heating it up.



Warning

- **Do not** handle hot fluid.
- If the fluid is heated beyond the flash point, it may constitute a fire hazard.

If the fluid has caught fire, switch off the main power to prevent further heating of the fluid. Flames are best extinguished by covering the well with a non-flammable lid.



Warning

Do not under any circumstances pour water on burning oil. It might cause a dangerous steam explosion.

3.4.3 Handling of lids

It is strongly recommended to leave the lid on during calibration. Calibration without the lid may affect the temperature stability and uniformity.

To be able to use the lid for calibration, holes must be drilled into it, in order to fit your calibration needs. If you use many different sizes of sensors more lids can be purchased at your JOFRA supplier.

It is advisable to drill the holes at the same size as the sensors plus 0,5mm and distribute the holes evenly over the lid.



Warning

- To reduce the risk of overpressure in the well, ensure that the sealing lid on the spill tray is removed before any use of the calibrator.
- When removing the sealing lid on the spill tray, be aware of overpressure in the well which can cause debris to be scattered. To reduce the risk of overpressure, only remove the lid when the well and liquid is tempered. Always use proper protective tools to avoid unwanted liquid contact to eyes, skin, clothes, or other equipment.
- Only apply the sealing lid onto the well when the liquid is tempered, to reduce the risk of pressure differences due to temperature expansion/compression.

3.4.4 Inserting the sensors

Be sure that the sensors can be calibrated in fluid. E.g. certain ceramic sensors might be destroyed.



Caution...

- Ensure that the allowed temperature range of the sensors is not exceeded by the calibrator's temperature range. See section 5.8.1 to setup the calibrator's allowed temperature range.
- Ensure that all external equipment and accessories in contact with the liquid is suited to this exposure.
- In case of liquid spillages into holes, slots or crevices in the calibrator, attempt to wipe up the liquid as soon as possible. If the liquid is electrically conductive or corrosive, immediately power off the calibrator and send in the calibrator for service.
- The well and the insertion tube **must** be clean before use.
- Carefully wipe off all silicone oil from the sensor-under-test to avoid spreading of the silicone oil.



Caution – Hot surface

- **Do not touch** the lid or the spill tray when the calibrator is heating up – they may be very hot and cause burns.
- **Do not touch** the tip of the sensor when it is removed from the well – it may be very hot and cause burns.
- **Do not touch** the handle of the calibrator during use – it may be very hot and cause burns.
- **Do not** remove the insertion tube from the calibrator before the insertion tube has cooled down to less than 50°C/122°F.

3.4.4 Liquid container

For easy switch between dry and liquid calibration, is it recommended to use the optional liquid container. When using the liquid container, always use an external reference for temperature measurement, as specified accuracy is not valid when using the liquid container.

3.5 External reference sensor

The following JOFRA STS Reference sensors can be used with the varies models:

RTC-156:	STS-200 A 915, STS-200 B 915
RTC-157:	STS-200 A 915, STS-200 B 915
RTC-158:	STS-200 A 916, STS-200 B 916
RTC-159:	STS-200 A 917, STS-200 B 917
RTC-168:	STS-200 A 919, STS-200 B 919
RTC-187:	STS-200 A 918, STS-200 B 918
RTC-250:	STS-200 A 925, STS-200 B 925
RTC-700:	STS-200 A 970, STS-200 B 970

Use the configuration software CON050 supplied with RTC to program and to update calibration information in intelligent sensors.

For instructions read the software manual for CON050 installed on the USB key.

4.0 Calibrator Interface

4.1 Keypad-Functions



Menu key

Shows the vertical menu options listed. Can be displayed all through the process.

Arrow Keys

Serve different functions depending on the mode of operation.

Navigation mode: Use the four keys to move the cursor in the desired direction.

Edit mode: The Up and Down Arrow keys scroll through the lists of options. If entering a number, the Left and Right Arrow keys move the cursor one character in the desired direction.

Enter key

Accepts selected options or entered values. When a value is entered with the ENTER KEY the cursor selects the next value field in the list.

Action key

Opens and closes edit fields or a menu button. The action key also accepts the selected option or entered value.

Back key

Press to cancel a selection/edit or return to previous menu.

Numeric keys

Use to select menu options displayed in the horizontal and vertical menus and to type in values.

Delete key

Press to delete previous character.

4.2 Display - Functions

4.2.1 Main screen display



The Main screen display is divided into five separate areas:

1. Heading

Informs you of the current menu selected.

2. Setup field

Provides the bulk of setup data in the menu. This data can be changed by moving the cursor to the various fields.

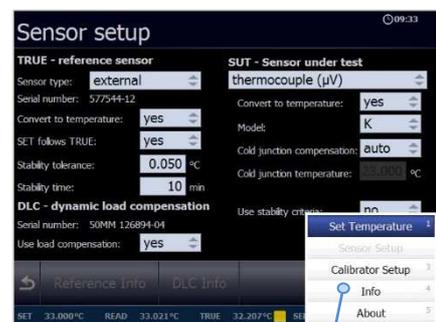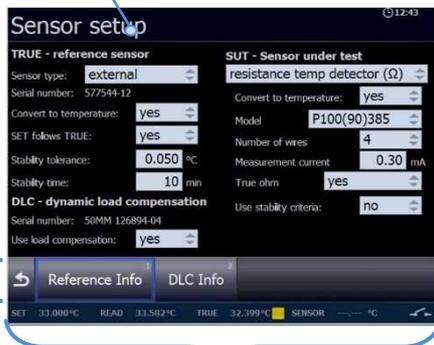

3. Horizontal menu

Provides you with the relevant menu options that can be selected at the present point. Each option can be activated either by selecting and activating the option – or simply by pressing the numeric key that corresponds to the option number.

4. Readings

This reading line is always visible and informs you of the current readings.

5. Vertical menu

This menu can be activated throughout the entire calibration. The menu can be switched on and off in all stages of operating the calibrator.

4.2.2 Main screen display information

The main screen gives an overview of the calibrator status and reads out the most relevant readings. In the Sensor Setup menu (see section 5.7) these readings can be changed.

WARNING/ERROR symbol
The yellow icon indicates a warning. The red icon indicates an error. When the error symbol is displayed the calibration results cannot be saved. See section 6.1 for details concerning warnings and errors.

Stirrer activated/speed indicator
The icon indicates that the stirrer is activated and the speed setting (0 – 100).

Real Time Clock display.

Stability indicator
Displays the status of the True temperature stability. Yellow symbol indicates that stability is not yet obtained. A timer counts down. A green symbol indicates that the stability criteria are obtained and the time of stability is displayed. When time of stability is more than 99 min., the time is no longer displayed in the symbol, but only in the info screen (see section 5.10).

Reference Sensor Info
The serial number of the external reference sensor is read from the intelligent reference sensor and displayed in this field.

Set follows True activated
The icon indicates, that the Set follows True function is active and will control the Temperature of the external reference sensor to the SET temperature.

True temperature reading
Can be either the internal reference sensor or an external reference sensor.

Sensor Under Test Stability indicator
If Sensor under Test stability criteria is selected, a symbol will indicate the stability of the sensor under test as well as the True sensor. When both Sensor Under Test and True sensor are stable, the calibrator is considered being stable.

Sensor Under Test Type
Shows the type of sensor under test.

SENSOR
Sensor Under Test value.

DLC sensor reading
Displays the measured temperature load of the insert –if the load compensation is active, the DLC system will control this value towards 0.00°C.

DLC compensation activated
The icon indicates, that the Dynamic Load Compensation function is active.

SET temperature
Shows the numeric value of the current SET target temperature selected.

READ value
The internal reference is always displayed as READ value.

SET reading always visible.

READ value always visible.

TRUE value always visible.

SENSOR value always visible.

4.2.3 Main screen temperature values

Two temperatures are always displayed:

- **TRUE temperature:** This is the reference temperature of the calibrator. In the A-version this is always the internal reference sensor. In B- and C-versions the TRUE temperature can either be the internal reference or the external reference.
- **SET temperature:** This is the target temperature for the well. SET temperature displays the last value entered. If no value has been entered previously, "---,---" is displayed.

Additional temperatures displayed (B versions only):

- **SENSOR temperature:** This is the temperature measured by the sensor under test (SUT).

Additional temperatures displayed (B and C versions only):

- **Ext. TRUE temperature:** This is the temperature measured by an external reference sensor. This is only displayed when an external reference sensor is used and replaces the internal reference.


4.2.4 Stability of temperature values

The stability of the TRUE and SENSOR temperatures are indicated by the following messages:

-  "Not stable": Indicates that the measured temperature is not yet within the specified stability criteria.
 -  Indicates "Time to stable": The temperature changes are within the specified stability criteria (see section 10.0) and states a time (in minutes and seconds) when the stable situation can be achieved.
 -  : Indicates that the "stable" situation is achieved.
-
-  If External reference is selected as TRUE, the stability criteria will refer to this. The criteria can be changed, however, if the temperature stability criteria is set wider or the stability time is set shorter, the calibrator may not reach the SET temperature.
 - If "Use stability criteria" is set to "Yes" for the SENSOR, the automatic calibration function will continue to next temperature step only when both TRUE and SENSOR indicate stability.

4.3 Input/Output Connections

Fig. 6
Communication
connections (all versions)

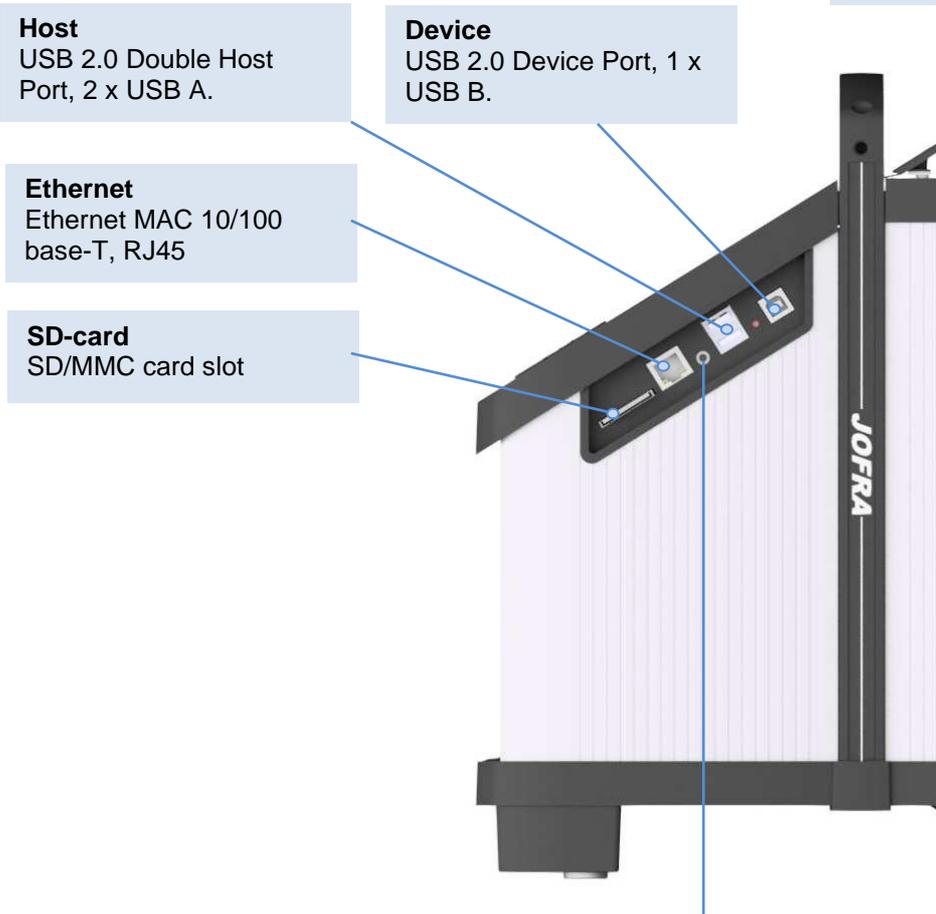

Host
USB 2.0 Double Host
Port, 2 x USB A.

Device
USB 2.0 Device Port, 1 x
USB B.

Ethernet
Ethernet MAC 10/100
base-T, RJ45

SD-card
SD/MMC card slot

Sync.
Sync. Relay output, Max. contact load 30V 24mA, 3.5 mm Mini Jack.
The state of the synchronization output is determined by the TRUE temperature (dependent on the choice of reference sensor) by the following guidelines:

1. When the extended stability time is = 0 minute, the relay is switched on for 2 seconds, when stability is achieved.
2. When extended stability time > 1 minute for the internal reference sensor (READ), the relay is switched on in the last minute of the extended stability time.

4.4 Input sections (B and C versions only)




Warning

- The input terminals must **NEVER** be connected to voltages exceeding 30V with reference to ground.

Fig. 7

Description of sockets for external connections

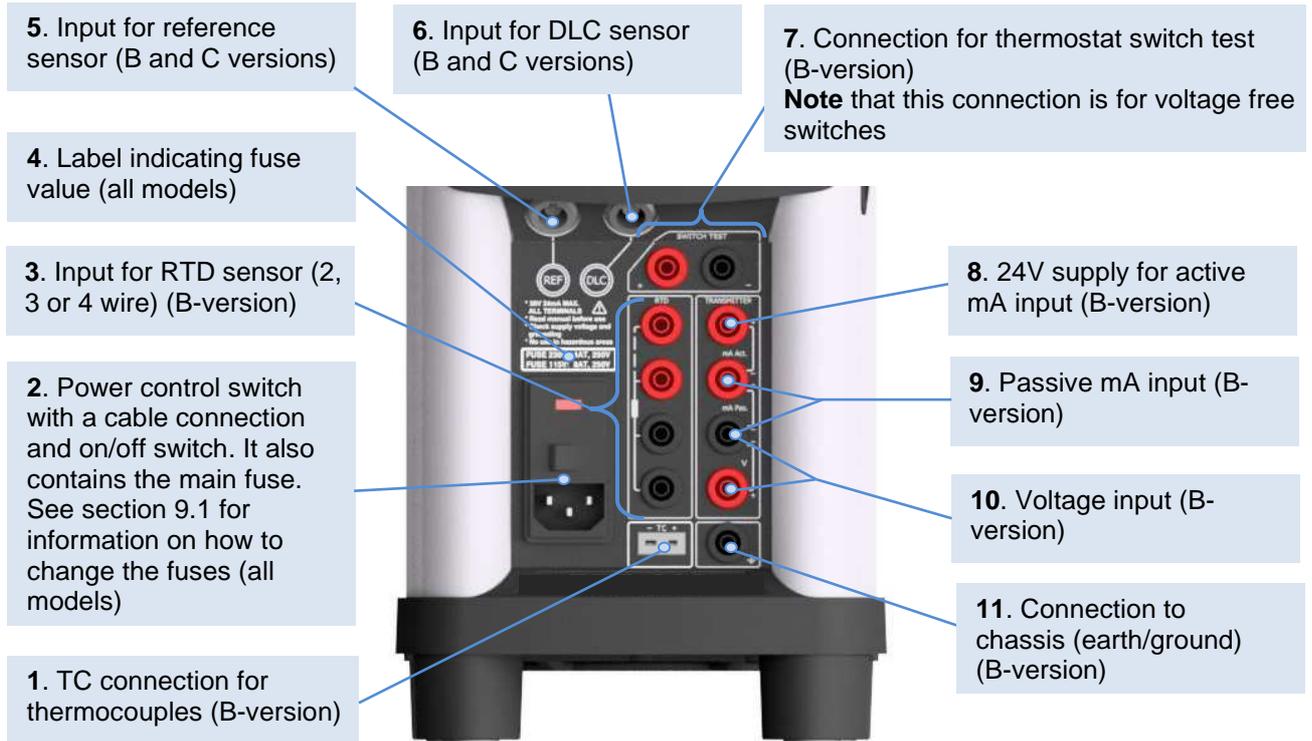

One of the inputs either pos. **1**, **3**, **9** or **10** can be selected displaying the “SENSOR” temperature in the Setup and pos. **5** can be displayed as “TRUE” temperature.



Note...

Only the sensor type, which is to be tested, should be connected to the input panel.

5.0 Operating the calibrator



Warning



Caution...

Please inspect the Safety Instructions in section 2.0 before using the instrument.

5.1 Operating principle

The calibrator is operated using the horizontal and the vertical menu list.

The NUMERIC keys are used for selecting and activating the various menus and functions from both the horizontal and vertical menu lists.


The  (ACTION key) and  (ENTER key) are also used for selecting and activating the menus and functions and for accessing various parameters in setup fields.

The  (ARROW keys) are used to move from menu item to menu item in the menu lists, to access various result lists, to scroll through various lists and to access setup fields.

5.1.1 Horizontal Menu

The horizontal menu options apply to the displayed screen. It is dynamically giving the relevant choices during operation. Each menu function can be activated in 2 ways:

- A. Move the blue cursor with the ARROW key  to mark the menu button on the screen. Then press  or  to activate the selection.
- B. Whenever the menu is visible simply press the NUMERIC key.

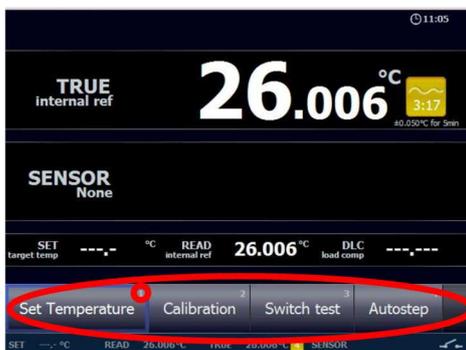

5.1.2 Vertical Menu

The vertical menu list can be called at any stage of operation making it possible to jump to the desired menu.




This allows you to jump to the most used menu easily - no matter where you are.

1. Press the  button to access the menu. To exit the menu, press the button again or  (BACK).

This menu always gives the same options, however at some points some choices are not relevant and will therefore be shaded, i.e. you can not set a temperature, when an Auto step procedure is running.


Each menu function can be activated in 2 ways.

- A. Move the cursor with the ARROW keys  or  to mark the menu field on the screen. Then press  or  to activate the selection.
- B. Whenever the menu is visible simply press the NUMERIC key.

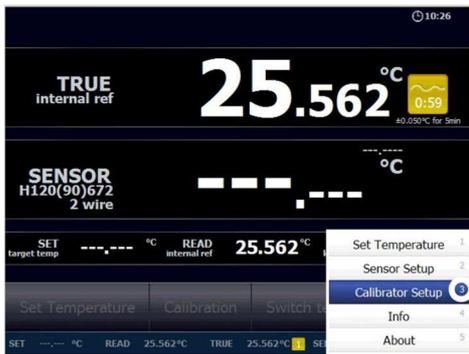

5.1.3 Parameter Fields


The setup menus have fields for parameter entries. When the setup is entered, then focus will be on the horizontal menu, and the function here can be activated.

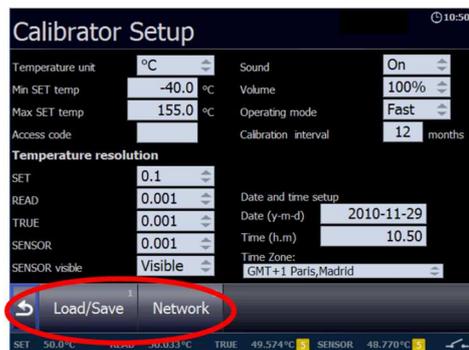

1. By pressing the ARROW UP key ▲ focus will move from the horizontal menu to the parameter field area.


The parameter field area focus is indicated by

- The horizontal menu is now shaded
- The parameter field area has a blue frame
- The selected parameter field highlighted with a dark blue colour

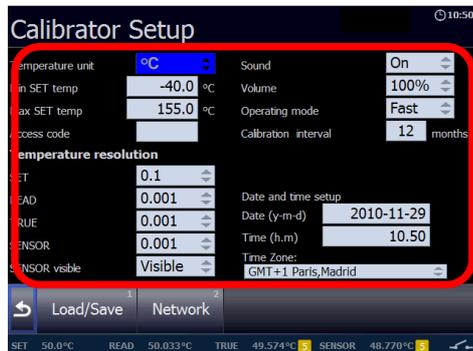

2. Use the 4 ARROW keys to move between the parameter fields.
3. A parameter value is changed by:
 - Pressing  or  to open the field for editing.
 - A numeric field can be entered directly without opening it first – simply enter the number.
4. When the parameter is entered press one of the keys:

-  This enters the value and leaves the cursor on the parameter field.
-  This enters the value and moves the cursor to the next parameter field.

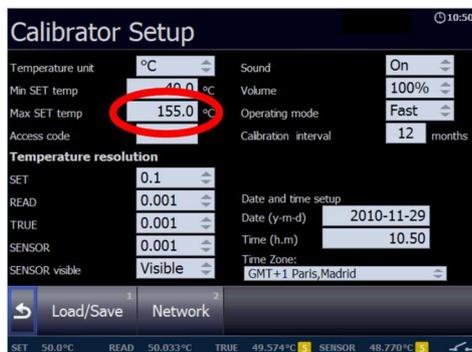

5.1.4 Working with lists


When it is possible to choose between a number of data sets, the data sets are presented in lists.

1. As an example access the Calibrator Setup menu from the vertical menu and activate “Load/Save ¹”

A list of instruments settings will be displayed.




2. Press ARROW UP ▲ to move the focus from the horizontal menu to the list.

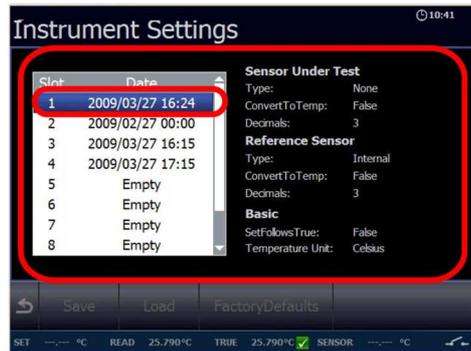


The selected data set in the list is now highlighted with a dark blue color.

3. Scrolling in the list is done using the ARROW UP key ▲ and the ARROW DOWN key ▼.

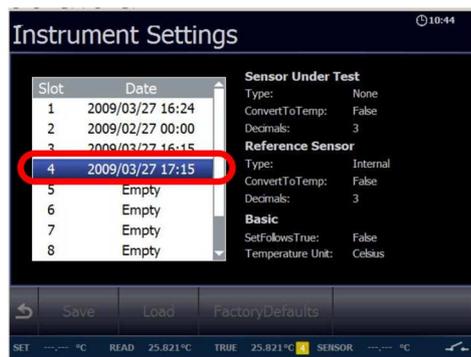

4. When the desired dataset in the list is highlighted press  or .

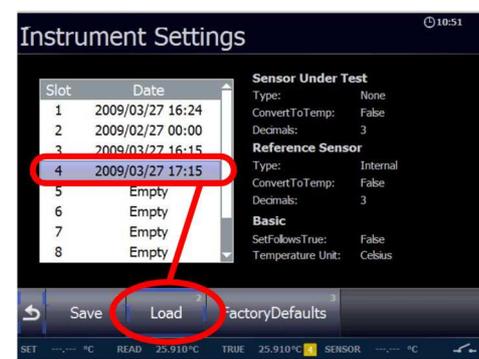

Now the horizontal menu will be in focus again and here you are able to decide what to do with the chosen dataset.

Activate the desired function in the horizontal menu. In this example the Instrument Settings from 2009/03/27 17:15 will be loaded from the memory into the active setup.

Some lists have no horizontal menus and only one option available.

- As an example access the Switch test menu by selecting “Switch test³” from the main menu and then activate “Results²”.



- Scroll through the list using the ARROW UP key ▲ and the ARROW DOWN key ▼ and just press or to display the result of the highlighted dataset.



5.2 Starting the calibrator

Switch on the calibrator using the power control switch (pos. 2, fig. 7). A start up screen is displayed and then replaced with the main menu screen:



The functions in the horizontal menu are available using the soft keys or the arrow keys on the keyboard (see description in section 4.1).

5.3 Setting the temperature

1. Access the Set Temperature function by selecting “Set Temperature 1 “.



2. Use the NUMERIC keys to enter a new value, or  or  to accept the value. When pressing the ACTION key or the ENTER key the calibrator returns to the main menu screen.

The Set temperature function can also be accessed using the vertical menu (press ). Through this menu a new set point value can be entered at any stage of the operation **except when one of the automatic functions are active.**

5.4 Calibration



Note...

This Calibration function is for B versions only.

This function enables you to perform automatic calibrations of different temperature sensors. The calibration procedure is semi-automatic, using parameters and settings, which are defined in workorders. These workorders are created and edited using the "JOFRACAL" PC program. Multiple calibrations can be performed using the same workorder settings.

1. Access the Calibration menu by selecting “Calibration 2” from the main menu.



A Workorder List is displayed.

2. Run the selected workorder by activating “Run 1 “. A new calibration is started. You can also chose to activate:
 - “View 2” – shows the setting of the workorder.
 - “Results 3” – shows the previous calibration results from this workorder.
 - “Delete 4” – deletes the workorder setting and the results.

For operating the Results menu see section 5.4.2.
For operating the View menu see section 5.4.3.
For operating the Delete function see section 5.4.4.




Note...

Calibration information is available in several places throughout the calibration menus. The content of this information is described in section 5.4.3.

5.4.1 Running a calibration

1. To run the calibration, select “Run ¹” from the Workorder List menu.


If the serial number of the reference sensor used for calibration does not match the one specified in the workorder the following message is displayed :

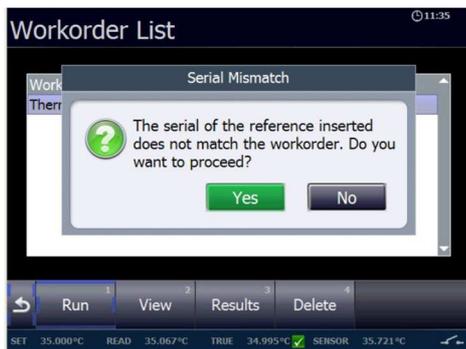

If you proceed, the connected reference sensor will be documented along with the results.

If you do not wish this message to appear, the correct reference sensor must be specified when the workorder is edited using the “JOFRACAL” PC program.

2. Choose “YES” and press  or  if you want to proceed with the calibration.

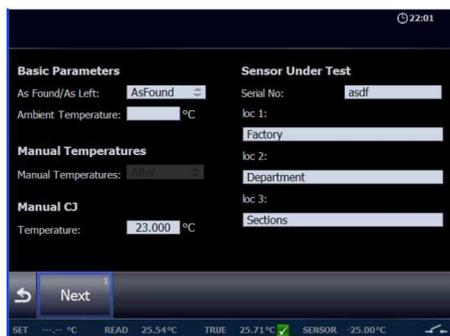

The Parameter setup menu is displayed.



Note...


If the sensor under test is a thermocouple sensor and the manual compensation mode is selected in work orders, a cold junction temperature must be defined.

The parameters in the workorder can be edited.



Note...

- Only numeric data can be entered.
 - The BACK key  cancels a selection/edit or returning to previous menu. The ESC key can be used throughout the process.
3. Select “Next 1” to proceed with the operation.

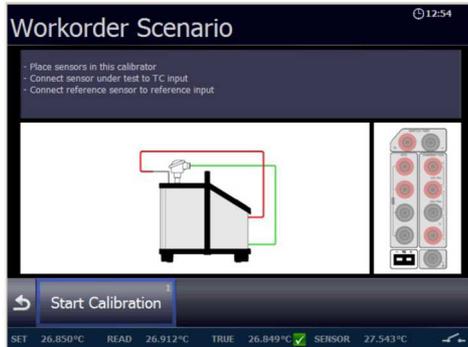

A workorder Scenario is displayed, giving a graphical display of the setup and sensor connections.

4. Start the calibration by selecting “Start Calibration 1”.

The Calibration Running step 1 of 2 is started and the temperature is heading towards step 1.

The following screen is displayed :



When the temperature has reached the stable criteria, the calibration data will be stored and the temperature goes towards the next set temperature.

If the workorder contains manual reading during calibration, you will be asked to enter the Sensor Under Test temperature before that.

The following screen is displayed :



If manual readings are specified these will have to be entered before next step starts.



Note...

The calibration can be stopped at any time by activating “Stop 2”, but this will erase the calibration results.

During calibration several other functions are available:

- “Result 1” - To view the calibration results (no editing is possible).
- “Pause 3” - To pause the calibration.
- “Prev 4” - Force the calibration to jump a step backwards to the previous calibration screen regardless of the calibration stability.
- “Next 5” - Force the calibration to jump a step forwards to the next calibration screen regardless of the calibration stability. This will leave the current step without saving calibration results.
- “View 6” - To view the workorder settings.

When the calibration has completed a green check ✓ is shown on the screen and the Calibration Result follows quickly hereafter.

Step	SET	Reference	Sensor	Deviation	Success
1	25.00 °C	25.06 °C	24.82 °C	-0.24 °C	✓
2	28.00 °C	27.53 °C	27.75 °C	0.22 °C	✓
3	30.00 °C	-	-	-	⌚

5. Select “Save 1” to store the results in the calibrator
or
6. select “Discard 2” and press “Yes” to delete the calibration results or “No” to return to the Calibration Result screen.

A full Calibration Result List can be viewed using the instructions in section 5.4.2.

5.4.2 Viewing calibration results

1. Access the Calibration Result function by selecting “Results 3” from the Workorder List menu.

Result	AsFound/AsLeft	Date
Sensor: SUT serial	As Found	2009/06/11 15:31
Sensor: SUT serial	As Found	2009/06/11 16:01
Sensor: SUT serial	As Found	2009/06/12 11:49
Sensor: SUT serial	As Found	2009/06/12 11:54
Sensor: SUT serial	As Found	2009/06/12 12:19
Sensor: SUT serial	As Found	2009/06/12 13:51
Sensor: SUT serial	As Found	2009/06/12 14:35
Sensor: SUT serial	As Found	2009/06/16 12:12

A full Calibration Result List is displayed.

2. Select a workorder to be displayed showing the calibration details for the specific workorder.

Step	SET	Reference	Sensor	Deviation	Success
1	25.500 °C	25.50 °C	26.20 °C	0.70 °C	✓
2	27.500 °C	27.50 °C	28.21 °C	0.71 °C	✓

The calibration results can be uploaded with the “JOFRACAL” PC program. This enables you to print out the results on a certificate.

3. Press to exit the Calibration Result List and return to the Workorder List menu.

5.4.3 Displaying calibration information

Calibration information is defined within the work orders created on the PC using "JOFRACAL".

1. Access the Workorder Sensors menu by selecting “View 2” from the Workorder List menu.

Sensor Under Test		Reference Sensor	
ID:	K	ID:	90dg ref sensor
Type:	SUT Sensor Description	Serial:	Z390237-Z3987
Measurement:	CalibratorInput	Measurement:	External
Serial No.:	SUT serial		
Tag1 header:	Tag1		
Tag2 header:	Tag2		
Tag3 header:	Tag3		
Notes		Steps	
WorkOrder: Always remember to plugin the sensor. Calibrator: Calibrator notes Sensor Input: Sensor input notes Sensor Under Test: Sensor notes Reference Sensor: Reference sensor notes Manual Heat Source: Manual (1 more link...)		Step 1: 25.500 °C Calibrator Step 2: 27.500 °C Calibrator	

The Workorder Sensors menu is displayed.

This screen gives you an overview of the workorder sensor setup including a summary of Notes, Scenario and Steps. Each of these can be displayed in details.


2. Select “Notes 1” to access the Notes function.

Notes
WorkOrder: Always remember to plugin the sensor.
Calibrator: Calibrator notes
Sensor Input: Sensor input notes
Sensor Under Test: Sensor notes
Reference Sensor: Reference sensor notes
Manual Heat Source: Manual Hestsource note

A list of Workorder Notes is displayed.

The notes are information entered via the PC program, when the workorder is created.


3. Press  to exit the Workorder Notes screen.
4. Select “Scenario 2” to access the Scenario function.

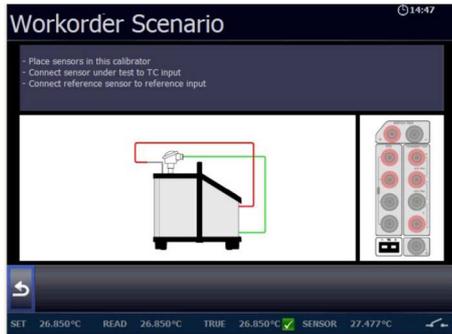

A Workorder Scenario is displayed.

The calibration set up is shown in a graphic format, and the active sensor input is marked. The parameters for this setup are defined in the work order created using the PC program.

5. Press  to exit the Workorder Scenario screen.
6. Select “Steps 3” to access the Step function.

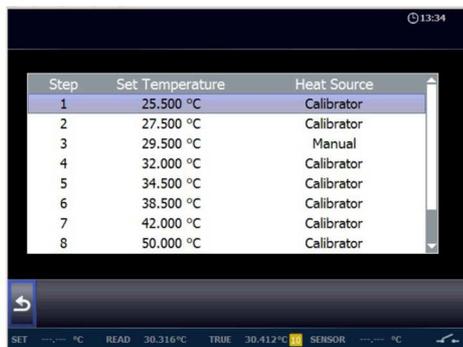

A list of Temperature Steps is displayed.

This function shows the pre-defined temperature steps for the calibration.

7. Press  to exit the Step function and return to the Workorder Sensors menu.

5.4.4 Deleting workorders

It is possible to delete a workorder using the Delete function from the Workorder List menu.

1. Select “Delete 4” to access the Delete function.



2. Press “Yes” if you want to delete your workorders and “No” if you want to exit the Delete function without deleting anything.



Warning

If you choose to delete a workorder, the whole workorder including the calibration results will be deleted.

3. Press  to exit the Workorder List menu and return to the main menu.

5.5 Switch test menu



Note...


This Switch test function is for B versions only.

Switch test automatically locates the switch temperatures of a thermostat.

Three parameters are required:

- Start temperature (T_1)
- End temperature (T_2)
- Rate of change in temperature (slope rate).

Hysteresis of a thermostat can also be determined here. Where the hysteresis determines the tolerance between the upper switch temperature and the lower switch temperature of the thermostat.

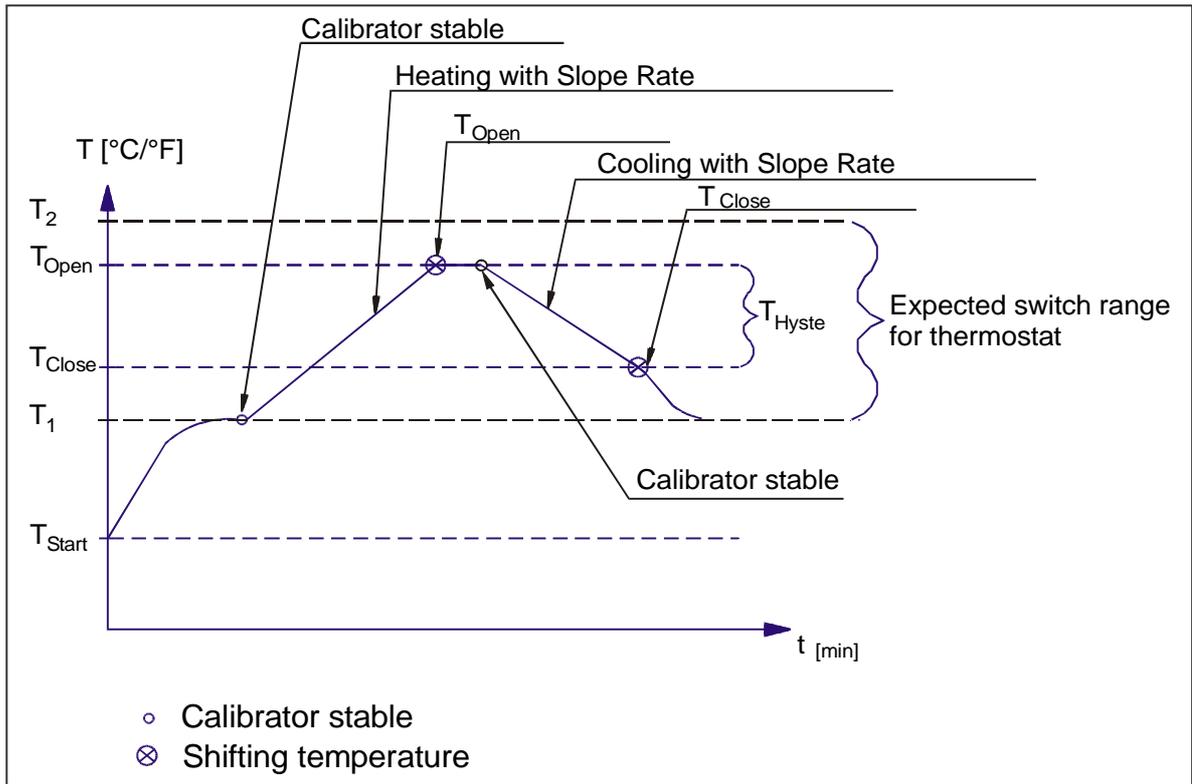

5.5.1 Running a switch test



Note...

Before running the Switch Test, make sure that the switch is connected to the Switch Test input.

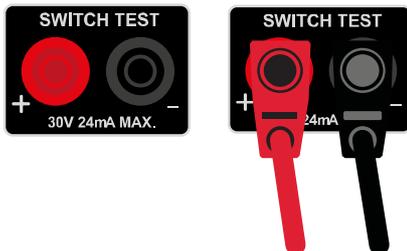


Fig. 8
Switch Test input



Note...

Temperature range is limited by Min. SET Temp. and Max. SET Temp. settings editable in the System Settings menu and by the temperature range of the external reference sensor, if connected.

1. Access the Switch test menu by selecting “Switch test 3” from the main menu.



A Switch test setup menu is displayed.

The small graph illustrates the current T_1 , T_2 and hysteresis selections. Note that T_1 can be greater than T_2 .

2. Access the setup field to edit the parameters:
 - T_1 - first set temperature
 - T_2 - second set temperature
 - Hysteresis - to determine hysteresis, toggle between "Yes" (a two-way-temperature measurement) and "No" (a one-way-temperature measurement).
 - Slope rate - The permitted range is 0.1 - 9.9°C/min. / 0.2 - 17.8°F/min.




Note...

the slope rate should be set so that the thermostat sensor can follow the temperature in the calibrator's well.

3. Press  to exit the setup function and return to the Switch test setup menu. Before starting the switch test ensure that the switch is connected to the switch input (see section 4.4, pos. 8).

4. Select “Start 1” to start the switch test.

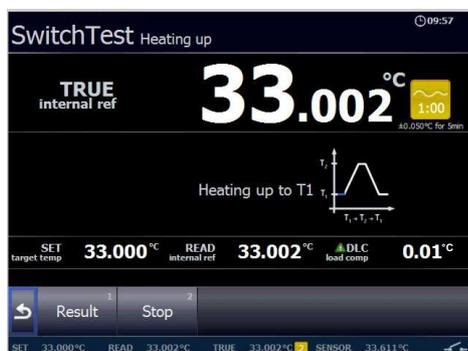

The Switch Test is now in progress.

While the switch test is in progress, 2 options are available:

“Result 1” – displaying the current switch test results.

“Stop 3” – stopping the switch test. Press “Yes” to stop the switch test and “No” to return to the Switch Test screen.

The calibrator's switch test procedure

1. Once the switch test is started, the calibrator starts working towards T_1 as quickly as possible. The calibrator's temperature changes (heating or cooling) and switch status are shown in the display.
2. When T_1 is achieved and the temperature is stable, the text and the graphic in the middle of the screen will change accordingly.
3. The calibrator now starts working towards T_2 at the specified slope rate.
4. In a normal situation, the thermostat changes state before T_2 is achieved. If T_2 is achieved and the temperature is stable, a red cross will be displayed instead of a green check ✓.
5. When hysteresis is not selected (single temperature change) (the graphic indicates the choice), the finished switch test result is displayed.

When hysteresis is selected (two switch changes), the calibrator starts working towards T_1 at the specified slope rate.

6. Normally, the thermostat changes state before T_1 is achieved. If T_1 is reached and the temperature is stable, a red cross will be displayed instead of a green check ✓.
7. The finished switch test results are displayed.

5.5.2 Showing switch test results

Two types of switch test results are available:

- Results during a switch test.
- Results of a finished switch test.

Results during a switch test

1. Access the Switch Test Result List by selecting “Result 1” from the Switch Test menu.



This shows the results that are currently available. These results change as the test progresses.

2. Press ↶ to return to the switch test.

Finished switch test results

At the end of a switch test the results are displayed. These show the temperature when the thermostat has closed and the temperature when it has opened – whichever comes first. The difference between these 2 temperatures is calculated as the hysteresis.



1. Select “Save ¹” to save the results storing them in the calibrator’s memory.
2. Select “Discard ²” to delete the results from the screen.



Note...

A hysteresis result is only measured when hysteresis is set to “Yes”.

You will then automatically return to the Switchtest setup menu.



If no change in the switch position is registered during the test a red cross will be displayed in the Result list instead of a green check ✓.



3. Delete the result by selecting “Discard ²” or save the result by selecting “Save ¹”.

To view stored switch test results

1. Access the Switch Test Result List by selecting “Results 2” from the Switch test setup menu.

Date	Hysteresis	Slope
2009/06/30 11:09	Yes	9.0 °C/min
2009/07/02 13:57	Yes	9.0 °C/min
2009/07/02 15:03	Yes	9.0 °C/min

2. Select a test result to be displayed.

State	Temperature	Time	Success
	30.444 °C	15:03:01	✓
	30.304 °C	15:03:09	✓


Hysteresis: 0.141 °C

3. Press twice to return to the Switch test setup menu.

The memory can hold 20 SwitchTest results.

5.6 Auto step menu

Auto step is used to step automatically between a range of different calibration temperatures. This is useful when calibrating sensors in places that are difficult to reach and sensors where the output is displayed in a different location.

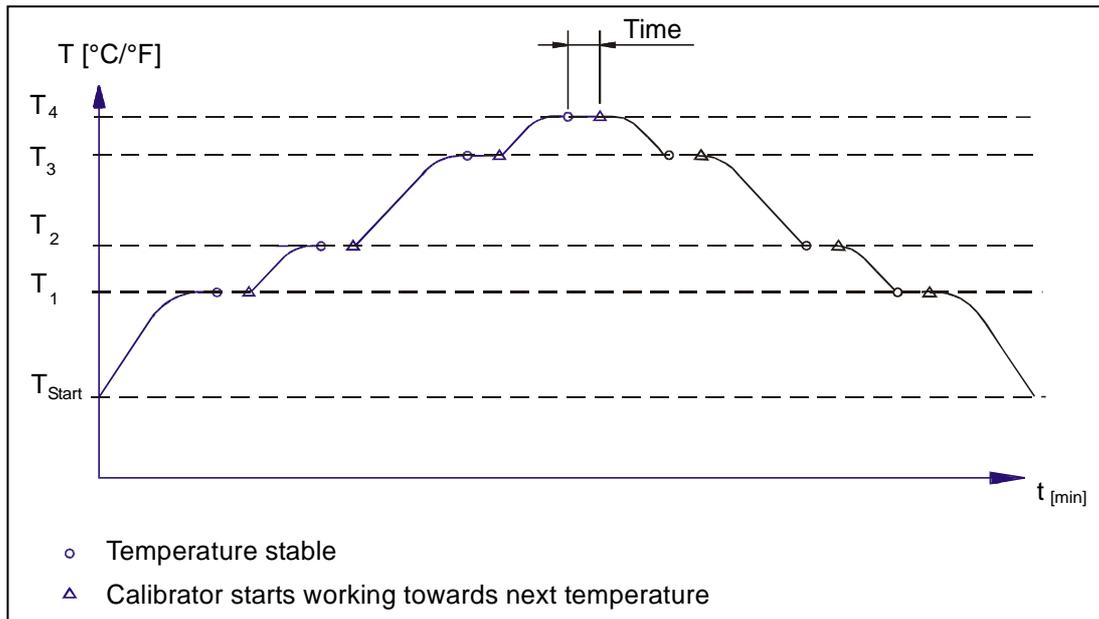


5.6.1 Running an Auto step calibration

1. Access the Auto Step Setup menu by selecting “Autostep⁴” from the main menu.



The Auto Step Setup menu is displayed.

2. Access the Auto Step Setup to edit the parameters:
 - **No of steps:** the number of temperature steps per direction ($T_1 \rightarrow T_x$) can be set using integers from 1 – 20. When a Two-way mode is selected, the same number of steps are used for the second direction ($T_x \rightarrow T_1$).
 - **Mode:** toggle between “One-way” and “Two-way”.
 - **Hold time:** defines the time (in minutes) the temperature is maintained (after it is stable) for each step.
 - **T step values:** must be set within the sensors permitted range.
3. Press  to exit the editor and return to the Auto Step setup menu.
4. Access the Sensor setup menu by selecting “Next¹” from the Auto Step Setup menu.

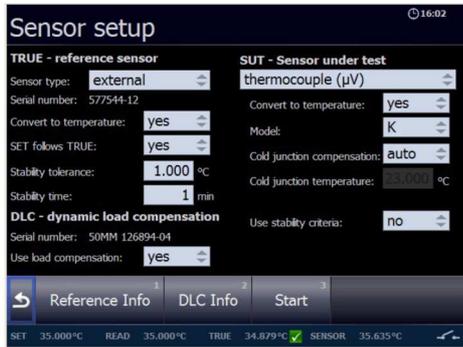

The Sensor setup menu is displayed. In this menu you have the opportunity to check and if necessary change the settings as described in section 5.7 – Sensor Setup menu.

5. Select “Start ³” to start the Auto Step calibration.



An Auto Step Running step screen is displayed.

While the step test is in progress, several functions are available:

- “Result ¹” - To review the Auto Step results (no editing is possible).
- “Stop ²” - To stop the Auto Step test.
- “Pause ³” - To pause the test.
- “Prev ⁴” - Force the test to jump a step backwards to the previous running step regardless of the step’s stability.
- “Next ⁵” - Force the test to jump a step forwards to the next running step regardless of the step’s stability.

When the Auto Step test is complete the results are displayed.



6. Select “Save ¹” to save the results storing them in the calibrator’s memory.

7. Select “Discard ²” to delete the results from the screen.
The calibrator then returns to the Auto Step Setup menu.


5.6.2 Auto Step test results

At the end of an Auto Step test the results are displayed and stored in the calibrators memory.

The measured TRUE and SENSOR temperatures for each step are displayed.

To view stored Auto step test results

1. Access the Auto Step Result List by selecting “Results ²” from the Auto Step Setup menu.

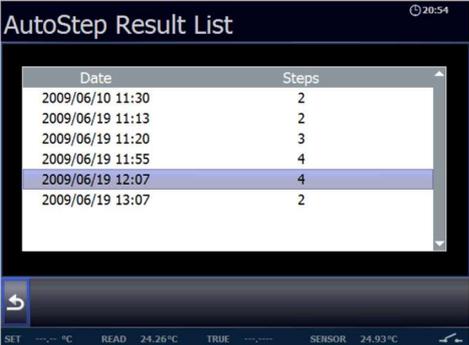


The screenshot shows the 'AutoStep Result List' screen. At the top, it says 'AutoStep Result List' and '20:54'. Below is a table with two columns: 'Date' and 'Steps'. The table contains the following data:

Date	Steps
2009/06/10 11:30	2
2009/06/19 11:13	2
2009/06/19 11:20	3
2009/06/19 11:55	4
2009/06/19 12:07	4
2009/06/19 13:07	2

At the bottom of the screen, there is a status bar with the following information: SET --- °C, READ 24.26 °C, TRUE ---, SENSOR 24.93 °C.

The Auto Step Result List is displayed.

2. Select an auto step result to be displayed.

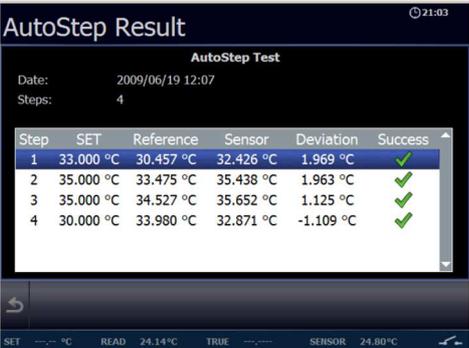

The screenshot shows the 'AutoStep Result' screen. At the top, it says 'AutoStep Result' and '21:03'. Below is a table with the following data:

Step	SET	Reference	Sensor	Deviation	Success
1	33.000 °C	30.457 °C	32.426 °C	1.969 °C	✓
2	35.000 °C	33.475 °C	35.438 °C	1.963 °C	✓
3	35.000 °C	34.527 °C	35.652 °C	1.125 °C	✓
4	30.000 °C	33.980 °C	32.871 °C	-1.109 °C	✓


At the top of the table, it says 'Date: 2009/06/19 12:07' and 'Steps: 4'. At the bottom of the screen, there is a status bar with the following information: SET --- °C, READ 24.14 °C, TRUE ---, SENSOR 24.80 °C.

3. Press  twice to return to the Auto Step Setup menu.

The memory can hold 20 AutoStep Results.

5.7 Sensor Setup menu

1. The Sensor Setup can be entered through the vertical menu (press )
The Sensor Setup can also be edited immediately before running the Auto step (section 5.6.1) or when starting a switch test.

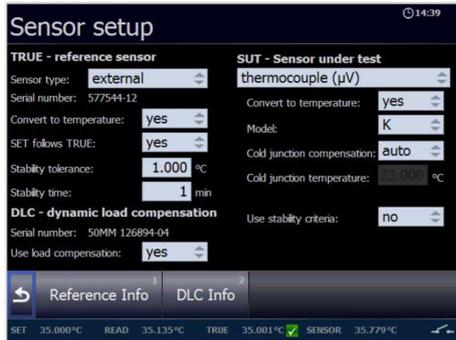

2. Activate "Sensor Setup²".


5.7.1 Setting the additional stability time (A version)

1. Set the additional stability time by pressing  and the NUMERIC keys. Stability time can be set (in minutes) using integers from 0 – 99.



5.7.2 Setting the parameters for TRUE – reference sensor (B and C versions only)

Sensor type:

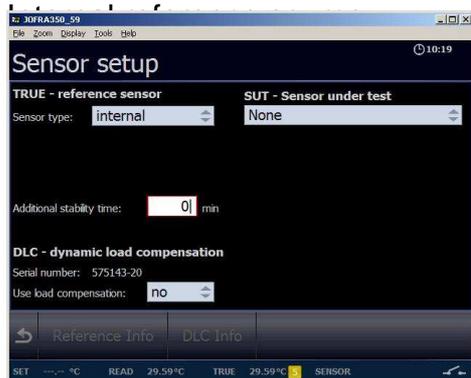

The internal reference sensor will be displayed as the TRUE value on the main screen.

1. The calibrator has a set of internal stability criteria it shall meet before stability is indicated. Additional stability time may be set beyond the internal stability criteria.

Set the additional stability time by pressing  and the NUMERIC keys. Stability time can be set (in minutes) using integers from 0 – 99.

External reference source

The TRUE value on the main screen will be read from the Intelligent Reference Sensor connected to the REF. INPUT on the front panel (see section 4.4 fig. 5). The calibrator automatically reads the calibration data and serial number of the Sensor.

Convert to temperature:

- “yes” sets the readout of the External reference as a temperature.
- “no” sets the readout of the External reference in Ω values.

SET follows TRUE:

This function enables you to reach the TRUE temperature measured by the External reference sensor.



Note...

that when “yes” is selected, the calibrator will control the temperature to the TRUE temperature. This means that it could take longer time before the calibrator indicates stability.

The “SET follows TRUE” function is indicated with the symbol  at the TRUE reading in the main display.



Note...

SET follows TRUE is only relevant when the External reference sensor is displayed in temperature units.

Stability tolerance:

The Stability tolerance can be set down to $\pm 0.001^\circ$. The tolerance should be set low enough to utilize the good temperature stability of the calibrator – however a low value also gives a longer time to be stable.

Stability time:

Stability time can be set from 1 – 99 minutes.

When the TRUE temperature has reached the specified Stability tolerance during the specified Stability time, then the stability indicator in the main screen will turn green.

2. Press  to accept the new setting(s) and return to the Sensor setup menu or continue to edit the DLC sensor parameters or the Sensor under test parameters.

5.7.3 Setting the parameters for DLC– dynamic load compensation (B and C versions only)

The DLC value on the main screen will be read from the Intelligent Load Sensor as soon as it is connected to the DLC INPUT on the front panel (see section 4.4 fig. 6). The calibrator automatically reads the calibration data and serial number of the Sensor. However if the Dynamic Load Compensation shall be active, it must be enabled.

Use load compensation:

The active “DLC” function is indicated with the symbol  at the DLC reading in the main display.



Note...

always use external reference sensor when calibrating with the DLC-function activated for specified accuracy.

1. Press  to accept the new setting(s) and return to the Sensor setup menu or continue to edit the reference sensor parameters or the Sensor under test parameters.

5.7.4 Setting the parameters for SUT– Sensor under test (B versions only)

Sensor type:

1. Choose between :
 - thermocouple sensors (μV)
 - voltage sensors (V)
 - current (ma) sensors
 - RTD sensors (resistance temp. detector (Ω))
 - None (no sensor connected)
2. Select a sensor.

The selected sensor and its list of parameters are now displayed. The various settings can be edited as described in the following :

Convert to temperature:

(using thermocouple, voltage, current and RTD)

- “yes” – the inputs are converted to temperatures.
- “no” – no conversion is made.

When “no” has been selected the type of model is the only other parameter which can be altered.

Model:

(using thermocouple and RTD)

3. Toggle between the models; K, N, R, S, T, U, B, E and J (thermocouple) or P10(90)385, P100(90)385, P100(90)392, P1000(90)385, P200(90)385, P50(90)385, P500(90)385, Pt-100 MILL, P100(90)391, P50(90)391, YSI-400, H120(90)672, M100(90)428, M50(90)428-06, M100(90)428... and M50(90)428 (RTD).

Cold junction compensation:

(using thermocouple)

- “auto” – when the automatic mode is selected, the calibrator measures the temperature in the T/C connector and uses this for the cold junction compensation of the thermocouple.
- “manual” – to define a manual temperature for cold junction compensation. Can be used when an external cold junction temperature can be established.

Cold junction temperature:

(using thermocouple)

4. When “manual” Cold junction compensation has been selected the temperature for cold junction can be set using the NUMERIC keys.

Voltage(V) and temperature(T) span:

(using voltage)

The minimum and the maximum of the voltage and the corresponding temperature span can be set here.

5. Use the NUMERIC keys to set the value of the voltage and/or the temperature.

Current(C) and temperature(T) span:

(using current)

The minimum and the maximum of the current and the corresponding temperature span can be set here.

6. Use the NUMERIC keys to set the value of the current and/or the temperature.

Number of wires:

(using RTD)

The number of wires used for the sensor under test can be selected here.

7. Choose between 2, 3 or 4 wires.

Use stability criteria:

(using thermocouple, voltage, current and RTD)

Beside the stability check on the Reference sensor, it is also possible to ensure that the Sensor Under Test (SENSOR) is stable before the temperature is indicated as stable.

- “yes” – Stability will be checked on both Reference sensor (TRUE) temperature and Sensor Under Test (SENSOR) temperature.
- “no” – Stability will be checked on Reference sensor (TRUE) temperature only.

Stability tolerance:

(using thermocouple, voltage, current and RTD)

8. Enter the Stability tolerance (temperature) by pressing the NUMERIC keys.

The Stability tolerance can be set down to $\pm 0.001^\circ$ however the expected performance of the Sensor Under Test should be considered before setting the tolerance.

Stability time:

(using thermocouple, voltage, current and RTD)


9. Set the Stability time by pressing the NUMERIC keys. Stability time can be set from 1 – 99 minutes.

When the SENSOR temperature has reached the specified Stability tolerance during the specified Stability time, then the stability indicator in the main screen will turn green.

5.7.5 Viewing the Reference and DLC data (B and C versions only)


The calibration data of the Intelligent Reference sensor and the intelligent DLC sensor can be viewed using the Reference Info function or the DLC Info function from the Sensor setup menu.

1. View the Reference Info box by selecting “Reference Info 1”.

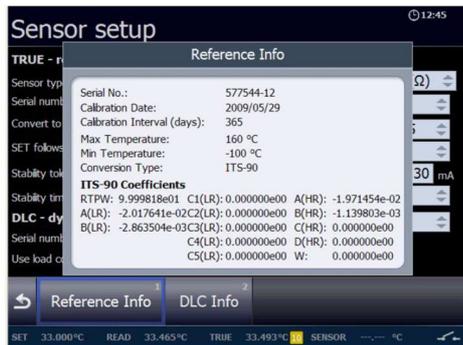

The Reference Info box is displayed.

2. Press  to return to the Sensor setup menu.
3. View the DLC Info box by selecting “DLC Info 2”.

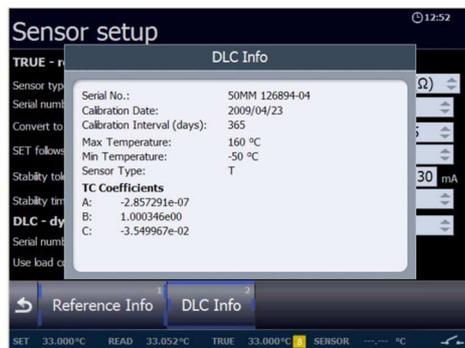

The DLC Info box is displayed.

4. Press  to return to the Sensor setup menu.

5.8 Calibrator Setup menu

1. The Calibration Setup can be edited through the vertical menu (press ).



2. Activate “Calibrator Setup³”.

5.8.1 Setting the temperature parameters

Temperature unit:

1. Choose between:

- °C (Celsius)
- °F (Fahrenheit)
- K (Kelvin)

Min SET temp / Max SET temp:

2. Enter the access code to get access to the editor.
3. Use the NUMERIC keys to set the Min/Max SET temperature in Celsius, Fahrenheit or Kelvin.



Note...

The Enter Access Code box is displayed every time you try to access the Min/Max SET temp parameters. Type in your access code and continue.



Access code:

The following features can be protected by an access code:

- Resetting the calibrator to Factory default settings.
- Setting the Min/Max SET Temperature.
- Editing the Access code while it is enabled.

1. Press  or  to access the Access code function.

2. Use the NUMERIC keys to type in a value from 0000 to 9999. Use all 4 digits. Typing 0000 disables the Access code function.

The access code is accepted showing a green check ✓ for a few seconds allowing you to continue.



Caution...

If you choose to let your access code consist of only 1, 2 or 3 digits you must enter the access code with 0 followed by the chosen value.

Example:

1. The access code 12 is selected.
2. Type in 0012 in the Enter Access Code box



Note...

The access code can be deleted allowing you to change the Min/Max SET temperature without having to enter the access code.

3. Press  or  to access the Access code function.
4. Type in your access code.

No new value is entered.

5. Accept the new setting (empty box).

It is now possible to enter the editor without using the access code.

5.8.2 Setting the temperature resolution

1. Choose between :

- SET
- READ
- TRUE
- SENSOR

2. Choose between the resolutions:

- 0.001
- 0.01
- 0.1
- 1

SENSOR visible:

3. Choose between :

- Visible
- Hidden

If the Hidden option is chosen the Sensor Under Test reading will not be displayed on the main screen.

5.8.3 Setting the sound, volume and operating mode

Sound:

1. Choose between :
 - On
 - Off

Enables the calibrator to make a sound during operation.
Sound responses are given at the following conditions:

- Stability
- Warnings
- Accept of data entry
- Reject of data entry

Volume:

2. The volume of the sound can be adjusted from 0 – 100%.

Operating mode:

3. Choose between :
 - Fast
 - Silent

“Fast” – the fan operates in a fast mode giving the best performance of cooling.

“Silent” – the fan operates in a silent mode reducing the noise. Using this option the cooling process is made a little slower and the calibrator might not be able to reach the specified minimum temperature.

5.8.4 Setting recalibration interval

Sets the required recalibration interval for the calibrator.

1. Choose a value between 1 month and 99 months.

When the recalibration interval is exceeded, the warning symbol will appear in the display.



Note...

The recalibration interval is not used for the external reference sensor and the DLC.
The interval for these sensors is stored in the intelligent sensor.

5.8.5 Changing language

1. Select the required language from the list of installed languages (depends on region).
2. Confirm by selecting “Yes” and the calibrator will restart with the selected language.
Or

3. Cancel by selecting “No”.



5.8.6 Changing the date and time

Date:

1. Use the NUMERIC keys to enter a new date.

The date can only be entered using the format yyyy-mm-dd. When entering the date with different format, the text will disappear when you try to accept the setting.

Time:

The calibrator is set up with a default time (present time).

2. Use the NUMERIC keys to enter a new time using the format hh.mm.


Time Zone:

3. The relevant time zone is selected from a list of various zones.

5.8.7 Saving a setup

Saving a setup saves parameters in the Setup menu.

1. Access the Instrument Settings menu by selecting “Load/Save ¹” from the Calibrator Setup menu.

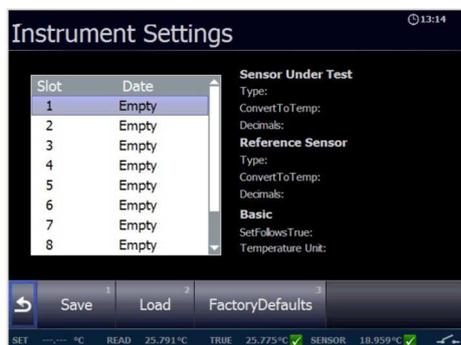

The Instrument Settings are displayed.

2. Select a register number to be used for saving.

The setup will be saved with the selected register number.




Note...

In the Calibrator Setup the following parameters will not be saved:

- Min SET temp
- Max SET temp
- SENSOR visible

You can save up to 10 setups.

When the setup is saved the parameters are visible in the right side of the screen.

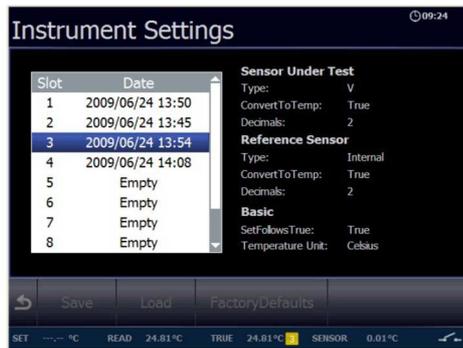

5.8.8 Loading a setup

Loading a setup causes the setup parameters to be overwritten.


1. Select a setup from the list to be loaded.
The selected setup will be loaded into the calibrator's memory.
2. Press to return to the Calibrator setup menu.

5.8.9 Resetting the instrument setup to factory defaults

Resetting to the factory default settings changes the active setup to the initial settings.

5.8.10 Network Configuration (for service use only)


1. Access the Network Configuration function by selecting “Network ²” from the Calibration Setup menu.

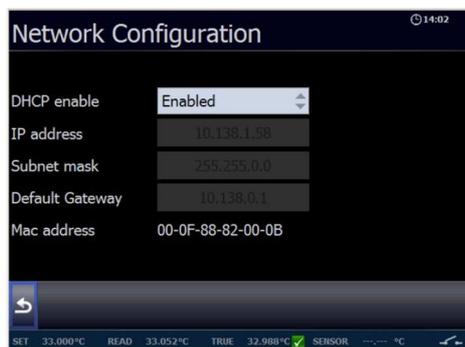

The Network Configuration screen is displayed.

When DHCP is set to Enabled, the IP address will be updated when leaving the network menu.

2. When DHCP is disabled, you can configure the IP-settings manually using the NUMERIC keys.

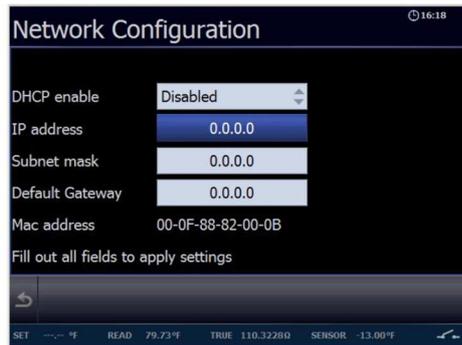

5.9 Selecting the stirrer speed (RTC-158/168/250 A/B/C only)

1. The Set Stirrer Speed can be entered through the vertical menu (press ) Use the ARROW keys to select “Stirrer Speed”.



2. Use the NUMERIC keys to enter a value, or  or  to accept the value. When pressing the ACTION key or the ENTER key the calibrator returns to the main menu screen.
3. Select a speed setting between 0 and 100.
The normal setting is between 30 and 40.
When using the RTC-158/168/250 A/B/C with a dry block kit the stirrer speed must be set to 0.
The DLC will be disabled when the stirrer is started



Caution...


If the speed level chosen is too high, the magnet will fall off making a rattling sound and there will be no stirring in the fluid. With no stirring of the fluid, temperature gradients will emerge in the bath, which will again affect the result of the calibration.

To reconnect the magnet, set the speed level to 0 and select a speed setting lower than the previous.

4. Press  or  to accept the value and return to the setup menu.

5.10 Information Screen

1. Information about the status can be viewed using the Info function from the vertical menu (press .

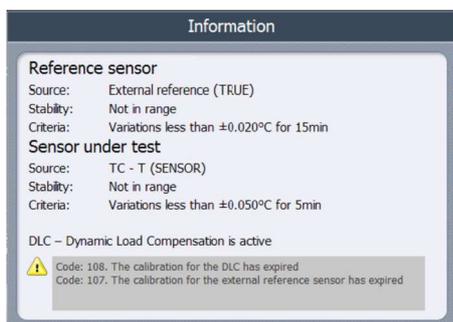

A status summary of the sensors setting and stability information is displayed.

If a warning or an error has occurred, it will be listed on the information screen.



Note...

The list will be cleared, when the calibrator is switched off.

2. Press  to exit the Info function.

5.11 About the calibrator

1. Information about the calibrator can be viewed using the About function from the vertical menu (press .



This informs you about the calibrator type, the software version installed, the serial number and the date when it was last calibrated.

2. Press  to exit the About function.

5.12 Simulation or training


1. Switch off the calibrator and switch it on again using the power control switch. The start up screen is displayed.



Shortly after a black screen is displayed for a few seconds and then the start up screen is displayed again.

2. Now press and hold  down for a minimum of 5 seconds while the start screen is displayed.

The calibrator will start in the simulation mode.

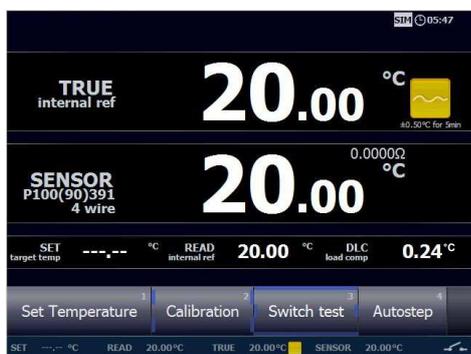

This mode is used to train personnel. The simulation differs from the standard setting in the following ways:

- The instrument does not actually heat up or cool down the well.
- The heating and cooling processes are simulated at exaggerated speeds.
- Data are not stored in the calibrator's memory.

The calibrator will remain in simulation mode until it is switched off.

6.0 After use

6.1 Storing and transporting the calibrator



Caution...

The following guidelines should always be observed when storing and transporting the calibrator. This will ensure that the instrument and the sensor remain in good working order (all versions).



Warning

- The calibrator **must** be switched off before any attempt to service the instrument is made. There are no user serviceable parts inside the calibrator.
- Remember to use appropriate protective equipment or get help when carrying the calibrator (for a longer distance) in order to prevent injuries from dropping the calibrator.

The following routine must be observed **before the insertion tube is** removed and the instrument switched off:

Dry-block calibrators only



Over 50°C/122°F

If the calibrator has been heated up to temperatures above 50°C/122°F, you must wait until the instrument reaches a temperature **below 50°C/122°F** before you switch it off.



Below 0°C/32°F

(applies only to the RTC-156/157/158/159/168/187 A/B/C models)

- **Do not** touch the well or insertion tube when these are below 0°C/32°F - they might create frostbite.
- If the calibrator has reached a temperature below 0°C/32°F, ice crystals may form on the insertion tube and on the well. This, in turn, may cause the material surfaces to oxidize.
To prevent this from happening, the insertion tube and the well must be dried. This is done by heating up the calibrator to min. 100°C/212°F until all water left has evaporated.

Remove the insulation plug while heating up.


It is very important that humidity in the well and insertion tube is removed to prevent corrosion and frost expansion damages.

1. Switch off the calibrator using the power control switch.

Note that the calibration procedure may be interrupted at any time using the power control switch. Switching off the calibrator during the calibration process will not damage either the instrument or the sensor.

2. Remove the insertion tube from the calibrator using the tool for insertion tube supplied with the instrument as shown in fig. 9.

Fig. 9
Removing insertion tube

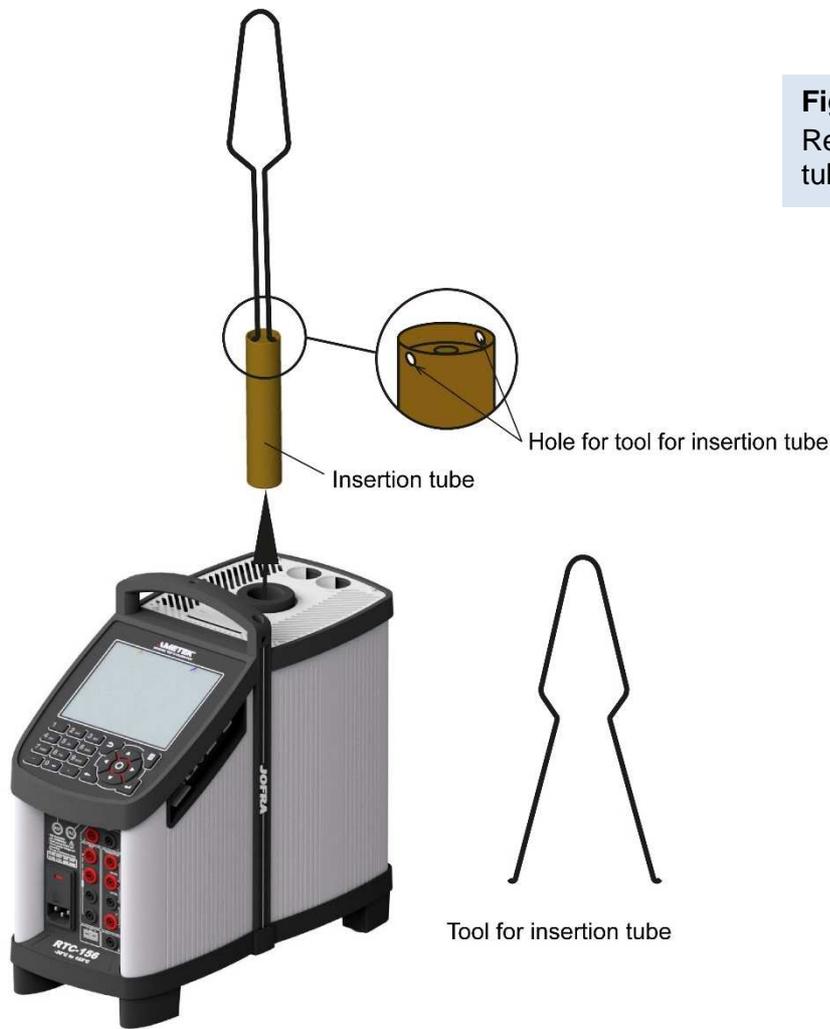

Caution – Hot surface

Do not remove the insert from the calibrator before the insert has cooled down to less than 50°C/122°F.



Caution...

The insertion tube must **always** be removed from the calibrator after use.

The humidity in the air may cause corrosion oxidation on the insertion tube inside the instrument. There is a risk that the insertion tube may get stuck if this is allowed to happen.



Warning (all versions)

- **Never** leave hot insertion tubes that have been removed from the calibrator unsupervised – they may constitute a fire hazard or personal injury.

If you intend to store the calibrator in the optional protection carrying case after use, you **must** ensure that the instrument has cooled to a temperature **below 50°C/122°F** before placing it in the carrying case.

- **Never** place a hot insertion tube in the optional carrying case.
- **Do not** touch the well or insertion tube when these are deep frozen – they might create frostbite.

6.1.1 Transporting the dry-block calibrator



Caution...

The insertion tube **must** be removed to avoid damage to the instrument if the calibrator is to be transported long distances.

6.1.2 Transporting the liquid bath calibrator



Warning

Do not move the liquid bath calibrator containing hot fluid. When spilled the fluid might cause serious wounds. Before transporting the fluid it must be cooled down to a temperature near ambient.

When the fluid has cooled down it is possible to move the liquid bath calibrator by hand. The special designed lid must be used to reduce the risk of spilling.



Note...

Please be aware that the lid used for the RTC-158/250 instruments is not completely fluid tight. The oil might leak through the drainage hole in the lid. For the RTC-168 instrument, however, a fluid tight lid is available. The lid comes with a security valve, which, in case of overpressure, will let the air pass.



RTC-158 with transportation lid



RTC-168 with fluid tight transportation lid

For any longer form of transportation the fluid **must** be removed (see section 6.2).

6.2 Emptying the well (liquid baths only)

It is not recommendable to leave the fluid in the well for long-term storage. The best way to store the fluid is in its original airtight container.



Caution – Hot surface

- **Do not** handle hot fluid.
- **Do not** attempt to remove hot fluid with the liquid drainage tube, as it might melt.
- **Do not** leave any fluid (silicone oil) in the spill tray.
- **Do not** touch the items removed from the well – they may be very hot and cause burns.

- **Never** leave hot items, which have been removed from the well, unsupervised – they may constitute a fire hazard or personal injury.

The following guidelines must be observed before emptying the well :

1. Switch off the calibrator using the power control switch.
2. Before handling the fluid, it must be cooled down to a temperature close to ambient.
3. Remove the sensor basket and clean it with disposable paper towels.
4. Remove the stirring magnet using the stirring magnet remover supplied and clean it with disposable paper towels (RTC-158 and RTC-250 only).
5. Empty the well using the liquid drainage tube supplied. Tilting the calibrator is not recommendable, as it increases the risk of splashing oil all over the test area.



Caution...

Avoid getting silicone oil on the clothes. It is impossible to wash off.

6. Any remaining oil in the well is cleaned up using disposable paper towels. It is recommendable to use the optional cleaning oil when cleaning the well

7.0 Error messages (List of alarms)



Warning

The calibrator **must** be switched off before any attempt to service the instrument is made. There are no user serviceable parts inside the calibrator.



Note...

If the software detects an error during operation, the error will be shown in the display. Make a note of the error message and contact your distributor or AMETEK Denmark's service department.

AMETEK Denmark's liability ceases if:

- parts are replaced/repared using spare parts which are not identical to those recommended by the manufacturer.
- non-original parts are used in any way when operating the instrument.
AMETEK Denmark's liability is restricted to errors which originated from the factory.

Error messages are displayed in a dialog box with the following text:

<p>Internal Error # xxx Please read the manual for further information</p>

Error #	Error text	Category	Solution
0	Read temperature lower than calibrator minimum temperature.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.
1	Read temperature higher than calibrator maximum temperature.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.
2	Read temperature higher than current SET-temperature.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.
3	Top Zone temperature deviation.	Warning	The calibrator could be stressed due to the insertion of too many sensors. Remove some of the sensors. If the error still occurs please report the error to your local distributor or to AMETEK Denmark's service department.
4	Internal reference measuring circuit error.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.
5	Internal reference sensor error.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.
6	Zone 2 sensor error.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.
7	Zone 1 sensor error.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.

Error #	Error text	Category	Solution
8	Heater 1 error.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.
9	Heater 2 error.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.
10	Heater 3 error.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.
11	Heater 4 error.	Warning	Please report the error to your local distributor or to AMETEK Denmark's service department.
12	Heater control error	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
13	Temperature protection	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
14	Temperature protection Stirling unit	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
15	Stirling unit error	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
16	Stirling unit Temperature too high	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
17	Top zone read temperature lower than calibrator minimum temperature.	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
18	Top zone read temperature higher than calibrator maximum temperature.	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
19	Bottom zone read temperature lower than calibrator minimum temperature.	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
20	Bottom zone read temperature higher than calibrator maximum temperature.	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
21	Bottom zone temperature deviation.	Error	The calibrator could be stressed due to the insertion of too many sensors. Remove some of the sensors. If the error still occurs, please report the error to your local distributor or to AMETEK Denmark's service department.
22	Ambient temperature sensor error.	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
23	Stirling unit error	Error	Check air inlet and outlet for obstructions. Replace air inlet filter if needed. If error persists, please report the error to your local distributor or to AMETEK Denmark's service department.
100	Sensor input board error.	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.

Error #	Error text	Category	Solution
101	The sensor input board has not been calibrated.	Error	The sensor inputs (mA/Ω/mV/V) needs to be calibrated. Please report the error to your local distributor or to AMETEK Denmark's service department.
102	Reference input board error.	Error	Please report the error to your local distributor or to AMETEK Denmark's service department.
103	The reference input board has not been calibrated	Error	The reference input needs to be calibrated. Please report the error to your local distributor or to AMETEK Denmark's service department
104	The calibration for the heat source has expired.	Warning	Calibrate the heat source
105	The calibration for the sensor input board has expired.	Warning	Calibrate the sensor input (mA/Ω/mV/V)
106	The calibration for the reference input board has expired.	Warning	Calibrate the reference input
107	The calibration for the external reference sensor has expired.	Warning	Calibrate the external reference sensor
108	The calibration for the DLC has expired.	Warning	The instrument needs to be calibrated
109	Heat source not calibrated	Error	The instrument needs to be recalibrated.



Note...

Errors that are critical to safety and the calibrator remain on the Info screen until the instrument has been switched off and on again.

8.0 Returning the calibrator for service

When returning the calibrator to the manufacturer for service, please enclose a fully completed service information form. Simply copy the form on the following page and fill in the required information.

The calibrator should be returned in the original packing.

The RTC-159 contains the flammable refrigerating gas R-1270 and the gas R-704. The amount of gas is less than 100g and it is considered not subject to the Dangerous Goods Regulations. However, this must be declared when shipping.

When dispatching the RTC-159 please mark the package and the shipping papers with this text:

*** NOT RESTRICTED , SPECIAL PROVISION A103 ***

Service info

Customer data:

Date:

Customer name and address: _____

Attention and dept.: _____

Fax no./phone no.: _____

Your order no.: _____

Delivery address: _____

Distributor name: _____

Instrument data:

Model and serial no.: _____

Warranty claimed Yes: _____ No: _____ Original invoice no.: _____

Temp. calibration	Sensor input	Service request:	This instrument is sent for (please check off):
<input type="checkbox"/>	<input type="checkbox"/>	___ Calibration as left	___ Check
<input type="checkbox"/>	<input type="checkbox"/>	___ Calibration as found and as left	___ Service
<input type="checkbox"/>	<input type="checkbox"/>	___ Accredited calibration as left	___ Repair
<input type="checkbox"/>	<input type="checkbox"/>	___ Accredited calibration as found and as left.	

Diagnosis data/cause for return:

Diagnosis/fault description: _____

Special requests: _____

Safety precautions: if the product has been exposed to any hazardous substances, it must be thoroughly decontaminated before it is returned to AMETEK Denmark A/S. Details of the hazardous substances and any precautions to be taken must be enclosed.

9.0 Maintenance


9.1 Replacing the main fuses



Warning

- The calibrator **must** be switched off before any attempt to service the instrument is made. There are no user serviceable parts inside the calibrator.
- The fuse box **must not** be removed from the power control switch until the mains cable has been disconnected.
- The two main fuses must have the specified current and voltage rating and be of the specified type. The use of makeshift fuses and the short-circuiting of fuse holders are prohibited and may cause a hazard.

Fig. 10
Replacing fuses

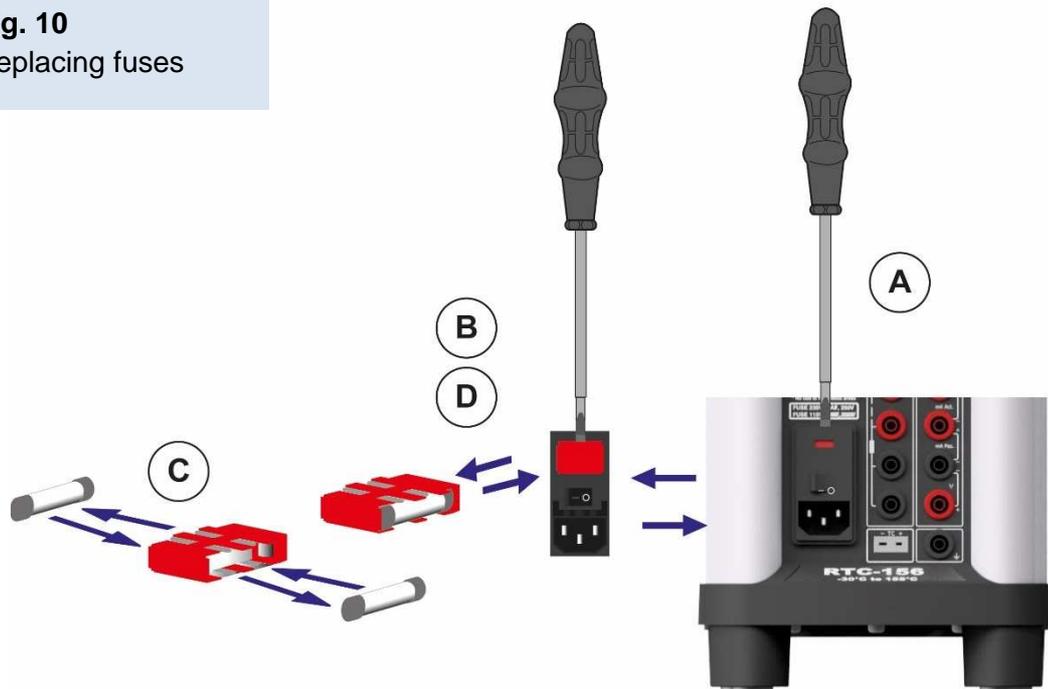

- Locate the main fuses in the fuse box in the power control switch and check the voltage of the power control switch (on/off switch (230V/115V)). If the voltage of the power control switch differs from the line voltage, you must adjust the voltage of the power control switch.
- Open the lid of the fuse box using a screwdriver and remove the fuse box.
- Replace the fuses. The fuses must be identical and should correspond to the line voltage.
 - RTC-156/157/158/159/168/187: 115V 8AT = 127211 / 230V, 4AT = 127210
 - RTC-250/700: 115V, 10AF = 60B302 / 230V, 5AF = 127573

If the fuses blow immediately after you have replaced them, the calibrator should be returned to the manufacturer for service.

- Slide the fuse box into place with the correct voltage turning upwards.

9.2 Cleaning



Caution...

- Before cleaning the calibrator, you **must** switch it off, allow it to cool down and remove all cables.
- The insertion tube must **always** be removed from the calibrator after use.
The humidity in the air may cause corrosion oxidation on the insertion tube inside the instrument. There is a risk that the insertion tube may get stuck if this is allowed to happen.



Caution – Hot surface

Do not remove the insert from the calibrator before the insert has cooled down to less than 50°C/122°F



Warning (all versions)

- **Never** leave hot insertion tubes that have been removed from the calibrator unsupervised – they may constitute a fire hazard or personal injury.

If you intend to store the calibrator in the optional aluminium carrying case after use, you **must** ensure that the instrument has cooled to a temperature **below 50°C/122°F** before placing it in the carrying case.

- **Do not** touch the well or insertion tube when these are deep frozen – they might create frostbite.

Users should/must carry out the following cleaning procedures as and when required:

- **The exterior of the instrument** – Clean using water or isopropyl alcohol and a soft cloth. The cloth should be wrung out hard to avoid any water penetrating the calibrator and causing damage.
The keyboard may be cleaned using isopropyl alcohol when heavily soiled.
- If hazardous material is spilled onto or into the calibrator, the user is responsible for appropriate decontamination.
- Before using any decontamination or cleaning agents other than those specified in this manual, the user should check with AMETEK to ensure compatibility with the calibrator. Use of decontamination or cleaning agents incompatible with the calibrator may damage the calibrator or cause hazard.
- **The insertion tube** – must **always** be clean and should be regularly wiped using a soft, lint-free, dry cloth.
You must ensure there are no textile fibres on the insertion tube when it is inserted in the well. The fibres may adhere to the well and damage it.
If the calibrator has reached a temperature below 0°C/32°F, ice crystals may form on the insertion tube. This, in turn, may cause the material surfaces to oxidize.
To prevent this from happening, the insertion tube must be dried. This is done by heating up the calibrator to min. 100°C/212°F until all water left has evaporated.
Remove the insulation plug while heating up.
It is very important that humidity in the insertion tube is removed to prevent corrosion and frost expansion damages.

- **The well** – must **always** be clean.
Dust and textile fibres in the well should be removed from the dry-block calibrator using e.g. compressed air.
Remains of silicone oil in the well should be removed from the liquid bath calibrator by using special cleaning oil.



Warning

REMEMBER to wear goggles when using compressed air and cleaning oil.

If the calibrator has reached a temperature below 0°C/32°F, ice crystals may form on the well. This, in turn, may cause the material surfaces to oxidize.

To prevent this from happening, the well must be dried. This is done by heating up the calibrator to min. 100°C/212°F until all water left has evaporated.

Remove the insulation plug while heating up.

It is very important that humidity in the well is removed to prevent corrosion and frost expansion damages.

- **The stirring magnet and sensor basket (RTC-158/168/250 A/B/C only)** – When removed from the calibrator the items must be cleaned thoroughly with dry disposable paper towels to avoid spilling of fluid. Drops of silicone oil can be removed by using special cleaning oil.
- **The sensor-under-test (RTC-158/168/250 A/B/C only)** – When removed from the calibrator the sensor must be cleaned thoroughly with dry disposable paper towels to avoid spilling of fluid. Drops of silicone oil can be removed by using special cleaning oil.



Caution...

Avoid getting silicone oil on the clothes. It is impossible to wash off.

9.3 Adjusting and calibrating the instrument

You are advised to return the calibrator to AMETEK Denmark A/S or another accredited laboratory at least once a year for calibration.

Alternatively, you can calibrate/adjust the calibrator yourself using the AmeTrim Adjust and Calibration Software.

Please refer to the Ametrim User Manual also found on the installation USB memory stick.

9.4 Maintenance of STS-reference sensor

Use the configuration software CON050 supplied with the RTC to update calibration information in the intelligent reference sensor.

Read the STS- and CON050 manuals for instruction about calibration and up-/download procedure.

The following information in the sensor is used by the RTC and must be filled in correctly:

- Serial number
- Model number
- Sensor type
- Temperature range Min/Max
- Electrical output Min/Max
- RTD type (CvD or ITS-90)
- Calibration date
- Calibration initials
- Calibration period
- R0, A, B and C (RTD type = CvD)
- RTPW, A(LR), B(LR)C(LR)/C1(LR), C2(LR), C3(LR), C4(LR), C5(LR) A(HR), B(HR), C(HR), D(HR) and W(HR) (RTD type = ITS-90)

All other data are not used by the RTC.

On the sensor calibration certificates, the coefficients can be listed using the ITS-90 names for coefficients. The table below can be used to convert the ITS-90 coefficient names to RTC-coefficient names for the ITS-90 subranges used in the RTC-calibrator temperature range.

		ITS90 Subrange								
		3	4	5	6	7	8	9	10	11
RTC coefficient	A(LR)	a3	a4	0						
	B(LR)	b3	b4	0						
	C(LR)/C1(LR)	c3	0	0						
	A(HR)			a5	a6	a7	a8	a9	a10	a11
	B(HR)			b5	b6	b7	b8	b9	0	0
	C(HR)			0	c6	c7	0	0	0	0
	D(HR)			0	d	0	0	0	0	0
	W				w					

9.5 Maintenance of DLC-sensor

Use the configuration software CON050 supplied with the RTC to update calibration information in the intelligent reference sensor.

Read the DLC- and CON050 manuals for instruction about calibration and up-/download procedure.

The following information in the sensor is used by the RTC and must be filled in correctly:


- Serial number
- Model number
- Sensor type
- Temperature range Min/Max
- Electrical output Min/Max
- TC-type (DLC-155/158/159/250 = T, DLC-700 = N)
- CJC (Must be set to "No compensation")
- Calibration date
- Calibration initials
- Calibration period
- Correction coefficients A, B and C

All other data are not used by the RTC.

9.6 Testing the overtemperature function

It is recommended to test the overtemperature function every 12 months. The test is carried out as follows:

1. In the “Calibrator Setup” menu, set the “Max. SET temperature” to the maximum temperature of the calibrator.

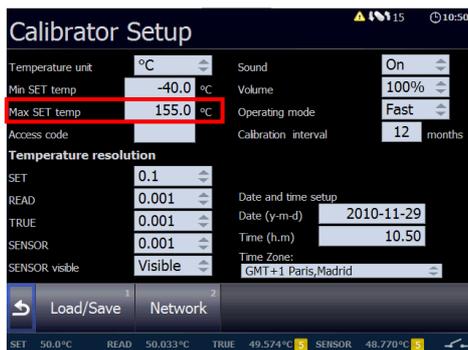

2. Press “Menu”  and set the SET temperature to the maximum value.
3. Let the calibrator heat to and stabilize at the maximum temperature.
4. Set the “Max. SET temperature” of the calibrator to 50°C below the maximum temperature of the calibrator.
If the Read temperature now starts decreasing, the overtemperature function is working properly.
5. Set the “Max. SET temperature” back to the maximum temperature of the calibrator and turn off/on the calibrator.
6. When powered up again, the calibrator will operate normally.

10.0 Technical specifications

The list below shows the setup that forms the basis for the technical specifications for :

Dry-block calibrators

- Calibrator
- Ø1/4" insertion tube
- Insulation plug with silicone plugs (RTC-156/157/158/159/168/187/250 only)
- 1/4" STS-200 sensor
- Reference thermometer (e.g. DTI-1000)

The list below shows the setup that forms the basis for the technical specifications for :

Liquid bath calibrators

- Calibrator
- Bottom shield
- Stirring magnet
- Sensor basket
- Lid for calibration
- 1/4" STS-200 sensor
- Reference thermometer (e.g. DTI-1000)

TECHNICAL SPECIFICATIONS

All specifications are given with an ambient temperature of 23°C/73.4°F ± 3°C/5.4°F

MECHANICAL SPECIFICATIONS	RTC-156 A/B/C
Dimensions l × w × h	362 × 171 × 363 mm / 14.2 x 6.7 x 14.3 inch
Weight	RTC-156 A : 10.4 kg / 23.0 lb RTC-156 B/C : 10.5 kg / 23.1 lb
Shipping dimensions	580 x 250 x 500mm / 22.8 x 9.8 x 19.7 inch (Cardboard box) 550 x 440 x 610mm / 21.7 x 17.3 x 24.0 inch (Carrying case in cardboard box)
Shipping weight	14.8 kg / 32.6 lb (in cardboard box) 20.5 kg / 45.2 lb (in carrying case in cardboard box)
Bore diameter/depth of well	ø30 mm / 150 mm – ø1.18 inch / 5.91 inch
Weight non-drilled insert	290 g / 10.2 oz
POWER SUPPLY	
Line voltage/frequency	90-127VAC / 180-254VAC 47-63 Hz
Power consumption	400 W
Type of connection	IEC320
COMMUNICATION INTERFACES	
Type of connections	USB A, USB B, SD card slot, RJ45
OTHER CONNECTIONS	
Synchronisation relay output	3,5 mm mini jack.
ENVIRONMENT	
Ambient operating temperature range	0-40°C / 32-104°F
Storage temperature range	-20-50°C / -4-122°F
Humidity range	0-90% RH.
Protection class	IP10
Electromagnetic environment	Designed for use in basic electromagnetic environment as defined in EN61326-1 : 2013. Length of test cables should not exceed 3 m.
READOUT SPECIFICATIONS	
Resolution	0.001°C / 0.001°F / 0.001 K
Temperature units	°C / °F / K
THERMAL SPECIFICATIONS	
RTC-156 A/B/C	
Maximum temperature	155°C / 311°F
Minimum temperature *	-46°C / -50.8°F @ ambient temperature 0°C / 32°F -30°C / -22.0°F @ ambient temperature 23°C / 73.4°F -15°C / -5.0°F @ ambient temperature 40°C / 104°F

Well specifications

Loaded with 2 x 3mm sensors:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

Loaded with 3 x 3mm sensors + 1 x 4mm sensors:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

THERMAL SPECIFICATIONS**RTC-156 A/B/C**

Well specifications

60 mm / 2.36 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.060^{\circ}\text{C}/0.11^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.070^{\circ}\text{C}/0.13^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

Loaded with 3 x 3mm sensors + 1 x 4mm sensor and 1 x 6 mm sensor

DLC active:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.045^{\circ}\text{C}/0.081^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

THERMAL SPECIFICATIONS**RTC-156 A/B/C**

Well specifications	70 mm / 2.76 inch axial uniformity: ±0.045°C/0.081°F @ 50°C/122°F to 155°C/311°F
	80 mm / 3.15 inch axial uniformity: ±0.060°C/0.11°F @ -30°C/-22°F to 0°C/32°F
	80 mm / 3.15 inch axial uniformity: ±0.050°C/0.09°F @ 0°C/32°F to 50°C/122°F
	80 mm / 3.15 inch axial uniformity: ±0.060°C/0.11°F @ 50°C/122°F to 155°C/311°F
	<u>Difference between borings :</u> 0.01°C/0.02°F
	<u>Influence from load :</u> 0.10°C/0.18°F
	<u>Influence from load with Ext. Reference :</u> 0.01°C/0.02°F
	<u>Long term drift (1 year) :</u> ±0.04°C/±0.07°F
Temperature coefficient	±0.005°C/°C (0-20°C and 26-40°C) / ±0.009°F/°F (32-68°F and 79-104°F)
Stability	±0.005°C/ ±0.009°F
Accuracy	±0.10°C/±0.18°F
Heating time incl. insert	-30°C / -22.0°F to 23°C / 73.4°F : 4 min. 23°C / 73.4°F to 155°C / 311°F : 15 min. -30°C / -22.0°F to 155°C / 311°F : 19 min.
Time to stability	10 min.
Cooling time incl. insert	155°C / 311°F to 100°C / 212°F: 4 min. 100°C / 212°F to 23°C / 73.4°F: 8 min. 23°C / 73.4°F to -24°C / -11.2°F : 15 min. -24°C / -11.2°F to -30°C / -22.0°F: 10 min. 155°C / 311°F to -30°C / -22.0°F : 37 min.

MECHANICAL SPECIFICATIONS**RTC-157 A/B/C**

Dimensions l × w × h	362 × 171 × 363 mm / 14.2 x 6.7 x 14.3 inch
Weight	RTC-157 A : 10.4 kg / 23.0 lb RTC-157 B/C : 10.5 kg / 23.1 lb
Shipping dimensions	580 x 250 x 500mm / 22.8 x 9.8 x 19.7 inch (Cardboard box) 550 x 440 x 610mm / 21.7 x 17.3 x 24.0 inch (Carrying case in cardboard box)
Shipping weight	14.8 kg / 32.6 lb (in cardboard box) 20.5 kg / 45.2 lb (in carrying case in cardboard box)
Bore diameter/depth of well	ø30 mm / 150 mm – ø1.18 inch / 5.91 inch
Weight non-drilled insert	290 g / 10.2 oz

MECHANICAL SPECIFICATIONS **RTC-157 A/B/C**

POWER SUPPLY

Line voltage/frequency	90-127VAC / 180-254VAC 47-63 Hz
Power consumption	400 W
Type of connection	IEC320

COMMUNICATION INTERFACES

Type of connections	USB A, USB B, SD card slot, RJ45
---------------------	----------------------------------

OTHER CONNECTIONS

Synchronisation relay output	3,5 mm mini jack.
------------------------------	-------------------

ENVIRONMENT

Ambient operating temperature range	0-40°C / 32-104°F
-------------------------------------	-------------------

Storage temperature range	-20-50°C / -4-122°F
---------------------------	---------------------

Humidity range	0-90% RH.
----------------	-----------

Protection class	IP10
------------------	------

Electromagnetic environment	Designed for use in basic electromagnetic environment as defined in EN61326-1 : 2013. Length of test cables should not exceed 3 m.
-----------------------------	--

READOUT SPECIFICATIONS

Resolution	0.001°C / 0.001°F / 0.001 K
------------	-----------------------------

Temperature units	°C / °F / K
-------------------	-------------

THERMAL SPECIFICATIONS **RTC-157 A/B/C**

Maximum temperature	155°C / 311°F
---------------------	---------------

Minimum temperature *	-57°C / -70.6°F @ ambient temperature 0°C / 32°F
	-45°C / -49°F @ ambient temperature 23°C / 73.4°F
	-31°C / -23.8°F @ ambient temperature 40°C / 104°F

*The minimum temperature will be affected by the number of sensors and the dimensions of the sensors being calibrated.

Well specifications

Loaded with 2 x 3mm sensors:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.070^{\circ}\text{C}/1.26^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.070^{\circ}\text{C}/1.26^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

Loaded with 3 x 3mm sensors + 1 x 4mm sensors:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

Well specifications

60 mm / 2.36 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.070^{\circ}\text{C}/1.26^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.070^{\circ}\text{C}/1.26^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.120^{\circ}\text{C}/0.216^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.120^{\circ}\text{C}/0.216^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

Loaded with 3 x 3mm sensors + 1 x 4mm sensor and 1 x 6 mm sensor

DLC active:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.045^{\circ}\text{C}/0.081^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.045^{\circ}\text{C}/0.081^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.060^{\circ}\text{C}/0.11^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

THERMAL SPECIFICATIONS**RTC-157 A/B/C**

Well specifications

70 mm / 2.76 inch axial uniformity:
±0.060°C/0.11°F @ 50°C/122°F to 155°C/311°F80 mm / 3.15 inch axial uniformity:
±0.100°C/0.18°F @ -45°C/-49°F to 0°C/32°F80 mm / 3.15 inch axial uniformity:
±0.050°C/0.09°F @ 0°C/32°F to 50°C/122°F80 mm / 3.15 inch axial uniformity:
±0.100°C/0.18°F @ 50°C/122°F to 155°C/311°FDifference between borings :

0.01°C (0.02°F)

Influence from load :

0.10°C (0.18°F)

Influence from load with Ext. Reference :

0.01°C / 0.02°F

Long term drift (1 year) :

±0.04°C / ±0.07°F

Temperature coefficient

±0.005°C/°C (0-20°C and 26-40°C) / ±0.009°F/°F (32-68°F and 79-104°F)

Stability

±0.005°C / ±0.009°F

Accuracy

±0.10°C / ±0.18°F

Heating time incl. insert

-45°C / -49.0°F to 23°C / 73.4°F : 7 min.

23°C / 73.4°F to 100°C / 212°F : 8 min.

100°C / 212°F to 155°C / 311°F : 9 min.

-45°C / -49.0°F to 155°C / 311°F : 24 min.

Time to stability

10 min.

Cooling time incl. insert

155°C / 311°F to 100°C / 212°F: 5 min.

100°C / 212°F to 23°C / 73.4°F: 10 min.

23°C / 73.4°F to -0°C / 32°F : 5 min.

0°C / 32°F to -30°C / -22.0°F : 12 min.

-30°C / -22.0°F to -45°C / -49.0°F: 25 min.

155°C / 311°F to -45°C / -49.0°F : 57 min.

MECHANICAL SPECIFICATIONS**RTC-158 A/B/C**

Dimensions l × w × h

366 × 171 × 363 mm / 14.4 x 6.7 x 14.3 inch

Weight

RTC-158 A : 10.9 kg / 24.0 lb

RTC-158 B/C : 11.0 kg / 24.3 lb

Shipping dimensions

580 x 250 x 500mm / 22.8 x 9.8 x 19.7 inch (Cardboard box)

550 x 430 x 660mm / 21.7 x 16.9 x 26.0 inch (Carrying case in cardboard box)

MECHANICAL SPECIFICATIONS	RTC-158 A/B/C
Shipping weight	RTC-158 A : 16.9 kg / 37.2 lb (in cardboard box) RTC-158 B/C : 17.0 kg / 37.5 lb (in cardboard box) RTC-158 A : 27.9 kg / 61.5 lb (in carrying case in cardboard box) RTC-158 B/C : 28.0 kg / 61.7 lb (in carrying case in cardboard box)
Bore diameter/depth of well	Ø63.8 mm / 160 mm – ø2.5 inch / 6.3 inch
Weight non-drilled insert	1200 g / 42.3 oz
POWER SUPPLY	
Line voltage/frequency	90-127VAC / 180-254VAC 47-63 Hz
Power consumption	400 W
Type of connection	IEC320
COMMUNICATION INTERFACES	
Type of connections	USB A, USB B, SD card slot, RJ45
OTHER CONNECTIONS	
Synchronisation relay output	3,5 mm mini jack.
ENVIRONMENT	
Ambient operating temperature range	0-40°C / 32-104°F
Storage temperature range	-20-50°C / -4-122°F
Humidity range	0-90% RH.
Protection class	IP10
Electromagnetic environment	Designed for use in basic electromagnetic environment as defined in EN61326-1 : 2013. Length of test cables should not exceed 3 m.
READOUT SPECIFICATIONS	
Resolution	0.001°C / 0.001°F / 0.001 K
Temperature units	°C / °F / K

THERMAL SPECIFICATIONS – DRY BLOCK	RTC-158 A/B/C
Maximum temperature	155°C / 311°F
Minimum temperature	-37°C / -34.6°F @ ambient temperature 0°C / 32°F -22°C / -7.6°F @ ambient temperature 23°C / 73.4°F -9°C / -15.8°F @ ambient temperature 40°C / 104°F

Well specifications

Loaded with 2 x 3mm sensors:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $-22^{\circ}\text{C}/-7.6^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $-22^{\circ}\text{C}/-7.6^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $-22^{\circ}\text{C}/-7.6^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $-22^{\circ}\text{C}/-7.6^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity :
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $-22^{\circ}\text{C}/-7.6^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.075^{\circ}\text{C}/0.135^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

Loaded with 3 x 3mm sensors + 1 x 4mm sensor and 1 x 6 mm sensor

DLC active:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-22^{\circ}\text{C}/-7.6^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-22^{\circ}\text{C}/-7.6^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

**THERMAL SPECIFICATIONS –
DRY BLOCK**

RTC-158 A/B/C

Well specifications

50 mm / 1.97 inch axial uniformity:
±0.035°C/0.063°F @ 50°C/122°F to 155°C/311°F

60 mm / 2.36 inch axial uniformity:
±0.035°C/0.063°F @ -22°C/-7.6°F to 0°C/32°F

60 mm / 2.36 inch axial uniformity:
±0.030°C/0.054°F @ 0°C/32°F to 50°C/122°F

60 mm / 2.36 inch axial uniformity:
±0.035°C/0.063°F @ 50°C/122°F to 155°C/311°F

70 mm / 2.76 inch axial uniformity:
±0.045°C/0.081°F @ -22°C/-7.6°F to 0°C/32°F

70 mm / 2.76 inch axial uniformity:
±0.040°C/0.072°F @ 0°C/32°F to 50°C/122°F

70 mm / 2.76 inch axial uniformity:
±0.045°C/0.081°F @ 50°C/122°F to 155°C/311°F

80 mm / 3.15 inch axial uniformity:
±0.060°C/0.11°F @ -22°C/-7.6°F to 0°C/32°F

80 mm / 3.15 inch axial uniformity:
±0.050°C/0.09°F @ 0°C/32°F to 50°C/122°F

80 mm / 3.15 inch axial uniformity:
±0.060°C/0.11°F @ 50°C/122°F to 155°C/311°F

Difference between borings:

0.05°C / 0.09°F @ 155°C / 311°F
0.03°C / 0.054°F @ -22°C / -8°F

Influence from load:

0.15°C / 0.27°F @ 155°C / 311°F
0.07°C / 0.13°F @ -22°C / -8°F

Influence from load with Ext. Reference :

0.04°C / 0.07°F @ 155°C / 311°F
0.04°C / 0.07°F @ -22°C / -8°F

Long term drift (1 year): ±0.05°C / ±0.09°F

Temperature coefficient

±0.010°C/°C (0-20°C and 26-40°C) /
±0.010°F/°F (32-68°F and 79-104°F)

Stability

±0.01°C / ±0.02°F

Total accuracy

±0.18°C / ±0.32°F

Heating time incl. insert

-22°C / -7.6°F to 23°C / 73.4°F : 9 min.
23°C / 73.4°F to 100°C / 212°F: 23 min.
100°C / 212°F to 155°C / 311°F: 28 min.
-22°C / -7.6°F to 155°C / 311°F : 60 min.

Time to stability

30 min.

Cooling time incl. insert

155°C / 311°F to 100°C / 212°F : 9 min
100°C / 212°F to 23°C / 73.4°F: 24 min.
23°C / 73.4°F to 0°C / 32°F: 15 min.

**THERMAL SPECIFICATIONS –
DRY BLOCK**

RTC-158 A/B/C

0°C / 32°F to –15°C / 5°F:	21 min.
–15°C / –5°F to –22°C / –7.6°F :	25 min.
155°C / 311°F to –22°C / –7.6°F :	94 min.

**THERMAL SPECIFICATIONS –
LIQUID BATHS****RTC-158 A/B/C**

Maximum temperature	155°C / 311°F
Minimum temperature	–37°C / –35°F @ ambient temperature 0°C / 32°F –22°C / –7.6°F @ ambient temperature 23°C / 73.4°F –9°C / –15.8°F @ ambient temperature 40°C / 104°F
Well specifications	40 mm / 1.57 inch axial uniformity: ±0,01°C/0.02°F @ 155°C/311°F ±0,01°C/0.02°F @ –22°C/–7.6°F 50 mm / 1.97 inch axial uniformity: ±0,01°C/0.02°F @ 155°C/311°F ±0,01°C/0.02°F @ –22°C/–7.6°F 60 mm / 2.36 inch axial uniformity: ±0,01°C/0.02°F @ 155°C/311°F ±0,02°C/0.02°F @ –22°C/–7.6°F 70 mm / 2.76 inch axial uniformity: ±0,03°C/0.02°F @ 155°C/311°F ±0,02°C/0.02°F @ –22°C/–7.6°F 80 mm / 3.15 inch axial uniformity: ±0,05°C/0.02°F @ 155°C/311°F ±0,03°C/0.02°F @ –22°C/–7.6°F Radial uniformity: 0.015°C/0.027°F <u>Influence from load:</u> 0.10°C/0.18°F @ 155°C/311°F 0.04°C/0.07°F @ –22°C/–7.6°F <u>Influence from load with ext. reference:</u> 0.02°C/0.04°F @ 155°C/311°F 0.02°C/0.04°F @ –22°C/–7.6°F Difference between insert/oil: 0.20°C/0.36°F Long term drift (1 year) : ±0.05°C/0.09°F
Temperature coefficient	0.010°C/°C (0-40°C) / 0.010°F/°F(32-104°F)
Stability	±0.01°C / ±0.02°F
Total accuracy (std. cal. with insert)	±0.30°C / ±0.54°F
Time to stability	15 min.

MECHANICAL SPECIFICATIONS**RTC-159 A/B/C**

Dimensions l × w × h	531 × 171 × 432mm / 20.9 x 6.7 x 17 inch
----------------------	--

MECHANICAL SPECIFICATIONS**RTC-159 A/B/C**

Weight	RTC-159 A : 15.0 kg / 33.1 lb RTC-159 B : 15.2 kg / 33.5 lb RTC-159 C : 15.1 kg / 33.3 lb
Bore diameter/depth of well	ø30 mm / 185 mm – ø1.18 inch / 7.28 inch
Insert dimensions	ø29.7 mm x 150 mm / ø1.17 inch / 5.91 inch
Sensor immersion depth :	
from top of insert	140 mm / 5.51 inch
from top of insulation plug	190 mm / 7.48 inch
Weight non-drilled insert	290 g / 10.2 oz

POWER SUPPLY

Line voltage/frequency	90-127VAC / 180-254VAC 47-63 Hz
Power consumption	450 VA
Type of connection	IEC320

COMMUNICATION INTERFACES

Type of connections	USB A, USB B, SD card slot, RJ45
---------------------	----------------------------------

OTHER CONNECTIONS

Synchronisation relay output	3,5 mm mini jack.
------------------------------	-------------------

ENVIRONMENT

Ambient operating temperature range	0-40°C / 32-104°F
Humidity range	0-90% RH.
Protection class	IP10
Electromagnetic environment	Designed for use in basic and industrial electromagnetic environment as defined in EN61326-1 : 2013. Length of test cables should not exceed 3 m.

READOUT SPECIFICATIONS

Resolution	0.001°C / 0.001°F / 0.001 K
Temperature units	°C / °F / K

THERMAL SPECIFICATIONS**RTC-159 A/B/C**

Maximum temperature	155°C / 311°F
Minimum temperature *	-100°C / -148°F @ ambient temperature 0°C / 32°F -100°C / -148°F @ ambient temperature 23°C / 73.4°F -83°C / -117.4°F @ ambient temperature 40°C / 104°F

*The minimum temperature will be affected by the number of sensors and the dimensions of the sensors being calibrated.

THERMAL SPECIFICATIONS**RTC-159 A/B/C**

Well specifications

Loaded with 2 x 3mm + 1 x 6mm sensors:

40 mm / 1.57 inch axial uniformity: $\pm 0.070^{\circ}\text{C}/0.126^{\circ}\text{F}$ @
-100°C/-148°F to 23°C/73.4°F

40 mm / 1.57 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
23°C/73.4°F to 125°C/257°F

40 mm / 1.57 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
125°C/257°F to 155°C/311°F

50 mm / 1.97 inch axial uniformity: $\pm 0.100^{\circ}\text{C}/0.18^{\circ}\text{F}$ @
-100°C/-148°F to 23°C/73.4°F

50 mm / 1.97 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
23°C/73.4°F to 125°C/257°F

50 mm / 1.97 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
125°C/257°F to 155°C/311°F

60 mm / 2.36 inch axial uniformity: $\pm 0.150^{\circ}\text{C}/0.27^{\circ}\text{F}$ @
-100°C/-148°F to 23°C/73.4°F

60 mm / 2.36 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
23°C/73.4°F to 125°C/257°F

60 mm / 2.36 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
125°C/257°F to 155°C/311°F

70 mm / 2.76 inch axial uniformity: $\pm 0.200^{\circ}\text{C}/0.36^{\circ}\text{F}$ @
-100°C/-148°F to 23°C/73.4°F

70 mm / 2.76 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
23°C/73.4°F to 125°C/257°F

70 mm / 2.76 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
125°C/257°F to 155°C/311°F

80 mm / 3.15 inch axial uniformity: $\pm 0.400^{\circ}\text{C}/0.72^{\circ}\text{F}$ @
-100°C/-148°F to 23°C/73.4°F

80 mm / 3.15 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
23°C/73.4°F to 125°C/257°F

80 mm / 3.15 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
125°C/257°F to 155°C/311°F

Loaded with 3 x 3mm sensors + 1 x 4mm sensor and 1 x 6 mm sensorDLC active:

40 mm / 1.57 inch axial uniformity: $\pm 0.070^{\circ}\text{C}/0.126^{\circ}\text{F}$ @
-100°C/-148°F to 23°C/73.4°F

40 mm / 1.57 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
23°C/73.4°F to 125°C/257°F

40 mm / 1.57 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
125°C/257°F to 155°C/311°F

50 mm / 1.97 inch axial uniformity: $\pm 0.100^{\circ}\text{C}/0.18^{\circ}\text{F}$ @
-100°C/-148°F to 23°C/73.4°F

50 mm / 1.97 inch axial uniformity: $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @
23°C/73.4°F to 125°C/257°F

THERMAL SPECIFICATIONS**RTC-159 A/B/C**

Well specifications	50 mm / 1.97 inch axial uniformity:	$\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ 125°C/257°F to 155°C/311°F
	60 mm / 2.36 inch axial uniformity:	$\pm 0.150^{\circ}\text{C}/0.27^{\circ}\text{F}$ @ -100°C/-148°F to 23°C/73.4°F
	60 mm / 2.36 inch axial uniformity:	$\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ 23°C/73.4°F to 125°C/257°F
	60 mm / 2.36 inch axial uniformity:	$\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ 125°C/257°F to 155°C/311°F
	70 mm / 2.76 inch axial uniformity:	$\pm 0.200^{\circ}\text{C}/0.36^{\circ}\text{F}$ @ -100°C/-148°F to 23°C/73.4°F
	70 mm / 2.76 inch axial uniformity:	$\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ 23°C/73.4°F to 125°C/257°F
	70 mm / 2.76 inch axial uniformity:	$\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ 125°C/257°F to 155°C/311°F
	80 mm / 3.15 inch axial uniformity:	$\pm 0.400^{\circ}\text{C}/0.72^{\circ}\text{F}$ @ -100°C/-148°F to 23°C/73.4°F
	80 mm / 3.15 inch axial uniformity:	$\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ 23°C/73.4°F to 125°C/257°F
	80 mm / 3.15 inch axial uniformity:	$\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ 125°C/257°F to 155°C/311°F
	<u>Difference between borings :</u>	
	0.01°C / 0.02°F	
	<u>Influence from load :</u>	
	0.20°C / 0.36°F @ -100°C / -148°F 0.05°C / 0.09°F @ 155°C / 311°F	
<u>Influence from load with Ext. Reference :</u>		
0.01°C / 0.02°F		
Long term drift (1 year) : $\pm 0.10^{\circ}\text{C}$ / $\pm 0.18^{\circ}\text{F}$		
Temperature coefficient	$\pm 0.005^{\circ}\text{C}/^{\circ}\text{C}$ (0-20°C and 26-40°C) / $\pm 0.009^{\circ}\text{F}/^{\circ}\text{F}$ (32-68°F and 79-104°F)	
Stability	$\pm 0.030^{\circ}\text{C}$ / $\pm 0.054^{\circ}\text{F}$	
Accuracy	$\pm 0.30^{\circ}\text{C}$ / $\pm 0.54^{\circ}\text{F}$	
Heating time incl. insert	-100°C / -148.0°F to 23°C / 73.4°F :12 min. 23°C / 73.4°F to 155°C / 311°F : 14 min. -100°C / -148°F to 155°C / 311°F 26 min.	
Time to stability	10 min.	
Cooling time incl. insert	155°C / 311°F to 23°C / 73.4°F: 40 min. 155°C / 311°F to -100°C / -148°F: 180 min. 23°C / 73.4°F to -80°C / -112°F : 65 min. -80°C / -112°F to -90°C / -130°F 20 min. -90°C / -130°F to -100°C / -148°F: 50 min. 23°C / 73.4°F to -100°C / -148°F : 135 min.	

THERMAL SPECIFICATIONS**RTC-159 A/B/C**

Refrigerants	R-704 (Helium) : 8 g / 0.3 oz
	R-1270 (Propylene) : 8 g / 0.3 oz

MECHANICAL SPECIFICATIONS**RTC-168 A/B/C**

Dimensions l × w × h	366 × 171 × 363 mm / 14.4 x 6.7 x 14.3 inch
Weight	RTC-168 A : 10.8 kg / 23.2 lb RTC-168 B/C : 10.9 kg / 24.0 lb
Shipping dimensions	580 x 250 x 500mm / 22.8 x 9.8 x 19.7 inch (Cardboard box) 550 x 430 x 660mm / 21.7 x 16.9 x 26.0 inch (Carrying case in cardboard box)
Shipping weight	RTC-168 A : 16.9 kg / 37.2 lb (in cardboard box) RTC-168 B/C : 17.0 kg / 37.5 lb (in cardboard box) RTC-168 A : 27.9 kg / 61.5 lb (in carrying case in cardboard box) RTC-168 B/C : 28.0 kg / 61.7 lb (in carrying case in cardboard box)
Bore diameter/depth of well	Ø63.8 mm / 160 mm – ø2.5 inch / 6.3 inch
Weight non-drilled insert	1200 g / 42.3 oz

POWER SUPPLY

Line voltage/frequency	90-127VAC / 180-254VAC 47-63 Hz
Power consumption	500 VA
Type of connection	IEC320

COMMUNICATION INTERFACES

Type of connections	USB A, USB B, SD card slot, RJ45
---------------------	----------------------------------

OTHER CONNECTIONS

Synchronisation relay output	3,5 mm mini jack.
------------------------------	-------------------

ENVIRONMENT

Ambient operating temperature range	0-40°C / 32-104°F
Storage temperature range	-20-50°C / -4-122°F

Humidity range	0-90% RH.
----------------	-----------

Protection class	IP10
------------------	------

Electromagnetic environment	Designed for use in basic electromagnetic environment as defined in EN61326-1 : 2013. Length of test cables should not exceed 3 m.
-----------------------------	--

READOUT SPECIFICATIONS

Resolution	0.001°C / 0.001°F / 0.001 K
Temperature units	°C / °F / K

**THERMAL SPECIFICATIONS –
DRY BLOCK****RTC-168 A/B/C**

Maximum temperature

165°C / 329°F

Minimum temperature

-30°C / -22°F @ ambient temperature 0°C / 32°F

-30°C / -22°F @ ambient temperature 23°C / 73.4°F

-17°C / 1.4°F @ ambient temperature 40°C / 104°F

Well specifications

Loaded with 2 x 3mm sensors:

40 mm / 1.57 inch axial uniformity:

±0.025°C/0.045°F @ -30°C/-22°F to 0°C/32°F

40 mm / 1.57 inch axial uniformity:

±0.020°C/0.036°F @ 0°C/32°F to 50°C/122°F

40 mm / 1.57 inch axial uniformity:

±0.030°C/0.054°F @ 50°C/122°F to 165°C/329°F

50 mm / 1.97 inch axial uniformity:

±0.025°C/0.045°F @ -30°C/-22°F to 0°C/32°F

50 mm / 1.97 inch axial uniformity:

±0.020°C/0.036°F @ 0°C/32°F to 50°C/122°F

50 mm / 1.97 inch axial uniformity:

±0.030°C/0.054°F @ 50°C/122°F to 165°C/329°F

60 mm / 2.36 inch axial uniformity:

±0.025°C/0.045°F @ -30°C/-22°F to 0°C/32°F

60 mm / 2.36 inch axial uniformity:

±0.020°C/0.036°F @ 0°C/32°F to 50°C/122°F

60 mm / 2.36 inch axial uniformity:

±0.030°C/0.054°F @ 50°C/122°F to 165°C/329°F

70 mm / 2.76 inch axial uniformity:

±0.025°C/0.045°F @ -30°C/-22°F to 0°C/32°F

70 mm / 2.76 inch axial uniformity:

±0.025°C/0.045°F @ 0°C/32°F to 50°C/122°F

70 mm / 2.76 inch axial uniformity:

±0.050°C/0.09°F @ 50°C/122°F to 165°C/329°F

80 mm / 3.15 inch axial uniformity:

±0.050°C/0.09°F @ -30°C/-22°F to 0°C/32°F

80 mm / 3.15 inch axial uniformity:

±0.040°C/0.072°F @ 0°C/32°F to 50°C/122°F

80 mm / 3.15 inch axial uniformity:

±0.075°C/0.135°F @ 50°C/122°F to 165°C/329°F

Well specifications

Loaded with 3 x 3mm sensors + 1 x 4mm sensor and 1 x 6 mm sensor

DLC active:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.045^{\circ}\text{C}/0.081^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.045^{\circ}\text{C}/0.081^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.060^{\circ}\text{C}/0.11^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.060^{\circ}\text{C}/0.11^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

Difference between borings:

$0.03^{\circ}\text{C} / 0.054^{\circ}\text{F}$ @ $165^{\circ}\text{C}/329^{\circ}\text{F}$
 $0.02^{\circ}\text{C} / 0.036^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$

Influence from load:

$0.12^{\circ}\text{C} / 0.22^{\circ}\text{F}$ @ $165^{\circ}\text{C}/329^{\circ}\text{F}$
 $0.07^{\circ}\text{C} / 0.13^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$

Influence from load with Ext. Reference :

$0.04^{\circ}\text{C} / 0.07^{\circ}\text{F}$ @ $165^{\circ}\text{C}/329^{\circ}\text{F}$
 $0.04^{\circ}\text{C} / 0.07^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$

Long term drift (1 year): $\pm 0.035^{\circ}\text{C}/ \pm 0.063^{\circ}\text{F}$

Temperature coefficient

$\pm 0.010^{\circ}\text{C}/^{\circ}\text{C}$ (0-20°C and 26-40°C) /
 $\pm 0.010^{\circ}\text{F}/^{\circ}\text{F}$ (32-68°F and 79-104°F)

**THERMAL SPECIFICATIONS –
DRY BLOCK****RTC-168 A/B/C**

Stability	±0.01°C / ±0.02°F
Total accuracy	±0.18°C / ±0.32°F
Heating time incl. insert	-30°C / -22°F to 23°C / 73.4°F : 4 min. 23°C / 73.4°F to 100°C / 212°F: 9 min. 100°C / 212°F to 165°C / 329°F: 11 min. -30°C / -22°F to 165°C / 329°F : 24 min.
Time to stability	20-30 min.
Cooling time incl. insert	165°C / 329°F to 100°C / 212°F : 12 min 100°C / 212°F to 23°C / 73.4°F: 22 min. 23°C / 73.4°F to 0°C / 32°F: 13 min. 0°C / 32°F to -15°C / 5°F: 17 min. -15°C / -5°F to -25°C / -13°F : 22 min. -25°C / -13°F to -30°C / -22°F : 20 min. 165°C / 329° to -30°C / -22°F : 106 min.

**THERMAL SPECIFICATIONS –
LIQUID BATH****RTC-168 A/B/C**

Maximum temperature	165°C / 329°F
Minimum temperature	-30°C / -22°F @ ambient temperature 0°C / 32°F -30°C / -22°F @ ambient temperature 23°C / 73.4°F -17°C / 1.4°F @ ambient temperature 40°C / 104°F

Well specifications

40 mm / 1.57 inch axial uniformity:
 $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.015^{\circ}\text{C}/0.027^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $-20^{\circ}\text{C}/-4^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $-20^{\circ}\text{C}/-4^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $-20^{\circ}\text{C}/-4^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $-20^{\circ}\text{C}/-4^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

Radial uniformity: $0.015^{\circ}\text{C}/0.027^{\circ}\text{F}$ @ $165^{\circ}\text{C}/329^{\circ}\text{F}$

$0.015^{\circ}\text{C}/0.027^{\circ}\text{F}$ @ $-20^{\circ}\text{C}/-4^{\circ}\text{F}$

$0.029^{\circ}\text{C}/0.027^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$

Influence from load:

$0.10^{\circ}\text{C}/0.18^{\circ}\text{F}$ @ $155^{\circ}\text{C}/311^{\circ}\text{F}$

$0.04^{\circ}\text{C}/0.07^{\circ}\text{F}$ @ $-22^{\circ}\text{C}/-7.6^{\circ}\text{F}$

Influence from load with ext. reference:

$0.02^{\circ}\text{C}/0.04^{\circ}\text{F}$ @ $155^{\circ}\text{C}/311^{\circ}\text{F}$

$0.02^{\circ}\text{C}/0.04^{\circ}\text{F}$ @ $-22^{\circ}\text{C}/-7.6^{\circ}\text{F}$

Difference between insert/oil: $0.10^{\circ}\text{C}/0.18^{\circ}\text{F}$

**THERMAL SPECIFICATIONS –
LIQUID BATH****RTC-168 A/B/C**

	Long term drift (1 year) : $\pm 0.05^{\circ}\text{C}/0.09^{\circ}\text{F}$
Temperature coefficient	$0.010^{\circ}\text{C}/^{\circ}\text{C}$ (0-40°C) / $0.010^{\circ}\text{F}/^{\circ}\text{F}$ (32-104°F)
Stability	$\pm 0.01^{\circ}\text{C}$ / $\pm 0.02^{\circ}\text{F}$
Total accuracy (std. cal. with insert)	$\pm 0.21^{\circ}\text{C}$ / $\pm 0.38^{\circ}\text{F}$ (Std. calibration with insert, used with liquid) $\pm 0.18^{\circ}\text{C}$ / $\pm 0.38^{\circ}\text{F}$ (Optional calibration with liquid, used with liquid)
Time to stability	15 min.

**THERMAL SPECIFICATIONS –
LIQUID CONTAINER****RTC-168 A/B/C**

Maximum temperature	160°C / 320°F
Minimum temperature	-30°C / -22°F @ ambient temperature 0°C / 32°F -26°C / -15°F @ ambient temperature 23°C / 73.4°F -13°C / 9°F @ ambient temperature 40°C / 104°F
Well specifications	40 mm / 1.57 inch axial uniformity: $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ -30°C/-22°F to 0°C/32°F 40 mm / 1.57 inch axial uniformity: $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ 0°C/32°F to 50°C/122°F 40 mm / 1.57 inch axial uniformity: $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ 50°C/122°F to 165°C/329°F 50 mm / 1.97 inch axial uniformity: $\pm 0.015^{\circ}\text{C}/0.027^{\circ}\text{F}$ @ -30°C/-22°F to 0°C/32°F 50 mm / 1.97 inch axial uniformity: $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ 0°C/32°F to 50°C/122°F 50 mm / 1.97 inch axial uniformity: $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ 50°C/122°F to 165°C/329°F 60 mm / 2.36 inch axial uniformity: $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ -30°C/-22°F to -20°C/-4°F 60 mm / 2.36 inch axial uniformity: $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ -20°C/-4°F to 0°C/32°F 60 mm / 2.36 inch axial uniformity: $\pm 0.010^{\circ}\text{C}/0.018^{\circ}\text{F}$ @ 0°C/32°F to 50°C/122°F 60 mm / 2.36 inch axial uniformity: $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ 50°C/122°F to 165°C/329°F 70 mm / 2.76 inch axial uniformity: $\pm 0.035^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ -30°C/-22°F to -20°C/-4°F 70 mm / 2.76 inch axial uniformity: $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ -20°C/-4°F to 0°C/32°F 70 mm / 2.76 inch axial uniformity: $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ 0°C/32°F to 50°C/122°F 70 mm / 2.76 inch axial uniformity: $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ 50°C/122°F to 165°C/329°F

**THERMAL SPECIFICATIONS –
LIQUID CONTAINER**

RTC-168 A/B/C

Well specifications

80 mm / 3.15 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $165^{\circ}\text{C}/329^{\circ}\text{F}$

Radial uniformity: $0.015^{\circ}\text{C}/0.027^{\circ}\text{F}$ @ $165^{\circ}\text{C}/329^{\circ}\text{F}$

$0.015^{\circ}\text{C}/0.027^{\circ}\text{F}$ @ $-20^{\circ}\text{C}/-4^{\circ}\text{F}$

$0.029^{\circ}\text{C}/0.027^{\circ}\text{F}$ @ $-30^{\circ}\text{C}/-22^{\circ}\text{F}$

Influence from load:

$0.25^{\circ}\text{C}/0.18^{\circ}\text{F}$ @ $160^{\circ}\text{C}/320^{\circ}\text{F}$

$0.10^{\circ}\text{C}/0.07^{\circ}\text{F}$ @ $-26^{\circ}\text{C}/-15^{\circ}\text{F}$

Influence from load with ext. reference:

$0.02^{\circ}\text{C}/0.04^{\circ}\text{F}$ @ $160^{\circ}\text{C}/320^{\circ}\text{F}$

$0.02^{\circ}\text{C}/0.04^{\circ}\text{F}$ @ $-22^{\circ}\text{C}/-15^{\circ}\text{F}$

Difference between insert/oil: $0.10^{\circ}\text{C}/0.18^{\circ}\text{F}$

Long term drift (1 year) : $\pm 0.05^{\circ}\text{C}/0.09^{\circ}\text{F}$

Temperature coefficient

$0.010^{\circ}\text{C}/^{\circ}\text{C}$ (0-40°C) / $0.010^{\circ}\text{F}/^{\circ}\text{F}$ (32-104°F)

Stability

$\pm 0.01^{\circ}\text{C}$ / $\pm 0.02^{\circ}\text{F}$

Total accuracy

$\pm 0.06^{\circ}\text{C}$ / $\pm 0.11^{\circ}\text{F}$ using external STS-200 A/B 919 reference.
Always use external reference with liquid container

Time to stability

35 min.

MECHANICAL SPECIFICATIONS**RTC-187 A/B/C**

Dimensions l × w × h

362 × 171 × 363 mm / 14.2 x 6.7 x 14.3 inch

Weight

RTC-187 A : 10.4 kg / 23.0 lb

RTC-187 B/C : 10.5 kg / 23.1 lb

Shipping dimensions

580 x 250 x 500mm / 22.8 x 9.8 x 19.7 inch (Cardboard box)

550 x 440 x 610mm / 21.7 x 17.3 x 24.0 inch (Carrying case
in cardboard box)

Shipping weight

14.8 kg / 32.6 lb (in cardboard box)

20.5 kg / 45.2 lb (in carrying case in cardboard box)

Bore diameter/depth of well

$\varnothing 30$ mm / 150 mm – $\varnothing 1.18$ inch / 5.91 inch

Weight non-drilled insert

290 g / 10.2 oz

POWER SUPPLY

Line voltage/frequency

90-127VAC / 180-254VAC 47-63 Hz

Power consumption

400 W

Type of connection

IEC320

COMMUNICATION INTERFACES

Type of connections

USB A, USB B, SD card slot, RJ45

MECHANICAL SPECIFICATIONS RTC-187 A/B/C

OTHER CONNECTIONS

Synchronisation relay output	3,5 mm mini jack.
------------------------------	-------------------

ENVIRONMENT

Ambient operating temperature range	0-40°C / 32-104°F
-------------------------------------	-------------------

Storage temperature range	-20-50°C / -4-122°F
---------------------------	---------------------

Humidity range	0-90% RH.
----------------	-----------

Protection class	IP10
------------------	------

Electromagnetic environment	Designed for use in basic electromagnetic environment as defined in EN61326-1:2013. Length of test cables should not exceed 3 m.
-----------------------------	--

READOUT SPECIFICATIONS

Resolution	0.001°C / 0.001°F / 0.001 K
------------	-----------------------------

Temperature units	°C / °F / K
-------------------	-------------

THERMAL SPECIFICATIONS RTC-187 A/B/C

Maximum temperature	180°C / 356°F
---------------------	---------------

Minimum temperature *	-57°C / -70.6°F @ ambient temperature 0°C / 32°F
	-45°C / -49°F @ ambient temperature 23°C / 73.4°F
	-31°C / -23.8°F @ ambient temperature 40°C / 104°F

*The minimum temperature will be affected by the number of sensors and the dimensions of the sensors being calibrated.

Well specifications

Loaded with 2 x 3mm sensors:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.070^{\circ}\text{C}/1.26^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.070^{\circ}\text{C}/1.26^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

Loaded with 3 x 3mm sensors + 1 x 4mm sensors:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $155^{\circ}\text{C}/311^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

THERMAL SPECIFICATIONS**RTC-187 A/B/C**

Well specifications

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $155^{\circ}\text{C}/311^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C}/0.036^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.080^{\circ}\text{C}/0.144^{\circ}\text{F}$ @ $155^{\circ}\text{C}/311^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.070^{\circ}\text{C}/0.126^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C}/0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.070^{\circ}\text{C}/0.126^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.120^{\circ}\text{C}/0.216^{\circ}\text{F}$ @ $155^{\circ}\text{C}/311^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.120^{\circ}\text{C}/0.216^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.120^{\circ}\text{C}/0.216^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $155^{\circ}\text{C}/311^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.150^{\circ}\text{C}/0.27^{\circ}\text{F}$ @ $155^{\circ}\text{C}/311^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

Loaded with 3 x 3mm sensors + 1 x 4mm sensor and 1 x 6 mm sensor

DLC active:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $0^{\circ}\text{C}/32^{\circ}\text{F}$ to $50^{\circ}\text{C}/122^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.035^{\circ}\text{C}/0.063^{\circ}\text{F}$ @ $50^{\circ}\text{C}/122^{\circ}\text{F}$ to $180^{\circ}\text{C}/356^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.045^{\circ}\text{C}/0.081^{\circ}\text{F}$ @ $-45^{\circ}\text{C}/-49^{\circ}\text{F}$ to $0^{\circ}\text{C}/32^{\circ}\text{F}$

THERMAL SPECIFICATIONS**RTC-187 A/B/C**

Well specifications

60 mm / 2.36 inch axial uniformity:
 $\pm 0.030^{\circ}\text{C} / 0.054^{\circ}\text{F}$ @ $0^{\circ}\text{C} / 32^{\circ}\text{F}$ to $50^{\circ}\text{C} / 122^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.045^{\circ}\text{C} / 0.081^{\circ}\text{F}$ @ $50^{\circ}\text{C} / 122^{\circ}\text{F}$ to $180^{\circ}\text{C} / 356^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.060^{\circ}\text{C} / 0.11^{\circ}\text{F}$ @ $-45^{\circ}\text{C} / -49^{\circ}\text{F}$ to $0^{\circ}\text{C} / 32^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.040^{\circ}\text{C} / 0.072^{\circ}\text{F}$ @ $0^{\circ}\text{C} / 32^{\circ}\text{F}$ to $50^{\circ}\text{C} / 122^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.060^{\circ}\text{C} / 0.11^{\circ}\text{F}$ @ $50^{\circ}\text{C} / 122^{\circ}\text{F}$ to $180^{\circ}\text{C} / 356^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.100^{\circ}\text{C} / 0.18^{\circ}\text{F}$ @ $-45^{\circ}\text{C} / -49^{\circ}\text{F}$ to $0^{\circ}\text{C} / 32^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C} / 0.09^{\circ}\text{F}$ @ $0^{\circ}\text{C} / 32^{\circ}\text{F}$ to $50^{\circ}\text{C} / 122^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.100^{\circ}\text{C} / 0.18^{\circ}\text{F}$ @ $50^{\circ}\text{C} / 122^{\circ}\text{F}$ to $180^{\circ}\text{C} / 356^{\circ}\text{F}$

Difference between borings :

0.01°C (0.02°F)

Influence from load :

0.10°C (0.18°F) @ $-45^{\circ}\text{C} / -49^{\circ}\text{F}$ to $155^{\circ}\text{C} / 311^{\circ}\text{F}$

0.11°C (0.20°F) @ $155^{\circ}\text{C} / 311^{\circ}\text{F}$ to $180^{\circ}\text{C} / 356^{\circ}\text{F}$

Influence from load with Ext. Reference :

$0.01^{\circ}\text{C} / 0.02^{\circ}\text{F}$

Long term drift (1 year) : $\pm 0.04^{\circ}\text{C} / \pm 0.07^{\circ}\text{F}$

Temperature coefficient

$\pm 0.005^{\circ}\text{C} / ^{\circ}\text{C}$ ($0-20^{\circ}\text{C}$ and $26-40^{\circ}\text{C}$) / $\pm 0.009^{\circ}\text{F} / ^{\circ}\text{F}$ ($32-68^{\circ}\text{F}$ and $79-104^{\circ}\text{F}$)

Stability

$\pm 0.005^{\circ}\text{C} / \pm 0.009^{\circ}\text{F}$

Accuracy

$\pm 0.10^{\circ}\text{C} / \pm 0.18^{\circ}\text{F}$ @ $-45^{\circ}\text{C} / -49^{\circ}\text{F}$ to $155^{\circ}\text{C} / 311^{\circ}\text{F}$

$\pm 0.12^{\circ}\text{C} / \pm 0.22^{\circ}\text{F}$ @ $155^{\circ}\text{C} / 311^{\circ}\text{F}$ to $180^{\circ}\text{C} / 356^{\circ}\text{F}$

Heating time incl. insert

$-45^{\circ}\text{C} / -49.0^{\circ}\text{F}$ to $23^{\circ}\text{C} / 73.4^{\circ}\text{F}$: 7 min.

$23^{\circ}\text{C} / 73.4^{\circ}\text{F}$ to $100^{\circ}\text{C} / 212^{\circ}\text{F}$: 8 min.

$100^{\circ}\text{C} / 212^{\circ}\text{F}$ to $180^{\circ}\text{C} / 356^{\circ}\text{F}$: 9 min.

$-45^{\circ}\text{C} / -49.0^{\circ}\text{F}$ to $180^{\circ}\text{C} / 311^{\circ}\text{F}$: 24 min.

Time to stability

10 min.

Cooling time incl. insert

$180^{\circ}\text{C} / 356^{\circ}\text{F}$ to $100^{\circ}\text{C} / 212^{\circ}\text{F}$: 8 min.

$100^{\circ}\text{C} / 212^{\circ}\text{F}$ to $23^{\circ}\text{C} / 73.4^{\circ}\text{F}$: 11 min.

$23^{\circ}\text{C} / 73.4^{\circ}\text{F}$ to $0^{\circ}\text{C} / 32^{\circ}\text{F}$: 5 min.

$0^{\circ}\text{C} / 32^{\circ}\text{F}$ to $-30^{\circ}\text{C} / -22.0^{\circ}\text{F}$: 12 min.

$-30^{\circ}\text{C} / -22.0^{\circ}\text{F}$ to $-45^{\circ}\text{C} / -49.0^{\circ}\text{F}$: 25 min.

$180^{\circ}\text{C} / 356^{\circ}\text{F}$ to $-45^{\circ}\text{C} / -49.0^{\circ}\text{F}$: 61 min.

MECHANICAL SPECIFICATIONS	RTC-250 A/B/C
Dimensions l × w × h	366 × 171 × 363 mm / 14.4 x 6.7 x 14.3 inch
Weight	RTC-250 A : 9.8 kg / 21.6 lb RTC-250 B/C : 9.9 kg / 21.8 lb
Shipping dimensions	580 x 250 x 500mm / 22.8 x 9.8 x 19.7 inch (Cardboard box) 550 x 430 x 660mm / 21.7 x 16.9 x 26.0 inch (Carrying case in cardboard box)
Shipping weight	RTC-250 A : 15.8 kg / 34.8 lb (in cardboard box) RTC-250 B/C : 15.9 kg / 35.1 lb (in cardboard box) RTC-250 A : 26.8 kg / 59.1 lb (in carrying case in cardboard box) RTC-250 B/C : 26.9 kg / 59.3 lb (in carrying case in cardboard box)
Bore diameter/depth of well	Ø63.8 mm / 160 mm – ø2.5 inch / 6.3 inch
Weight non-drilled insert	1200 g / 42.3 oz
POWER SUPPLY	
Line voltage/frequency	90-127VAC / 180-254VAC 47-63 Hz, 8A/4A
Power consumption	1150 W
Type of connection	IEC320
COMMUNICATION INTERFACES	
Type of connections	USB A, USB B, SD card slot, RJ45
OTHER CONNECTIONS	
Synchronisation relay output	3,5 mm mini jack.
ENVIRONMENT	
Ambient operating temperature range	0-40°C / 32-104°F
Storage temperature range	-20-50°C / -4-122°F
Humidity range	0-90% RH.
Protection class	IP10
Electromagnetic environment	Designed for use in basic electromagnetic environment as defined in EN61326-1 : 2013. Length of test cables should not exceed 3 m.
READOUT SPECIFICATIONS	
Resolution	0.001°C / 0.001°F / 0.001 K
Temperature units	°C / °F / K

**THERMAL SPECIFICATIONS –
DRY – BLOCK**

RTC-250 A/B

Maximum temperature

250°C / 482°F

Minimum temperature

5°C / 41°F @ ambient temperature 0°C / 32°F
28°C / 82°F @ ambient temperature 23°C / 73.4°F
45°C / 113°F @ ambient temperature 40°C / 104°F

Well specifications

Loaded with 2 x 3mm sensors:

40 mm / 1.57 inch axial uniformity:
±0.030°C/0.054°F @ 28°C/82.4°F to 150°C/302°F

40 mm / 1.57 inch axial uniformity:
±0.050°C/0.09°F @ 150°C/302°F to 250°C/482°F

50 mm / 1.97 inch axial uniformity:
±0.050°C/0.09°F @ 28°C/82.4°F to 150°C/302°F

50 mm / 1.97 inch axial uniformity:
±0.100°C/0.18°F @ 150°C/302°F to 250°C/482°F

60 mm / 2.36 inch axial uniformity:
±0.060°C/0.11°F @ 28°C/82.4°F to 150°C/302°F

60 mm / 2.36 inch axial uniformity:
±0.120°C/0.22°F @ 150°C/302°F to 250°C/482°F

70 mm / 2.76 inch axial uniformity:
±0.100°C/0.18°F @ 28°C/82.4°F to 150°C/302°F

70 mm / 2.76 inch axial uniformity:
±0.200°C/0.36°F @ 150°C/302°F to 250°C/482°F

80 mm / 3.15 inch axial uniformity:
±0.120°C/0.22°F @ 28°C/82.4°F to 150°C/302°F

80 mm / 3.15 inch axial uniformity:
±0.250°C/0.45°F @ 150°C/302°F to 250°C/482°F

Loaded with 3 x 3mm sensors + 1 x 4mm sensor and 1 x 6 mm sensor

DLC active:

40 mm / 1.57 inch axial uniformity:
±0.040°C/0.072°F @ 28°C/82.4°F to 150°C/302°F

40 mm / 1.57 inch axial uniformity:
±0.060°C/0.11°F @ 150°C/302°F to 250°C/482°F

50 mm / 1.97 inch axial uniformity:
±0.050°C/0.09°F @ 28°C/82.4°F to 150°C/302°F

50 mm / 1.97 inch axial uniformity:
±0.070°C/0.13°F @ 150°C/302°F to 250°C/482°F

60 mm / 2.36 inch axial uniformity:
±0.060°C/0.11°F @ 28°C/82.4°F to 150°C/302°F

60 mm / 2.36 inch axial uniformity:
±0.100°C/0.18°F @ 150°C/302°F to 250°C/482°F

**THERMAL SPECIFICATIONS –
DRY – BLOCK**

RTC-250 A/B

Well specifications	70 mm / 2.76 inch axial uniformity: ±0.070°C/0.13°F @ 28°C/82.4°F to 150°C/302°F
	70 mm / 2.76 inch axial uniformity: ±0.120°C/0.22°F @ 150°C/302°F to 250°C/482°F
	80 mm / 3.15 inch axial uniformity: ±0.080°C/0.14°F @ 28°C/82.4°F to 150°C/302°F
	80 mm / 3.15 inch axial uniformity: ±0.150°C/0.27°F @ 150°C/302°F to 250°C/482°F
	<u>Difference between borings :</u>
	0.05°C / 0.09°F
	<u>Influence from load :</u>
	0.10°C / 0.18°F @ 250°C / 482°F
	<u>Influence from load with Ext. Reference :</u>
	0.03°C / 0.05°F @ 250°C / 482°F
	Long term drift (1 year) : ±0.05°C / ±0.09°F
Temperature coefficient	±0.020°C/°C (0-20°C and 26-40°C) (32-68°F and 79-104°F)
Stability	±0.02°C / ±0.04°F
Total accuracy	±0.28°C (±0.50°F)
Heating time incl. insert	28°C / 82°F to 100°C / 212°F : 3 min. 50°C / 122°F to 100°C / 212°F : 2 min. 100°C / 212°F to 250°C / 482°F : 9 min.
Time to stability	15 min.
Cooling time incl. insert	250°C / 482°F to 100°C / 212°F : 24 min. 100°C / 212°F to 50°C / 122°F : 24 min. 100°C / 212°F to 28°C / 82°F : 65 min.

**THERMAL SPECIFICATIONS –
LIQUID BATHS**

RTC-250 A/B

Maximum temperature	250°C / 482°F
Minimum temperature	45°C / 113°F @ ambient temperature 40°C / 104°F 28°C / 82°F @ ambient temperature 23°C / 73.4°F 5°C / 4°F @ ambient temperature 0°C / 32°F

**THERMAL SPECIFICATIONS –
LIQUID BATHS****RTC-250 A/B**

Well specifications

40 mm / 1.57 inch axial uniformity:
 $\pm 0.010^{\circ}\text{C} / 0.018^{\circ}\text{F}$ @ $28^{\circ}\text{C} / 82.4^{\circ}\text{F}$ to $150^{\circ}\text{C} / 302^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C} / 0.036^{\circ}\text{F}$ @ $150^{\circ}\text{C} / 302^{\circ}\text{F}$ to $250^{\circ}\text{C} / 482^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.010^{\circ}\text{C} / 0.018^{\circ}\text{F}$ @ $28^{\circ}\text{C} / 82.4^{\circ}\text{F}$ to $150^{\circ}\text{C} / 302^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C} / 0.036^{\circ}\text{F}$ @ $150^{\circ}\text{C} / 302^{\circ}\text{F}$ to $250^{\circ}\text{C} / 482^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.010^{\circ}\text{C} / 0.018^{\circ}\text{F}$ @ $28^{\circ}\text{C} / 82.4^{\circ}\text{F}$ to $150^{\circ}\text{C} / 302^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.020^{\circ}\text{C} / 0.036^{\circ}\text{F}$ @ $150^{\circ}\text{C} / 302^{\circ}\text{F}$ to $250^{\circ}\text{C} / 482^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C} / 0.045^{\circ}\text{F}$ @ $28^{\circ}\text{C} / 82.4^{\circ}\text{F}$ to $150^{\circ}\text{C} / 302^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C} / 0.045^{\circ}\text{F}$ @ $150^{\circ}\text{C} / 302^{\circ}\text{F}$ to $250^{\circ}\text{C} / 482^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.025^{\circ}\text{C} / 0.045^{\circ}\text{F}$ @ $28^{\circ}\text{C} / 82.4^{\circ}\text{F}$ to $150^{\circ}\text{C} / 302^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.050^{\circ}\text{C} / 0.09^{\circ}\text{F}$ @ $150^{\circ}\text{C} / 302^{\circ}\text{F}$ to $250^{\circ}\text{C} / 482^{\circ}\text{F}$

Radial uniformity:

0.015°C / 0.027°F

Influence from load :

0.10°C / 0.18°F @ 250°C / 482°F

Influence from load with Ext. Reference :

0.02°C / 0.04°F @ 250°C / 482°F

Difference between insert/oil :

0.30°C / 0.54°F

Long term drift (1 year) : $\pm 0.05^{\circ}\text{C} / \pm 0.09^{\circ}\text{F}$

Temperature coefficient $\pm 0.020^{\circ}\text{C} / ^{\circ}\text{C}$ (0-20°C and 26-40°C) (32-68°F and 79-104°F)

Stability $\pm 0.02^{\circ}\text{C} / \pm 0.04^{\circ}\text{F}$

Total accuracy (std. cal. with insert) $\pm 0.50^{\circ}\text{C} / \pm 0.90^{\circ}\text{F}$

Heating time incl. insert Not specified

Time to stability 15 min.

Cooling time incl. insert Not specified

MECHANICAL SPECIFICATIONS	RTC-700 A/B/C
Dimensions l × w × h	362 × 171 × 421 mm (14.3 x 6.7 x 16.6 inch)
Weight	11.3 kg / 24.9 lb
Shipping dimensions	580 x 250 x 500mm / 22.8 x 9.8 x 19.7 inch (Cardboard box) 550 x 430 x 660mm / 21.7 x 16.9 x 26.0 inch (Carrying case in cardboard box)
Shipping weight	16.3 kg / 36.0 lb (in cardboard box) 27.3 kg / 60.2 lb (in carrying case in cardboard box)
Bore diameter/depth of well	ø30 mm / 210 mm – ø1.18 inch / 8.3 inch
Weight non-drilled insert	1060 g / 37.3 oz
POWER SUPPLY	
Line voltage/frequency	90-127VAC / 180-254VAC 47-63 Hz
Power consumption	1150 W
Type of connection	IEC320
COMMUNICATION INTERFACES	
Type of connection	USB A, USB B, SD card slot, RJ45
OTHER CONNECTIONS	
Synchronisation relay output	3,5 mm mini jack.
ENVIRONMENT	
Ambient operating temperature range	0-40°C / 32-104°F
Storage temperature range	-20-50°C / -4-122°F
Humidity range	0-90% RH.
Protection class	IP10
Electromagnetic environment	Designed for use in basic electromagnetic environment as defined in EN61326-1 : 2013. Length of test cables should not exceed 3 m.
READOUT SPECIFICATIONS	
Resolution	0.001°C / 0.001°F / 0.001 K
Temperature units	°C / °F / K

THERMAL SPECIFICATIONS	RTC-700 A/B/C
Maximum temperature	700°C / 1292°F
Minimum temperature*	10°C / 50°F @ ambient temperature 0°C / 32°F 33°C / 91°F @ ambient temperature 23°C / 73.4°F 50°C / 122°F @ ambient temperature 40°C / 104°F

*The minimum temperature will be affected by the number of sensors and the dimensions of the sensors being calibrated.

Well specifications

Loaded with 4 x 4mm sensors:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.100^{\circ}\text{C}/0.18^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.200^{\circ}\text{C}/0.36^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.300^{\circ}\text{C}/0.54^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.100^{\circ}\text{C}/0.18^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.200^{\circ}\text{C}/0.36^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.300^{\circ}\text{C}/0.54^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.100^{\circ}\text{C}/0.18^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.250^{\circ}\text{C}/0.45^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.400^{\circ}\text{C}/0.72^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.100^{\circ}\text{C}/0.18^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.250^{\circ}\text{C}/0.45^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.500^{\circ}\text{C}/0.9^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.150^{\circ}\text{C}/0.27^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.300^{\circ}\text{C}/0.54^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.600^{\circ}\text{C}/1.08^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

Loaded with 4 x 4mm sensor and 1 x 6 mm sensor

DLC active:

40 mm / 1.57 inch axial uniformity:
 $\pm 0.120^{\circ}\text{C}/0.22^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.200^{\circ}\text{C}/0.36^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

40 mm / 1.57 inch axial uniformity:
 $\pm 0.300^{\circ}\text{C}/0.54^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.120^{\circ}\text{C}/0.22^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

50 mm / 1.97 inch axial uniformity:
 $\pm 0.200^{\circ}\text{C}/0.36^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

THERMAL SPECIFICATIONS

RTC-700 A/B/C

Well specifications

50 mm / 1.97 inch axial uniformity:
 $\pm 0.350^{\circ}\text{C}/0.63^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.150^{\circ}\text{C}/0.27^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.250^{\circ}\text{C}/0.45^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

60 mm / 2.36 inch axial uniformity:
 $\pm 0.400^{\circ}\text{C}/0.72^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.150^{\circ}\text{C}/0.27^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.250^{\circ}\text{C}/0.45^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

70 mm / 2.76 inch axial uniformity:
 $\pm 0.400^{\circ}\text{C}/0.72^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.200^{\circ}\text{C}/0.36^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.250^{\circ}\text{C}/0.45^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

80 mm / 3.15 inch axial uniformity:
 $\pm 0.400^{\circ}\text{C}/0.72^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

Difference between borings :

$\pm 0.01^{\circ}\text{C}/0.02^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91.4^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

$\pm 0.025^{\circ}\text{C}/0.045^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

$\pm 0.040^{\circ}\text{C}/0.072^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $600^{\circ}\text{C}/1112^{\circ}\text{F}$

$\pm 0.050^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $600^{\circ}\text{C}/1112^{\circ}\text{F}$ to $660^{\circ}\text{C}/1220^{\circ}\text{F}$

$\pm 0.060^{\circ}\text{C}/0.108^{\circ}\text{F}$ @ $660^{\circ}\text{C}/1220^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

Influence from load :

$0.01^{\circ}\text{C}/0.02^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91.4^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

$0.05^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

$0.15^{\circ}\text{C}/0.27^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

Influence from load with ext. reference :

$0.01^{\circ}\text{C}/0.02^{\circ}\text{F}$ @ $33^{\circ}\text{C}/91.4^{\circ}\text{F}$ to $100^{\circ}\text{C}/212^{\circ}\text{F}$

$0.02^{\circ}\text{C}/0.04^{\circ}\text{F}$ @ $100^{\circ}\text{C}/212^{\circ}\text{F}$ to $420^{\circ}\text{C}/788^{\circ}\text{F}$

$0.03^{\circ}\text{C}/0.05^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$ to $700^{\circ}\text{C}/1292^{\circ}\text{F}$

Difference between inserts :

$0.05^{\circ}\text{C}/0.09^{\circ}\text{F}$ @ $420^{\circ}\text{C}/788^{\circ}\text{F}$

$0.10^{\circ}\text{C}/0.18^{\circ}\text{F}$ @ $700^{\circ}\text{C}/1292^{\circ}\text{F}$

Long term drift (1 year): $\pm 0.11^{\circ}\text{C}/\pm 0.20^{\circ}\text{F}$

THERMAL SPECIFICATIONS**RTC-700 A/B/C**

Temperature coefficient	$\pm 0.005^{\circ}\text{C}/^{\circ}\text{C}$ (0-20°C and 26-40°C) / $\pm 0.009^{\circ}\text{F}/^{\circ}\text{F}$ (32-68°F and 79-104°F)
Stability	$\pm 0.008^{\circ}\text{C}/0.014^{\circ}\text{F}$ @ 33°C/91.4°F to 125°C/257°F $\pm 0.015^{\circ}\text{C}/0.027^{\circ}\text{F}$ @ 125°C/257°F to 425°C/797°F $\pm 0.020^{\circ}\text{C}/0.36^{\circ}\text{F}$ @ 425°C/797°F to 700°C/1292°F
Accuracy	$\pm 0.30^{\circ}\text{C}/0.54^{\circ}\text{F}$ @ 33°C/91.4°F to 660°C/1220°F $\pm 1.69^{\circ}\text{C}/3.04^{\circ}\text{F}$ @ 660°C/1220°F to 700°C/1292°F
Heating time incl. insert	33°C/91.4°F to 700°C/1292°F : 45 min.
Time to stability	10 min.
Cooling time incl. insert	700°C / 1292°F to 100°C / 212°F : 43 min. 100°C / 212°F to 50°C / 122°F : 17 min. 50°C / 212°F to 33°C / 91.4°F : 20 min.

TECHNICAL SPECIFICATIONS – B VERSIONS ONLY**INPUT SPECIFICATIONS****mA input**

Signal range	0 – 24 mA
Internal power supply	24 V, max. 28 mA
Resolution	0.0001mA / 0.001°C / 0.001°F
Accuracy	$\pm(0.005\%$ of rdg. + 0.010% of F.S.)
Temperature coefficient	± 7 ppm F.S./°C (0-20°C and 26-40°C) / (32-68°F and 79-104°F)
Input impedance	< 10 Ω
Type of connection	4 mm safety sockets

Voltage input

Signal range	0 – 12 V
Resolution	0.0001V / 0.001°C / 0.001°F
Accuracy	$\pm(0.005\%$ of rdg. + 0.010% of F.S.)
Temperature coefficient	± 5 ppm F.S./°C (0-20°C and 26-40°C) / (32-68°F and 79-104°F)
Input impedance	> 1 M Ω
Type of connection	4 mm safety sockets

Thermocouple input

Signal range	-78mV – 78 mV (E, J, K, N, R, S, T, U, B)
Resolution	0.0001mV / 0.001°C / 0.001°F (E, J, K, N, R, S, T, U, B)
Accuracy	$\pm(0.005\%$ of rdg. + 0.005% of F.S.), see page 120 – 122 for accuracy in °C/°F

INPUT SPECIFICATIONS

Temperature coefficient ± 5 ppm F.S./°C (0-20°C and 26-40°C) / (32-68°F and 79-104°F)

Input impedance > 1 M Ω

Type of connection Mini TC-connector

RTD-input (2-, 3- or 4-wire)

Signal range
0-400 Ω
(P10(90)386/P50(90)385/P100(90)385/P50(90)391/P100(90)391/P100(90)392/ M50(90)428/
M100(90)428/H100(90)617/H120(90)672/Pt-100 MILL)
0-4000 Ω (P200(90)385/P500(90)385/P1000(90)385/YSI-400)

Internal power supply Excitation current 0.3 mA

Resolution
0.0001 Ω / 0.001°C / 0.001°F
(P10(90)386/P50(90)385/P100(90)385/P50(90)391/P100(90)391/P100(90)392/ M50(90)428/
M100(90)428/H100(90)617/H120(90)672/Pt-100 MILL)
0.001 Ω / 0.001°C / 0.001°F
(P200(90)385/P500(90)385/P1000(90)385/YSI-400)

Accuracy
 $\pm(0.002\%$ of rdg. + 0.002% of F.S.), (0-400 Ω range), see page 126 - 126 for accuracy in °C/°F
 $\pm(0.005\%$ of rdg. + 0.005% of F.S.), (0-4000 Ω range), see page 122 - 123 + 126 for accuracy in °C/°F

Temperature coefficient ± 2 ppm F.S./°C (0-20°C and 26-40°C) / (32-68°F and 79-104°F)

Type of connection 4 mm safety sockets

Switch test input

Signal range on : 0-10k Ω / off : >100k Ω

Internal power supply 5 V (open)

Type of connection 4 mm safety sockets

Reference input (4 wire true ohm Pt100) **B and C versions only**

Signal range 0 Ω – 400 Ω

Internal power supply Measuring current 0.8 mA

Resolution 0.0001 Ω / 0.001°C / 0.001°F

Accuracy $\pm(0.0012\%$ of rdg. + 0.0005% of F.S.), see page 127 for accuracy in °C/°F

Type of connection LEMO Redell 6-pole-connector

DLC (TC input) **B and C versions only**

Signal range -78mV – 78mV

Resolution 0.01°C / 0.01°F

INPUT SPECIFICATIONS

Accuracy	0.39 μ V / 0.014°C @ 0mV
Temperature coefficient	\pm 5 ppm F.S./°C (0-20°C and 26-40°C) / (32-68°F and 79-104°F)
Type of connection	LEMO Redell 4-pole-connector

INPUT SPECIFICATIONS**ACCURACY IN °C/°F**

Accuracy thermocouple type E input -200°C to 1000°C (excluding sensor accuracy)	\pm 0.18°C(\pm 0.32°F) @ -200°C(-328°F) \pm 0.09°C(\pm 0.17°F) @ -50°C(-58°F) \pm 0.06°C(\pm 0.11°F) @ 0°C(32°F) \pm 0.06°C(\pm 0.11°F) @ 155°C(311°F) \pm 0.07°C(\pm 0.12°F) @ 320°C(608°F) \pm 0.08°C(\pm 0.14°F) @ 650°C(1202°F) \pm 0.10°C(\pm 0.29°F) @ 1000°C(1832°F)
Accuracy thermocouple type J input -210°C to 1200°C (excluding sensor accuracy)	\pm 0.23°C(\pm 0.41°F) @ -210°C(-346°F) \pm 0.10°C(\pm 0.18°F) @ -100°C(-148°F) \pm 0.08°C(\pm 0.14°F) @ 0°C(32°F) \pm 0.09°C(\pm 0.16°F) @ 155°C(311°F) \pm 0.09°C(\pm 0.16°F) @ 320°C(608°F) \pm 0.09°C(\pm 0.17°F) @ 650°C(1202°F) \pm 0.13°C(\pm 0.23°F) @ 1200°C(2192°F)
Accuracy thermocouple type K input -200°C to 1372°C (excluding sensor accuracy)	\pm 0.27°C(\pm 0.49°F) @ -200°C(-328°F) \pm 0.14°C(\pm 0.24°F) @ -100°C(-148°F) \pm 0.10°C(\pm 0.19°F) @ 0°C(32°F) \pm 0.11°C(\pm 0.20°F) @ 155°C(311°F) \pm 0.11°C(\pm 0.20°F) @ 320°C(608°F) \pm 0.13°C(\pm 0.23°F) @ 650°C(1202°F) \pm 0.20°C(\pm 0.36°F) @ 1372°C(2502°F)
Accuracy thermocouple type T input -200°C to 400°C (excluding sensor accuracy)	\pm 0.27°C(\pm 0.49°F) @ -200°C(-328°F) \pm 0.15°C(\pm 0.26°F) @ -100°C(-148°F) \pm 0.10°C(\pm 0.18°F) @ 0°C(32°F) \pm 0.08°C(\pm 0.15°F) @ 155°C(311°F) \pm 0.08°C(\pm 0.15°F) @ 320°C(608°F) \pm 0.08°C(\pm 0.14°F) @ 400°C(752°F)

INPUT SPECIFICATIONS	ACCURACY IN °C/°F
Accuracy thermocouple type R input -50°C to 1768°C (excluding sensor accuracy)	$\pm 1.30^{\circ}\text{C}(\pm 2.35^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$ $\pm 0.78^{\circ}\text{C}(\pm 1.40^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$ $\pm 0.47^{\circ}\text{C}(\pm 0.84^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$ $\pm 0.40^{\circ}\text{C}(\pm 0.73^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$ $\pm 0.39^{\circ}\text{C}(\pm 0.70^{\circ}\text{F}) @ 650^{\circ}\text{C}(1202^{\circ}\text{F})$ $\pm 0.41^{\circ}\text{C}(\pm 0.74^{\circ}\text{F}) @ 1768^{\circ}\text{C}(3214^{\circ}\text{F})$
Accuracy thermocouple type S input -50°C to 1768°C (excluding sensor accuracy)	$\pm 0.98^{\circ}\text{C}(\pm 1.76^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$ $\pm 0.78^{\circ}\text{C}(\pm 1.40^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$ $\pm 0.49^{\circ}\text{C}(\pm 0.89^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$ $\pm 0.45^{\circ}\text{C}(\pm 0.81^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$ $\pm 0.41^{\circ}\text{C}(\pm 0.73^{\circ}\text{F}) @ 650^{\circ}\text{C}(1202^{\circ}\text{F})$ $\pm 0.46^{\circ}\text{C}(\pm 0.83^{\circ}\text{F}) @ 1768^{\circ}\text{C}(3214^{\circ}\text{F})$
Accuracy thermocouple type B 250°C to 1820°C (excluding sensor accuracy)	$\pm 1.57^{\circ}\text{C}(\pm 2.83^{\circ}\text{F}) @ 250^{\circ}\text{C}(482^{\circ}\text{F})$ $\pm 1.19^{\circ}\text{C}(\pm 2.14^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$ $\pm 0.67^{\circ}\text{C}(\pm 1.21^{\circ}\text{F}) @ 650^{\circ}\text{C}(1202^{\circ}\text{F})$ $\pm 0.48^{\circ}\text{C}(\pm 0.86^{\circ}\text{F}) @ 1820^{\circ}\text{C}(3308^{\circ}\text{F})$
Accuracy thermocouple type N -200°C to 1300°C (excluding sensor accuracy)	$\pm 0.41^{\circ}\text{C}(\pm 0.74^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$ $\pm 0.20^{\circ}\text{C}(\pm 0.35^{\circ}\text{F}) @ -100^{\circ}\text{C}(-148^{\circ}\text{F})$ $\pm 0.15^{\circ}\text{C}(\pm 0.27^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$ $\pm 0.13^{\circ}\text{C}(\pm 0.23^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$ $\pm 0.13^{\circ}\text{C}(\pm 0.23^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$ $\pm 0.13^{\circ}\text{C}(\pm 0.23^{\circ}\text{F}) @ 650^{\circ}\text{C}(1202^{\circ}\text{F})$ $\pm 0.14^{\circ}\text{C}(\pm 0.25^{\circ}\text{F}) @ 800^{\circ}\text{C}(1472^{\circ}\text{F})$ $\pm 0.15^{\circ}\text{C}(\pm 0.27^{\circ}\text{F}) @ 1000^{\circ}\text{C}(1832^{\circ}\text{F})$ $\pm 0.16^{\circ}\text{C}(\pm 0.29^{\circ}\text{F}) @ 1200^{\circ}\text{C}(2192^{\circ}\text{F})$ $\pm 0.17^{\circ}\text{C}(\pm 0.31^{\circ}\text{F}) @ 1300^{\circ}\text{C}(2372^{\circ}\text{F})$
Accuracy thermocouple type L * -200°C to 900°C (excluding sensor accuracy)	$\pm 0.14^{\circ}\text{C}(\pm 0.25^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$ $\pm 0.09^{\circ}\text{C}(\pm 0.17^{\circ}\text{F}) @ -100^{\circ}\text{C}(-148^{\circ}\text{F})$ $\pm 0.08^{\circ}\text{C}(\pm 0.14^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$ $\pm 0.08^{\circ}\text{C}(\pm 0.14^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$ $\pm 0.09^{\circ}\text{C}(\pm 0.15^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$ $\pm 0.09^{\circ}\text{C}(\pm 0.15^{\circ}\text{F}) @ 650^{\circ}\text{C}(1202^{\circ}\text{F})$ $\pm 0.09^{\circ}\text{C}(\pm 0.15^{\circ}\text{F}) @ 900^{\circ}\text{C}(1652^{\circ}\text{F})$

INPUT SPECIFICATIONS	ACCURACY IN °C/°F
Accuracy thermocouple type U	$\pm 0.13^{\circ}\text{C}(\pm 0.24^{\circ}\text{F}) @ -80^{\circ}\text{C}(-112^{\circ}\text{F})$
-80°C to 600°C	$\pm 0.10^{\circ}\text{C}(\pm 0.18^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$
(excluding sensor accuracy)	$\pm 0.08^{\circ}\text{C}(\pm 0.14^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$
	$\pm 0.08^{\circ}\text{C}(\pm 0.14^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$
	$\pm 0.08^{\circ}\text{C}(\pm 0.14^{\circ}\text{F}) @ 600^{\circ}\text{C}(1112^{\circ}\text{F})$
Accuracy automatic cold junction compensation	$\pm 0.30^{\circ}\text{C} (\pm 0.54^{\circ}\text{F}) @ \text{ambient temperature } 0^{\circ}\text{C to } 40^{\circ}\text{C} (32^{\circ}\text{F to } 104^{\circ}\text{F}).$
Accuracy RTD Pt1000 385	$\pm 0.049^{\circ}\text{C}(\pm 0.088^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$
Pt1000(90)385: -200°C to 850°C	$\pm 0.058^{\circ}\text{C}(\pm 0.104^{\circ}\text{F}) @ -90^{\circ}\text{C}(-130^{\circ}\text{F})$
* Pt1000(68)385: -200°C to 850°C	$\pm 0.061^{\circ}\text{C}(\pm 0.109^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$
(excluding sensor accuracy)	$\pm 0.064^{\circ}\text{C}(\pm 0.116^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$
	$\pm 0.075^{\circ}\text{C}(\pm 0.135^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$
	$\pm 0.088^{\circ}\text{C}(\pm 0.158^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$
	$\pm 0.096^{\circ}\text{C}(\pm 0.172^{\circ}\text{F}) @ 420^{\circ}\text{C}(788^{\circ}\text{F})$
	$\pm 0.117^{\circ}\text{C}(\pm 0.210^{\circ}\text{F}) @ 660^{\circ}\text{C}(1220^{\circ}\text{F})$
	$\pm 0.121^{\circ}\text{C}(\pm 0.217^{\circ}\text{F}) @ 700^{\circ}\text{C}(1292^{\circ}\text{F})$
	$\pm 0.136^{\circ}\text{C}(\pm 0.244^{\circ}\text{F}) @ 850^{\circ}\text{C}(1562^{\circ}\text{F})$
Accuracy RTD	$\pm 0.095^{\circ}\text{C}(\pm 0.171^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$
Pt500(90)385: -200°C to 850°C	$\pm 0.108^{\circ}\text{C}(\pm 0.193^{\circ}\text{F}) @ -90^{\circ}\text{C}(-130^{\circ}\text{F})$
(excluding sensor accuracy)	$\pm 0.111^{\circ}\text{C}(\pm 0.200^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$
	$\pm 0.116^{\circ}\text{C}(\pm 0.208^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$
	$\pm 0.129^{\circ}\text{C}(\pm 0.232^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$
	$\pm 0.145^{\circ}\text{C}(\pm 0.260^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$
	$\pm 0.154^{\circ}\text{C}(\pm 0.278^{\circ}\text{F}) @ 420^{\circ}\text{C}(788^{\circ}\text{F})$
	$\pm 0.181^{\circ}\text{C}(\pm 0.325^{\circ}\text{F}) @ 660^{\circ}\text{C}(1220^{\circ}\text{F})$
	$\pm 0.185^{\circ}\text{C}(\pm 0.333^{\circ}\text{F}) @ 700^{\circ}\text{C}(1292^{\circ}\text{F})$
	$\pm 0.204^{\circ}\text{C}(\pm 0.367^{\circ}\text{F}) @ 850^{\circ}\text{C}(1562^{\circ}\text{F})$

INPUT SPECIFICATIONS	ACCURACY IN °C/°F
Accuracy RTD	$\pm 0.118^{\circ}\text{C}(\pm 0.213^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$
* Pt400(90)385: -200°C to 850°C	$\pm 0.132^{\circ}\text{C}(\pm 0.238^{\circ}\text{F}) @ -90^{\circ}\text{C}(-130^{\circ}\text{F})$
(excluding sensor accuracy)	$\pm 0.137^{\circ}\text{C}(\pm 0.245^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$
	$\pm 0.141^{\circ}\text{C}(\pm 0.254^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$
	$\pm 0.156^{\circ}\text{C}(\pm 0.280^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$
	$\pm 0.173^{\circ}\text{C}(\pm 0.311^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$
	$\pm 0.184^{\circ}\text{C}(\pm 0.330^{\circ}\text{F}) @ 420^{\circ}\text{C}(788^{\circ}\text{F})$
	$\pm 0.212^{\circ}\text{C}(\pm 0.382^{\circ}\text{F}) @ 660^{\circ}\text{C}(1220^{\circ}\text{F})$
	$\pm 0.218^{\circ}\text{C}(\pm 0.391^{\circ}\text{F}) @ 700^{\circ}\text{C}(1292^{\circ}\text{F})$
	$\pm 0.238^{\circ}\text{C}(\pm 0.428^{\circ}\text{F}) @ 850^{\circ}\text{C}(1562^{\circ}\text{F})$
Accuracy RTD	$\pm 0.234^{\circ}\text{C}(\pm 0.421^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$
Pt200(90)385: -200°C to 850°C	$\pm 0.256^{\circ}\text{C}(\pm 0.461^{\circ}\text{F}) @ -90^{\circ}\text{C}(-130^{\circ}\text{F})$
(excluding sensor accuracy)	$\pm 0.262^{\circ}\text{C}(\pm 0.472^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$
	$\pm 0.269^{\circ}\text{C}(\pm 0.484^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$
	$\pm 0.290^{\circ}\text{C}(\pm 0.522^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$
	$\pm 0.314^{\circ}\text{C}(\pm 0.565^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$
	$\pm 0.330^{\circ}\text{C}(\pm 0.593^{\circ}\text{F}) @ 420^{\circ}\text{C}(788^{\circ}\text{F})$
	$\pm 0.371^{\circ}\text{C}(\pm 0.668^{\circ}\text{F}) @ 660^{\circ}\text{C}(1220^{\circ}\text{F})$
	$\pm 0.379^{\circ}\text{C}(\pm 0.682^{\circ}\text{F}) @ 700^{\circ}\text{C}(1292^{\circ}\text{F})$
	$\pm 0.409^{\circ}\text{C}(\pm 0.736^{\circ}\text{F}) @ 850^{\circ}\text{C}(1562^{\circ}\text{F})$
Accuracy RTD	$\pm 0.020^{\circ}\text{C}(\pm 0.035^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$
Pt100(90)385: -200°C to 850°C	$\pm 0.024^{\circ}\text{C}(\pm 0.042^{\circ}\text{F}) @ -90^{\circ}\text{C}(-130^{\circ}\text{F})$
* Pt100(68)385: -200°C to 850°C	$\pm 0.025^{\circ}\text{C}(\pm 0.044^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$
(excluding sensor accuracy)	$\pm 0.026^{\circ}\text{C}(\pm 0.047^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$
	$\pm 0.030^{\circ}\text{C}(\pm 0.054^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$
	$\pm 0.035^{\circ}\text{C}(\pm 0.063^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$
	$\pm 0.039^{\circ}\text{C}(\pm 0.069^{\circ}\text{F}) @ 420^{\circ}\text{C}(788^{\circ}\text{F})$
	$\pm 0.047^{\circ}\text{C}(\pm 0.084^{\circ}\text{F}) @ 660^{\circ}\text{C}(1220^{\circ}\text{F})$
	$\pm 0.049^{\circ}\text{C}(\pm 0.087^{\circ}\text{F}) @ 700^{\circ}\text{C}(1292^{\circ}\text{F})$
	$\pm 0.055^{\circ}\text{C}(\pm 0.098^{\circ}\text{F}) @ 850^{\circ}\text{C}(1562^{\circ}\text{F})$

INPUT SPECIFICATIONS	ACCURACY IN °C/°F
Accuracy RTD	±0.038°C(±0.069°F) @ -200°C(-328°F)
Pt50(90)385: -200°C to 850°C	±0.043°C(±0.078°F) @ -90°C(-130°F)
* Pt50(68)385: -200°C to 850°C	±0.045°C(±0.080°F) @ -50°C(-58°F)
(excluding sensor accuracy)	±0.047°C(±0.083°F) @ 0°C(32°F)
	±0.052°C(±0.093°F) @ 155°C(311°F)
	±0.058°C(±0.104°F) @ 320°C(608°F)
	±0.062°C(±0.111°F) @ 420°C(788°F)
	±0.073°C(±0.130°F) @ 660°C(1220°F)
	±0.074°C(±0.134°F) @ 700°C(1292°F)
	±0.082°C(±0.147°F) @ 850°C(1562°F)
Accuracy RTD	±0.186°C(±0.335°F) @ -200°C(-328°F)
Pt10(90)385: -200°C to 850°C	±0.202°C(±0.363°F) @ -90°C(-130°F)
(excluding sensor accuracy)	±0.206°C(±0.370°F) @ -50°C(-58°F)
	±0.210°C(±0.378°F) @ 0°C(32°F)
	±0.224°C(±0.402°F) @ 155°C(311°F)
	±0.239°C(±0.430°F) @ 320°C(608°F)
	±0.249°C(±0.448°F) @ 420°C(788°F)
	±0.276°C(±0.496°F) @ 660°C(1220°F)
	±0.281°C(±0.505°F) @ 700°C(1292°F)
	±0.301°C(±0.541°F) @ 850°C(1562°F)
Accuracy RTD	±0.019°C(±0.034°F) @ -200°C(-328°F)
Pt100(90)391: -200°C to 850°C	±0.023°C(±0.041°F) @ -90°C(-130°F)
* Pt100(68)391: -200°C to 850°C	±0.024°C(±0.043°F) @ -50°C(-58°F)
* Pt100(06)391: -200°C to 850°C	±0.025°C(±0.045°F) @ 0°C(32°F)
(excluding sensor accuracy)	±0.030°C(±0.054°F) @ 155°C(311°F)
	±0.035°C(±0.062°F) @ 320°C(608°F)
	±0.038°C(±0.067°F) @ 420°C(788°F)
	±0.046°C(±0.083°F) @ 660°C(1220°F)
	±0.048°C(±0.086°F) @ 700°C(1292°F)
	±0.054°C(±0.096°F) @ 850°C(1562°F)
	±0.065°C(±0.116°F) @ 1100°C(2012°F)

INPUT SPECIFICATIONS	ACCURACY IN °C/°F
Accuracy RTD	$\pm 0.038^{\circ}\text{C}(\pm 0.067^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$
Pt50(90)391: -200°C to 1100°C	$\pm 0.042^{\circ}\text{C}(\pm 0.076^{\circ}\text{F}) @ -90^{\circ}\text{C}(-130^{\circ}\text{F})$
* Pt50(68)391: -200°C to 1100°C (excluding sensor accuracy)	$\pm 0.044^{\circ}\text{C}(\pm 0.079^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$ $\pm 0.046^{\circ}\text{C}(\pm 0.082^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$ $\pm 0.051^{\circ}\text{C}(\pm 0.092^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$ $\pm 0.057^{\circ}\text{C}(\pm 0.102^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$ $\pm 0.061^{\circ}\text{C}(\pm 0.109^{\circ}\text{F}) @ 420^{\circ}\text{C}(788^{\circ}\text{F})$ $\pm 0.071^{\circ}\text{C}(\pm 0.128^{\circ}\text{F}) @ 660^{\circ}\text{C}(1220^{\circ}\text{F})$ $\pm 0.073^{\circ}\text{C}(\pm 0.132^{\circ}\text{F}) @ 700^{\circ}\text{C}(1292^{\circ}\text{F})$ $\pm 0.081^{\circ}\text{C}(\pm 0.145^{\circ}\text{F}) @ 850^{\circ}\text{C}(1562^{\circ}\text{F})$ $\pm 0.095^{\circ}\text{C}(\pm 0.170^{\circ}\text{F}) @ 1100^{\circ}\text{C}(2012^{\circ}\text{F})$
Accuracy RTD	$\pm 0.020^{\circ}\text{C}(\pm 0.036^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$
Pt100(90)392: -200°C to 630°C (excluding sensor accuracy)	$\pm 0.023^{\circ}\text{C}(\pm 0.042^{\circ}\text{F}) @ -90^{\circ}\text{C}(-130^{\circ}\text{F})$ $\pm 0.024^{\circ}\text{C}(\pm 0.042^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$ $\pm 0.024^{\circ}\text{C}(\pm 0.046^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$ $\pm 0.030^{\circ}\text{C}(\pm 0.054^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$ $\pm 0.035^{\circ}\text{C}(\pm 0.062^{\circ}\text{F}) @ 320^{\circ}\text{C}(608^{\circ}\text{F})$ $\pm 0.038^{\circ}\text{C}(\pm 0.068^{\circ}\text{F}) @ 420^{\circ}\text{C}(788^{\circ}\text{F})$ $\pm 0.045^{\circ}\text{C}(\pm 0.081^{\circ}\text{F}) @ 630^{\circ}\text{C}(1166^{\circ}\text{F})$
Accuracy RTD	$\pm 0.020^{\circ}\text{C}(\pm 0.035^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$
M100(90)428: -200°C to 200°C	$\pm 0.021^{\circ}\text{C}(\pm 0.038^{\circ}\text{F}) @ -90^{\circ}\text{C}(-130^{\circ}\text{F})$
* M100(68)428: -200°C to 200°C (excluding sensor accuracy)	$\pm 0.022^{\circ}\text{C}(\pm 0.040^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$ $\pm 0.024^{\circ}\text{C}(\pm 0.043^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$ $\pm 0.027^{\circ}\text{C}(\pm 0.048^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$ $\pm 0.028^{\circ}\text{C}(\pm 0.050^{\circ}\text{F}) @ 200^{\circ}\text{C}(392^{\circ}\text{F})$
Accuracy RTD	$\pm 0.038^{\circ}\text{C}(\pm 0.069^{\circ}\text{F}) @ -200^{\circ}\text{C}(-328^{\circ}\text{F})$
M50(90)428 : -200°C to 200°C	$\pm 0.040^{\circ}\text{C}(\pm 0.071^{\circ}\text{F}) @ -90^{\circ}\text{C}(-130^{\circ}\text{F})$
* M50(68)428 : -200°C to 200°C (excluding sensor accuracy)	$\pm 0.041^{\circ}\text{C}(\pm 0.073^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$ $\pm 0.043^{\circ}\text{C}(\pm 0.076^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$ $\pm 0.046^{\circ}\text{C}(\pm 0.082^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$ $\pm 0.047^{\circ}\text{C}(\pm 0.083^{\circ}\text{F}) @ 200^{\circ}\text{C}(392^{\circ}\text{F})$
Accuracy RTD	$\pm 0.023^{\circ}\text{C}(\pm 0.041^{\circ}\text{F}) @ -50^{\circ}\text{C}(-58^{\circ}\text{F})$
* M100(90)426: -50°C to 200°C (excluding sensor accuracy)	$\pm 0.024^{\circ}\text{C}(\pm 0.043^{\circ}\text{F}) @ 0^{\circ}\text{C}(32^{\circ}\text{F})$ $\pm 0.027^{\circ}\text{C}(\pm 0.048^{\circ}\text{F}) @ 155^{\circ}\text{C}(311^{\circ}\text{F})$ $\pm 0.028^{\circ}\text{C}(\pm 0.050^{\circ}\text{F}) @ 200^{\circ}\text{C}(392^{\circ}\text{F})$

INPUT SPECIFICATIONS	ACCURACY IN °C/°F
Accuracy RTD	±0.040°C(±0.071°F) @ -50°C(-58°F)
* M53(68)426: -50°C to 200°C (excluding sensor accuracy)	±0.041°C(±0.073°F) @ 0°C(32°F) ±0.044°C(±0.078°F) @ 155°C(311°F) ±0.045°C(±0.080°F) @ 200°C(392°F)
Accuracy RTD	±0.042°C(±0.075°F) @ -50°C(-58°F)
* M50(90)426: -50°C to 200°C (excluding sensor accuracy)	±0.043°C(±0.077°F) @ 0°C(32°F) ±0.046°C(±0.082°F) @ 155°C(311°F) ±0.047°C(±0.084°F) @ 200°C(392°F)
Accuracy RTD	±0.021°C(±0.037°F) @ -60°C(-76°F)
* H100(90)617: -60°C to 180°C (excluding sensor accuracy)	±0.019°C(±0.033°F) @ 0°C(32°F) ±0.017°C(±0.030°F) @ 100°C(212°F) ±0.015°C(±0.027°F) @ 180°C(392°F)
Accuracy RTD	±0.016°C(±0.029°F) @ -80°C(-112°F)
H120(90)672: -80°C to 260°C (excluding sensor accuracy)	±0.015°C(±0.027°F) @ 0°C(32°F) ±0.014°C(±0.025°F) @ 100°C(212°F) ±0.012°C(±0.021°F) @ 260°C(500°F)
Accuracy RTD	±0.020°C(±0.036°F) @ -200°C(-328°F)
Pt100 MILL: -200°C to 850°C (excluding sensor accuracy)	±0.023°C(±0.041°F) @ -90°C(-130°F) ±0.024°C(±0.043°F) @ -50°C(-58°F) ±0.026°C(±0.046°F) @ 0°C(32°F) ±0.030°C(±0.054°F) @ 155°C(311°F) ±0.035°C(±0.063°F) @ 320°C(608°F) ±0.038°C(±0.068°F) @ 420°C(788°F) ±0.046°C(±0.083°F) @ 660°C(1220°F) ±0.048°C(±0.086°F) @ 700°C(1292°F) ±0.054°C(±0.097°F) @ 850°C(1562°F)
Accuracy RTD YSI-400 15°C to 50°C (excluding sensor accuracy)	±0.002°C(±0.004°F) @ 15°C(59°F) ±0.008°C(±0.013°F) @ 50°C(122°F)

INPUT SPECIFICATIONS	ACCURACY IN °C/°F
Accuracy Pt100 reference input (excluding sensor accuracy)	±0.006°C(±0.010°F) @ -200°C(-328°F)
	±0.007°C(±0.013°F) @ -90°C(-130°F)
	±0.008°C(±0.015°F) @ -50°C(-58°F)
	±0.008°C(±0.015°F) @ 0°C(32°F)
	±0.011°C(±0.019°F) @ 155°C(311°F)
	±0.014°C(±0.024°F) @ 320°C(608°F)
	±0.015°C(±0.027°F) @ 420°C(788°F)
	±0.020°C(±0.035°F) @ 660°C(1220°F)
	±0.020°C(±0.036°F) @ 700°C(1292°F)
	±0.023°C(±0.042°F) @ 850°C(1562°F)

* Available upon request on selected markets.

STANDARDS

The following standards are observed according to the EMC-Directive (2014/30/EU)

EN 61326-1: 2013: Electrical equipment for measurement, control and laboratory use – EMC requirements

The following standards are observed according to the low voltage-directive (2014/35/EU)

EN61010-1:2010 : Safety requirements for electrical equipment for measurement, control and laboratory use, part 1: General requirement

EN61010-2-010:2014 : Safety requirements for electrical equipment for measurement, control and laboratory use, part 2-010: Particular requirements for laboratory equipment for the heating of materials (RTC-250/700 only)

EN61010-2-030:2010 : Safety requirements for electrical equipment for measurement, control and laboratory use, part 2-030: Particular requirements for testing and measuring circuits

PATENTS

RTC-159

Patented heating technology

Patent No.: EP2074374/US8342742

RTC-700

Patented fast cooling technology

Patent No.: EP2399107/US8721173

All RTC models B and C

Patented DLC system

Patent No.: EP2350588/US8801271

11.0 List of accessories

All parts listed in the list of accessories can be obtained from the factory through our dealers.

Please contact your dealer for assistance if you require parts, which do not appear on the list.

List of accessories

Accessories	Parts no.
Fuse 115V, 10AF (RTC-250/700)	60B302
Fuse 230V, 5AF (RTC-250/700)	127573
Fuse 250V, 8AT (RTC-156/157/158/168/187)	127211
Fuse 250V, 4AT (RTC-156/157/158/168/187)	127210
Tool for insertion tube	60F170
Insulation collar (RTC-156 only)	123652
Set of silicone plugs (RTC-156/157/158/159/168/187/250 only)	126280
Heat shield (RTC-700 only)	127375
Carrying case (RTC-156/157/187)	127292
Carrying case (RTC-158/168/250)	127782
Carrying case (RTC-159)	128524
Carrying case (RTC-700)	127552
Mains cable, 115V, US, type B	60F135
Mains cable, 240V, UK, type C	60F136
Mains cable, 220V, South Africa, type D	60F137
Mains cable, 220V, Italy, type E	60F138
Mains cable, 240V, Australia, type F	60F139
Mains cable, 230V, Europe, type A	60F140
Mains cable, 230V, Denmark, type G	60F141
Mains cable, 220V, Switzerland, type H	60F142
Mains cable, 230V, Israel, type I	60F143
Thermocouple male plug type K	120517
Thermocouple male plug type N	120514
Thermocouple male plug type T	120515
Thermocouple male plug type Cu-Cu	120519
Thermocouple male plug type J	120516
Thermocouple male plug type R/S	120518
USB cable	127278
Electronical ref. manual +JOFRACAL PC software	127429
Mini Jack connector	122771
Dust filter (RTC-159 only)	128222
Cleaning brush \varnothing 4mm	122832
Cleaning brush \varnothing 6mm	60F174
Cleaning brush \varnothing 8mm	122822
Application kit for calibration of sanitary sensors	127279
Liquid bath kit (RTC-158)	125022
Liquid bath kit (RTC-168)	130403
Liquid bath kit (RTC-250)	125035

List of accessories

Accessories	Parts no.
Silicone oil for RTC-158/168, 5 cSt (0.75 l.)	130509
Silicone oil for RTC-158/168, 10 cSt (0.75 l.)	125033
Silicone oil for RTC-250, 50 cSt (0.75 l.)	124885
Support rod set for sensors	127277
Extra fixture for sensor grip	125066
Extra sensor grip	125067
Set of test cables	104203
Cable for STS-200, LEMO/LEMO 6-pol, 650 mm.	127131
Reference probe STS-200 90°, with accredited certificate, diameter 4mm, (-45°C to 155°C) (RTC-156/157/187)	STS200A915EH
Reference probe STS-200 90°, with accredited certificate, diameter ¼", (-45°C to 155°C) (RTC-156/157/187)	STS200B915EH
Reference probe STS-200 90°, with accredited certificate, diameter 4mm, (-45°C to 180°C) (RTC-187)	STS200A918EH
Reference probe STS-200 90°, with accredited certificate, diameter ¼", (-45°C to 180°C) (RTC-187)	STS200B918EH
Reference probe STS-200 90°, with accredited certificate, diameter 4mm, (-100°C to 155°C) (RTC-159)	STS200A917EH
Reference probe STS-200 90°, with accredited certificate, diameter ¼", (-100°C to 155°C) (RTC-159)	STS200B917EH
Reference probe STS-200 90°, with accredited certificate, diameter 4mm, (-45°C to 155°C) (RTC-158)	STS200A916EH
Reference probe STS-200 90°, with accredited certificate, diameter ¼", (-45°C to 155°C) (RTC-158)	STS200B916EH
Reference probe STS-200 90°, with accredited certificate, diameter 4mm, (-45°C to 165°C) (RTC-168)	STS200A919EH
Reference probe STS-200 90°, with accredited certificate, diameter ¼", (-45°C to 165°C) (RTC-168)	STS200B919EH
Reference probe STS-200 90°, with accredited certificate, diameter 4mm, (0°C to 250°C) (RTC-250)	STS200A925EH
Reference probe STS-200 90°, with accredited certificate, diameter ¼", (0°C to 250°C) (RTC-250)	STS200B925EH
Reference probe STS-200 90°, with accredited certificate, diameter 4mm, (0°C to 700°C) (RTC-700)	STS200A970EH
Reference probe STS-200 90°, with accredited certificate, diameter ¼", (0°C to 700°C) (RTC-700)	STS200B970EH



www.ametekcalibration.com

UK

Tel +44 (0)1243 833 302
stc.uk@ametek.com

France

Tel +33 (0)1 30 68 89 40
general.lloyd-instruments@ametek.fr

Germany

Tel +49 (0)2159 9136 510
info.mct-de@ametek.de

Denmark

Tel +45 4816 8000
jofra@ametek.com

USA - California

Tel +1 (800) 444 1850
crystal@ametek.com

USA - Florida

Tel +1 (800) 527 9999
cal.info@ametek.com

India

Tel +91 22 6196 8200
jofra@ametek.com

Singapore

Tel +65 6484 2388
jofra@ametek.com

China - Beijing

Tel +86 10 8526 2111 ext. 19
stc.china@ametek.com