


User Manual
JOFRACAL
for JOFRA Pressure Calibrators

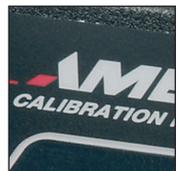

User Manual
JOFRACAL
for JOFRA Pressure Calibrators

© Copyright 2007 AMETEK Denmark A/S

LIST OF CONTENTS

Page

1. INTRODUCTION	11
1.1 General information	12
1.2 Hardware requirements	12
1.2.1 JOFRA models:	13
1.2.2 PCs, minimum hardware requirements:	13
1.2.3 PCs, minimum software requirements:	13
1.3 Installing JOFRACAL	13
1.3.1 DotNet Framework	14
1.3.2 RTC/PTC USB driver (temperature)	14
1.4 Reinstalling JOFRACAL	14
1.5 Converting the AmeCal–Temperature Database	15
1.6 Connecting JOFRACAL to a JOFRA device	15
1.6.1 RS232 communication	15
1.6.2 USB communication(temperature only)	16
1.7 Starting the JOFRACAL program	16
1.7.1 Windows XP(32bit)/Vista(32bit/7(32&64bit) [®]	16
1.7.2 First time access to JOFRACAL	17
1.8 Backup copies	18
1.9 Uninstalling JOFRACAL	18
1.10 Program structure for JOFRACAL	19
1.11 Database management	19
1.11.1 To select a database	20
1.11.2 To create a new database	21
2. HOW TO SELECT A USER	22
2.1 Super users	22
2.2 Normal users	23
2.3 Select a user	23

2.4	Program default user names	23
2.5	Main menu.....	23
3.	DEVICE MAINTENANCE.....	26
3.1	View a test device	26
3.1.1	Device summary details	27
3.1.2	Calibration certificates & history	27
3.1.3	Viewing a certificate.....	28
3.1.4	Delete certificate.....	31
3.2	View History	32
3.3	Edit a test device	34
3.3.1	Test device properties	35
3.3.2	Defining a device type	35
4.	CALIBRATION SETUP.....	36
4.1	Select a test device for calibration.....	36
4.2	Defining the calibration test setup scenario.....	38
4.2.1	Creating a new Test setup.....	40
4.2.2	Test Setup parameters	40
4.3	Defining the calibration procedure.....	42
4.3.1	Selecting an existing Procedure	43
4.3.2	Creating a new Procedure.....	43
4.3.3	Deleting a procedure	44
4.3.4	Copy a procedure	44
4.3.5	Test Setup parameters	45
4.3.6	Pressure points.....	46
4.3.7	Autofill function	46
4.3.8	Stability criteria	47
5.	DEFINING PRESSURE SOURCES.....	48
5.1	Select a pressure source.....	49
5.2	Create a new source record.....	49

5.3	Copy a pressure source record	49
5.4	Delete a pressure source record	49
5.5	Pressure source general data	49
5.5.1	Manufacturer	49
5.5.2	Serial number	50
5.5.3	Model.....	50
5.5.4	Calibration dates.....	50
5.5.5	Description.....	50
5.5.6	Minimum/maximum pressure range	50
5.5.7	Digits.....	50
5.5.8	Calibration notes.....	50
5.5.9	Certificate note	50
6.	TRUE READING METHOD.....	51
6.1	User-defined methods	52
6.2	Selecting a True reading method	52
6.3	Creating a user-defined method	52
6.4	Copy a User-defined method	54
6.5	Deleting a True reading method	54
6.6	True read parameters.....	55
6.6.1	General parameters.....	55
6.6.1.1	Digits:.....	55
6.6.2	Logging device parameters	55
6.6.2.1	Manufacturer	56
6.6.2.2	Serial number	56
6.6.2.3	Logging type	56
6.6.2.4	Logging sub type:	56
6.6.2.5	External pressure module.....	57
6.6.2.6	Calibration dates.....	57
6.6.2.7	Resolution.....	57
6.6.2.8	Notes	57
6.6.3	Certificate note	57

6.7	Quick connect to logging device:.....	58
7.	REFERENCE SENSORS	59
7.1	Selecting an external reference module	60
7.2	New reference module from device.....	60
7.3	Copy reference module	61
7.4	Delete reference module	62
7.5	Reference module properties	62
7.5.1	Manufacturer	62
7.5.2	Serial number	62
7.5.3	Reference module type	62
7.5.4	Calibration dates.....	63
7.5.5	Minimum/maximum pressure	63
7.5.6	Notes	63
7.5.7	Certificate note	63
8.	D.U.T READING METHOD	64
8.1	Predefined standard methods	65
8.2	User-defined methods	65
8.3	Selecting a D.U.T reading method	65
8.4	Creating a user-defined method	65
8.5	Copy a User-defined method	67
8.6	Deleting a D.U.T reading method	67
8.7	D.U.T read parameters.....	68
8.7.1	General parameters.....	68
	Digits:	68
	Convert to pressure:.....	68
8.7.2	Logging device parameters	68
	Manufacturer	69
	Serial number	69
	Logging type.....	69
	Calibration dates	69

	Resolution:	69
	Notes	70
	Certificate note	70
9.	UPLOAD/DOWNLOAD	71
9.1	Work orders	72
9.1.1	Creating a work order	72
9.1.2	The work order list	72
9.1.3	Connecting to the DPC-500.....	73
9.1.4	Current work orders in calibrator	74
9.1.5	Up / downloading work orders	75
9.1.6	Disconnecting the device Up/Download	75
9.2	Reference sensor	76
10.	SCHEDULER	77
10.1	Selecting devices	78
10.2	Scheduling for calibration	78
10.3	Remove from schedule list	78
10.4	Scheduled devices report.....	79
11.	HOW TO EDIT A TEST DEVICE.....	80
11.1	Test device properties	81
11.1.1	Manufacturer	81
11.1.2	Serial number	81
11.1.3	Sensor type, subtype and output properties.....	81
11.1.4	Last calibration date	81
11.1.5	Last certificate number	81
11.1.6	Calibration interval.....	82
11.1.7	Scheduled.....	82
11.1.8	Pass/Fail criteria	82
11.1.9	Notes	83
11.1.10	Certificate note	83

11.1.11	Sensor location tags	83
11.1.12	Minimum/maximum range	84
11.2	Defining a test device calibration setup	84
11.3	Defining a test device Procedure	84
11.4	Defining a device type	85
11.4.1	Category	85
11.4.2	Pressure device definitions.....	85
	Pressure types	86
	Medium	86
	Output type.....	86
	Pressure measure unit	87
24V	loop supply	87
	Pressure scale.....	87
12.	USING THE DEVICE SEARCH DIALOG.....	89
12.1	Selected / deselecting	90
12.2	Sorting devices.....	90
12.2.1	Sorting by location	90
12.2.2	Sorting by device type	92
12.2.3	Sorting by manufacturer	92
12.3	Selection filters:	93
12.3.1	Filter with device type and output unit	93
12.3.2	Filter with dates	94
12.3.3	Filter using the device scheduled property	94
12.3.4	Due for calibration indicator.....	95
13.	ONLINE CALIBRATION	96
13.1	Single device calibration.....	96
13.2	Multi device calibration	97
13.3	Multiple manual calibration	98
13.4	Multiple calibration with the ASM	99
13.4.1	Viewing previous steps in multi-device calibration ..	99

13.5	Online control buttons	100
13.6	Calibration completion.....	101
13.7	Saving the calibration certificate.....	101
13.7.1	Certificate name	102
13.7.2	Certificate copy alternatives	102
13.7.3	AsFound AsLeft.....	102
13.8	Online Information	103
13.9	Reading of data from devices.....	103
13.10	Test points.....	104
13.11	Set point stability	104
14.	SYSTEM CONFIGURATION.....	106
14.1	Company information	106
14.1.1	Company name	107
14.1.2	Working instructions	107
14.1.3	Company Logo	107
14.2	Certificate	108
14.2.1	Certificate numbering	109
14.2.2	Automatic numbering of certificates	109
14.2.3	Next certificate - lead text.....	110
14.2.4	Next certificate - number	110
14.2.5	Certificate translation.....	110
14.2.6	Translate certificate texts.....	110
14.2.7	Translation table.....	111
14.2.8	Certificate output defaults.....	111
14.3	Default measure units	111
14.3.1	Default temperature measuring unit	112
14.3.2	Default pressure engineering unit.....	112
14.3.3	Storage temperature.....	113
14.3.4	Mains frequency	113
14.4	Miscellaneous.....	113

14.4.1	User defined sensor location labels.....	114
14.4.2	DTI resolution message.....	115
14.4.3	Calibration Uncertainty information	115
14.4.4	Language selection	116
14.5	User registration	116
14.6	Database Conversion program	116
14.6.1	Selecting the Amecal-Temperature database	117
14.6.2	Selecting the JOFRACAL database	118
14.6.3	Running the conversion.....	119
14.6.4	Conversion log panel.....	120
14.6.5	Close and save the conversion details	121
14.7	Export certificate database.....	122

1. INTRODUCTION

This manual contains installation and operating instructions for:

JOFRA WINDOWS' CALIBRATION PROGRAM

JOFRACAL

The program was developed by:

AMETEK Denmark A/S

Gydevang 32-34
DK-3450 Allerød
Denmark

Tel.: +45 48 16 80 00

Fax: +45 48 16 80 80

1.1 General information

The JOFRACAL program is designed to perform temperature, pressure and signal tests to calibrate sensors using JOFRA equipment via with RS-232 and USB communication ports.

The software is supplied on a media device with update downloads available from the AMETEK home page.

Knowledge of the JOFRA equipment and system to be tested is essential in order to obtain the maximum benefit from this program. Knowledge of Windows[®] programs in general is an advantage.

- **Warranty**
Use of the product remains the full responsibility of the user, and AMETEK Denmark A/S offers no warranty and is under no obligation in relation to this product. In addition, AMETEK Denmark A/S cannot be held responsible for any damage, which may occur in connection with the use of this product, including loss of earnings, loss of profit, loss of data or recovery of lost data, loss of goodwill and other similar incidental or consequential damage or loss.
- **Technical assistance**
Please contact the distributor, if you require technical assistance.

1.2 Hardware requirements

JOFRACAL can communicate with the following JOFRA equipment and has the following requirements from the PC:

1.2.1 JOFRA models:

JOFRA pressure models:

- ASCxx series
- ASM-80x A, ASM-80x B
- APC/CPC
- HPC
- AMC-900
- IPI
- DPC (Work order only)

1.2.2 PCs, minimum hardware requirements:

- Intel® Pentium® II 1.4 GHz processor.
- 128MB RAM (256MB recommended)
- 512MB free disk space on hard disk (1GB recommended) prior to installation
- Standard VGA (800x600, 256 colours). 1024x768 recommended.
- USB port.
- One or more free RS-232 serial and USB ports, if using devices requiring communication.

1.2.3 PCs, minimum software requirements:

- Microsoft Windows® XP(32bit), Vista(32bit) and 7(32&64bit).
- System fonts: MS Sans Serif and Arial

1.3 Installing JOFRACAL

The JOFRACAL program is supplied comes complete with its own installation program.

Future upgrades available for download on www.jofra.com.



Simply insert the data medium and execute the Autorun.exe then follow the instructions on screen.

By default, JOFRACAL is installed in the directory: *Default program folder*\JOFRACAL and an icon automatically appears on the Program's menu.

It is recommended that you uninstall the current JOFRACAL prior to installation. Your current data will be maintained.

If you want to install the program manually, the data medium also contains a SETUP.EXE file in the Jofracal folder.

1.3.1 DotNet Framework.

The JOFRACAL software requires Microsoft .NET FRAMEWORK SP1 which is installed if not already found on the PC.

1.3.2 RTC/PTC USB driver (temperature)

The RTC/PTC series calibrators required a driver to communicate with JOFRACAL. This driver is installed automatically during the installation of JOFRACAL.

☞ Note: when installing on Microsoft Windows® XP, Vista and 7, you must have Administrator's privileges. If not please contact your local System Administrator.

1.4 Reinstalling JOFRACAL

The installation program detects whether JOFRACAL is already installed on the PC. To reinstall the current installation must be uninstalled, Databases are not deleted nor are they overwritten if reinstalled to the same location. If a complete reinstallation is required including databases, the old installation folder must be deleted manually or reinstalled to another location.

1.5 Converting the AmeCal–Temperature Database

It is possible to use data from the existing AmeCal–Temperature database with the new JOFRACAL software.

Before an AmeCal–Temperature database can be used with JOFRACAL it must be converted.

(See Database conversion program)

Most data from the AmeCal database is converted including:

- Test devices, their relevant history and certificate information
- Source information
- Procedures
- System configuration.

1.6 Connecting JOFRACAL to a JOFRA device

1.6.1 RS232 communication

JOFRACAL can be connected to a JOFRA (ATC, CTC, ITC, CTC, MTC, ETC,SE) calibrator and/or JOFRA DTI / DTI050/ ASC / ASM-80x or connected to the following JOFRA pressure calibrators using a serial connection (RS232) port.

- ASC
- HPC .
- APC
- ASM
- DTI050
- DPC-500

The JOFRA device must therefore be equipped with a serial communication port. The device should be connected to a free serial port on the PC - please refer to the PC manual for further information regarding the location and appearance of serial ports. Use the serial cable supplied with the device.

1.6.2 USB communication(temperature only)

JOFRACAL can be connected to any JOFRA RTC/PTC calibrator via a USB port. The very first time a specific RTC/PTC is connected to a PC, Windows will require the usb driver to be installed. This process is the same as any other Plug and play device.

IMPORTANT!

- The JOFRA device must be switched off when connecting the cable from the PC.
- The JOFRA device and the PC must be earthed to avoid noise interference and damage to the equipment.
- You are advised not to switch the calibrator on until JOFRACAL has been started.

1.7 Starting the JOFRACAL program

1.7.1 Windows XP(32bit)/Vista(32bit/7(32&64bit))[®]

- Click *Start*.
- Select *Programs*.
- Select *JOFRACAL*.

- Select *JOFACAL Calibration software*.

1.7.2 First time access to JOFRACAL

On start up, JOFRACAL begins by displaying the login dialog in which the operator must select a user and key in the password.



User and access levels, these are described in section 2 page 22.

As no user-defined names have been added at this stage, you are required to use one of the default names. These are:

MASTER or USER
(No passwords are required)

JOFRACAL also remembers the location of the database last used and the complete path is displayed in the database field.

The first time you log in JOFRACAL a default database is located in the JOFRACAL subdirectory \DB.

Databases can be created, selected and deleted. This is described in section 1.11 page 19.

Note: The logon dialog can also be called from the menu in JOFRACAL allowing the user to change both database and user without closing the program.

1.8 Backup copies

 **ALWAYS MAKE BACKUP COPIES!** 

Loosing data can waste a great deal of time and resources, and it is important that you take the time required to make a backup copy of your database. The backup copy should include all files in the JOFRACAL\DB folder. Backup copies should be made using a suitable backup program - follow the manufacturer's instructions.

1.9 Uninstalling JOFRACAL

JOFRACAL is removed from the PC as follows:

- Open Control Panel
- Open Add/Remove Programs
- Select JOFRACAL
- Press Add/Remove button and follow instructions on screens

JOFRACAL default database (CDS files in the \DB folder) will not be deleted during the uninstall process. The database can therefore be used for subsequent installations of JOFRACAL or other programs.

1.10 Program structure for JOFRACAL

Like other Windows[®] programs, JOFRACAL uses buttons, dialog boxes, grids, tables, etc. JOFRACAL uses paging controls to navigate through the main areas of the program.



The JOFRACAL functions are divided into five main areas:

- Device maintenance (section 3 page 26)
- Calibration setup (section 4 page 36)
- Upload / Download (section 9 page 71)
- Scheduler (section 10 page 77)
- Online Calibrating (section 13 page 96)

Apart from the main program areas, there is the system configuration dialog (section 14 page 106) called from the menu.

These functions are described in detail in the specified sections of this manual.

1.11 Database management

Under installation a default database is created. It consists of several CDS (Client Data Set) files and is located in the subdirectory \DB of the JOFRACAL installation folder.

For users who only require a single database, this database is always default start up database.

Program menu – database options




When using multiple databases, the correct database must be selected before logging on to JOFRACAL.

1.11.1 To select a database

Select another database by clicking on the  button before logging on to show the database selection dialog and find the required JOFRACAL.CDS file.

Program – Select Database

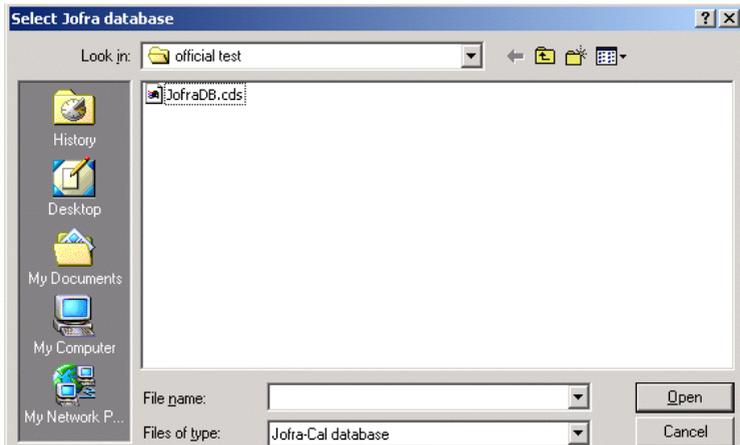

Use this dialog to locate and select the correct database.
Click Open to use the selected database and return to the login menu.

1.11.2 To create a new database

For those wishing to use multiple databases, simply create a new subdirectory and copy the new database files into the new folder. An empty database can be found on the installation CD.



Warning. Make sure the CDS database files are not write protected after copying from the data medium. Remove the Read Only property flag.

2. HOW TO SELECT A USER



You must select a user in order to run JOFRACAL.

Select user:



Users are maintained in the System setup. Users can have either full access (*super users*) or restricted access (*normal users*) to the JOFRACAL system. Please note that users do not require full access to perform a calibration (section 14.4.1 page 114).

Details of the default user names are found in section 2.4 page 23. These provide access to the program before any user names are defined.

2.1 Super users

Super users have access to the complete database and can create, delete and edit sensors, heat sources, procedures, etc.

2.2 Normal users

Normal users cannot create, edit or delete information, nor can they modify the system setup. They can only perform calibrations using existing information, but may create certificates once the calibration procedure has been completed.

2.3 Select a user

Select a user from the User list box.

Confirm by clicking 

- or -

to exit JOFRACAL, click .

An error message will be displayed if an unknown user or an incorrect password is entered.


2.4 Program default user names

Two users will be set up the first time you run JOFRACAL. The first user name, *MASTER*, is a super user. The other user name, *USER*, is a normal user. No password has been linked to these two users. Once the 'real' users have been set up, *MASTER* and *USER* can be deleted. Note that user ID can only be deleted by a super user, and that the current user cannot be deleted (Section 14.4.1 page 114).

2.5 Main menu

When JOFRACAL has accepted the selected user, the main menu is shown:

Main menu

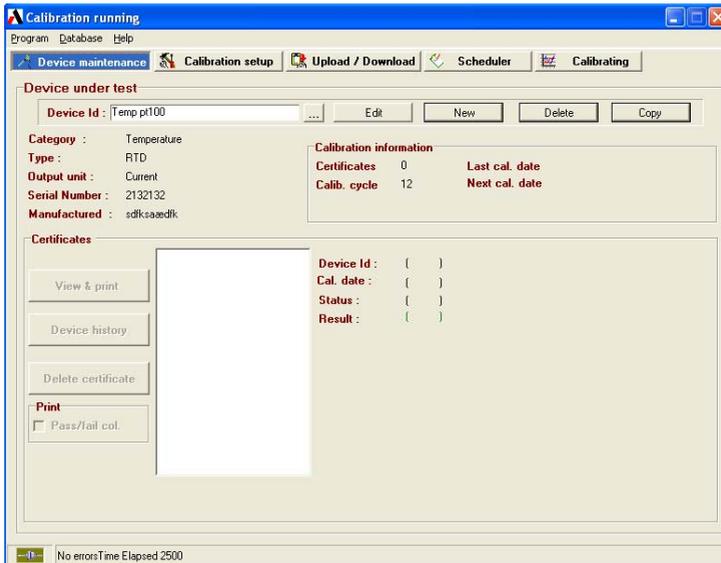

JOFRACAL uses paging controls to navigate through the main areas of the program. The active page is always highlighted in blue. Select a page by clicking on the page tab.

The 5 main areas of JOFRACAL

Device Maintenance: Test device database and calibration history.

Calibration Setup: Select a device, set up and run a calibration.

Upload/Download: Up/download offline calibrations and maintain reference sensor database.

Scheduler: Earmark devices due for calibration.


Calibrating: Online calibrating.

Exit: Not visible during online calibration.

☞ Note that the 'Calibrating' page tab replaces the 'Exit' during online calibration.

3. DEVICE MAINTENANCE

Device maintenance dialog:

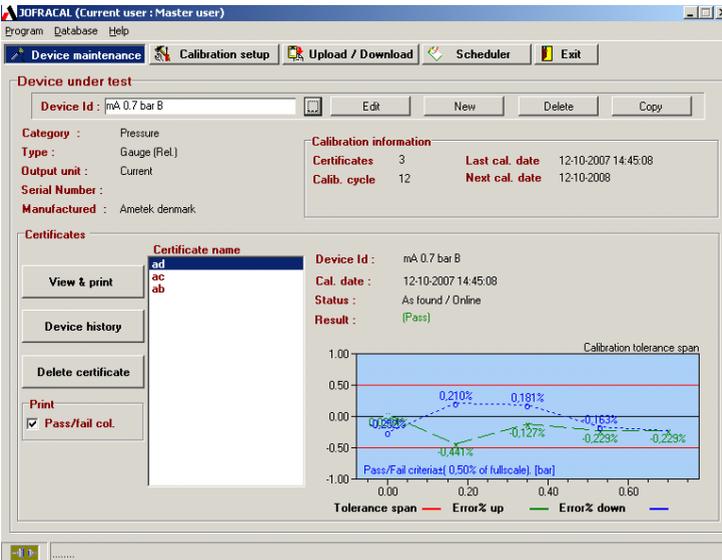

The device maintenance allows the user to maintain and view the test instrument database. The user can create, copy, delete and edit a test device. (To Edit see Section 3.3 Page 34).

3.1 View a test device

To view a device the user must click the  select button to display the Device search dialog. (Section 12 page 89).

3.1.1 Device summary details

When a device is selected the user can find information regarding the device's basic properties, calibration history, and a list of previous calibration certificates.


Device summary details – maintenance

Device under test		Calibration information	
Device Id :	mA 0.7 bar B	Certificates	3
Category :	Pressure	Last cal. date	12-10-2007 14:45:08
Type :	Gauge (Rel.)	Calib. cycle	12
Output unit :	Current	Next cal. date	12-10-2008
Serial Number :			
Manufactured :	Ametek denmark		

3.1.2 Calibration certificates & history

Device calibration history is seen in the lower half to the device maintenance screen including a list of all completed certificates. A brief summary of the highlighted certificate (date, pass/fail, deviation graph) is detailed to the right.

Device calibration certificates - maintenance

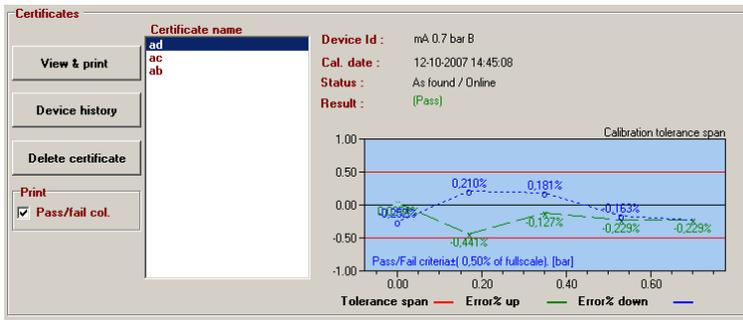

3.1.3 Viewing a certificate

All certificates created by JOFRACAL are saved in a certificate database file 'prCertFile.CDS'. These may be viewed, printed and saved in PDF format as, and when, required.


Highlight the Certificate you wish to view from the certificate list, then

View & print

click the button.

The system displays the following window:

Certificate output options - maintenance

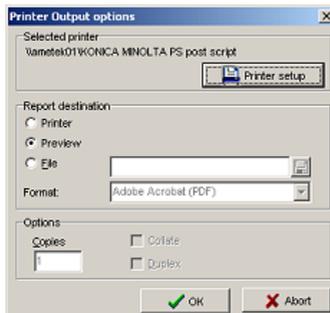

The user has 3 output options:

1. Send direct to the printer.
2. Preview the certificate on the screen.
3. Save as a PDF of NDF formats.

If the user chooses to preview the certificate the following screen appears.

A two-page report is displayed.

Certificate preview – page 1:

Calibration Certificate

Certificate No ad 
 Calibration status As found / Online
 Calibration result Pass Max. deviation -0,003088bar
 Time start 14:45:08 Duration 00:04:54 Calibration date 12. oktober 2007

Device under test (D.U.T.)

Identification mA 0,7 bar B Serial number
 Manufacturer Ametek denmark Pass/Fail criteria ±(0,50%)s
 Device type Gauge (Rel.) Last calibrated 12. oktober 2007
 DevSubType mA input, 4-20mA Scaling 4 mA=0,00 bar
 Output unit Current 20 mA=0,70 bar

Note
 Factory Department Sections

D.U.T. reading device mA Input on true

True reading device APC 200

Device type APC Serial number 8555004
 Manufacturer Ametek A/S Channel N/A
 Note

Reference sensor

Identification Aprm Serial number 30601501
 Manufacturer Ametek Denmark A/S
 Note

Source 1


Identification T-Pump Serial number 1910
 Manufacturer Ametek Device type T-990 PRESSURE PUMP

Certificate preview – page 2 results:

Calibration Certificate

Certificate No ad 
 Calibration status As found / Online
 Calibration result Pass Max. deviation -0,003088bar
 Time start 14:45:08 Duration 00:04:54 Calibration date 12. oktober 2007

Calibration graph deviation mA 0,7 bar B

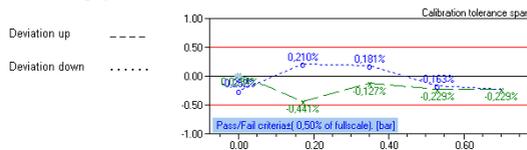

Stability (True) : Set point tolerance± 10,000000% of fullscale bar 0,700000 + Delay time 5sec. .

Step	Set [bar]	Fullscale [%]	True [bar]	Sensor [bar]	Deviation [bar/%fs.]	Pass/Fail
1	0,00	0,00	0,000100	0,000306	0,000206 / 0,029	Pass
2	0,17	25,00	0,176000	0,174912	-0,003088 / -0,441	Pass
3	0,35	50,00	0,350600	0,349912	-0,000888 / -0,127	Pass

The window may be resized by dragging its corners, or it can be maximized to fill the entire screen.




The buttons at the top of the screen provide the following functions:



Save certificate in PDF format.




Print certificate currently displayed



Page navigating. First, Previous, Next, last page, select page number.

3.1.4 Delete certificate

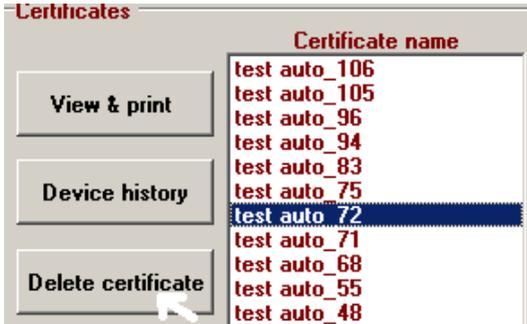

Delete a certificate by first selecting the certificate from the list you wish to delete then click the **Delete certificate** button.



Super users can only delete certificates.

To confirm deletion JOFRACAL will ask for authorization from a registered Master User. Here the user simply types in a valid password for a Master user.



3.2 View History


All calibrations to a particular sensor can be viewed on screen as a graph. This indicates changes in the sensor's sensitivity and accuracy between different calibrations. This can be useful to show changes over time or variations between different calibration groups:



Click **Device history** to view the history of the currently selected test device.

A window containing a graph is shown:

History - viewing:

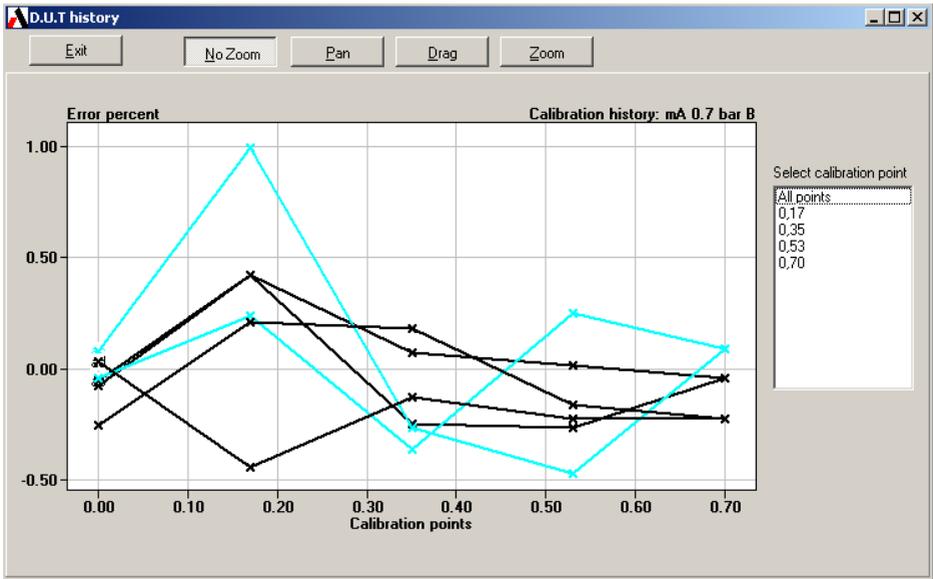

The buttons at the top of the screen provide the following functions:



This returns you to the device maintenance page.



These buttons allow the user to further scrutinize the history graph with zoom, drag and pan functions.




You can define the axis settings and zoom on areas of interest.

This provides a numeric list of all the calibration test points on the graph.

Use this list to select a specific calibration point and view all the measured values at a particular point for the sensor.

Deviation

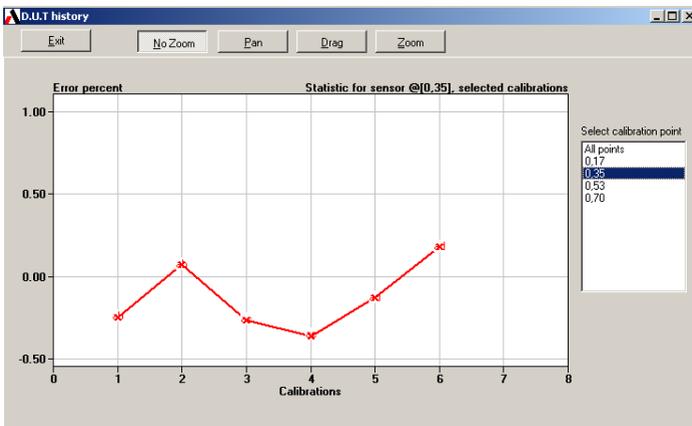

3.3 Edit a test device

Device under test data form contains the properties of a test device instrument.

Edit test device properties - Maintenance:

The screenshot shows a software window titled "Test device data" with a close button (X) in the top right corner. The window is divided into several sections:

- Device under test (DUT):**
 - Device ID: Ptx 510 2
 - Manufacturer: AMETEK DENMARK
 - Serial No: 323477
 - Description: (empty)
- Range:**
 - Min: 0,000000 bar
 - Max: 0,700000 bar
- Pass/Fail criteria:**
 - ±(0,50 % of fullscale)
- Calibration:**
 - Last certificate No.: testing 16
 - Last certificate: 19-09-2007
 - Calibration interval: 12 months
 - Scheduled:
 - Test setup: tryk apc
 - Procedure: tryk short
- Notes:**
 - (empty text area)
- Category / Device type / Medium / Output type / Measure unit:**
 - Category: Pressure
 - Device type: Gauge (Rel.)
 - Medium: Gas
 - Output type: P/I (4-20mA)
 - Measure unit: bar
- 24V loop supply:**
 -
- Scaling:**
 - Low input: 4 = 0,000000 bar
 - High input: 20 = 0,700000 bar
- Location / Tags:**
 - Factory: fasdfasdf
 - Department: (empty)
 - Sections: (empty)
- Certificate note:**
 - (empty text area, Max. 30 characters)

At the bottom of the window are two buttons: "OK" (with a green checkmark) and "Cancel" (with a red X).



Changes can only be made by a user with MASTER access.

3.3.1 Test device properties

Contain information identifying the test device.

- Device ID. (Unique value identifying every device in database)
- Maker
- Serial number
- Description
- Ranges. Devices' minimum & maximum pressure limits
- Pass-Fail. Calibration pass/fail criteria
- % of Full-scale or % of Reading.
- Last certificate. Date and name of last calibration certificate
- Calibration interval. How often device is to be calibrated
- Schedule. Is the device scheduled for calibration?
- Calibration parameters. Calibration Setup and procedure ID's
- Notes. Certificate and general notes
- Location/tags. Identifies the devices' position

3.3.2 Defining a device type

Definition of a test device comprises of:

- Category
- Device type
- Medium
- Output type
- Measure unit
- 24V power supply

See Section 11.4 Page 85 for full details on Test device definition.

4. CALIBRATION SETUP

Click on the  tab to begin a calibration.

The calibration process is divided into 3 distinct stages and is navigated by “Vertical page tabs” on the right of the form.

- ① Selecting the test device(s).
- ② Create or select a predefined scenario.
- ③ Create or select a procedure method.

If the scenario and procedure have already been defined then the user must only select the device and click on the

 button.


Normally the scenario and procedure are defined when the user creates a test device in the Edit Test device Dialog. (Section 11 Page 80).

4.1 Select a test device for calibration

First step is to select the devices to be calibrated.

Click on the ‘Select devices’ button highlighted by the yellow arrow in the below picture.


Initial screen – calibration setup

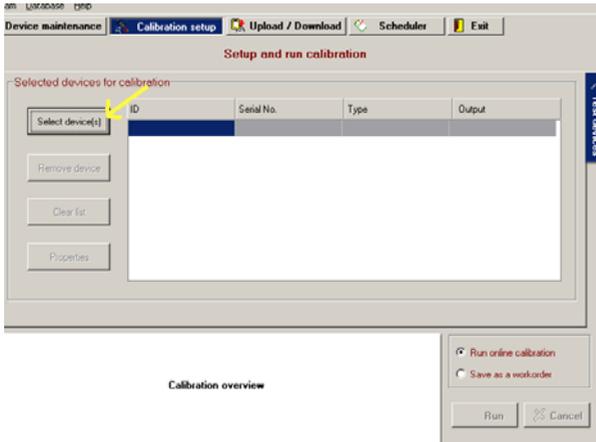

The JOFRACAL Search dialog is displayed. See (Section 12 Page 89) for details on the search dialog.

After selecting a device, JOFRACAL returns to the setup pages.

Calibration setup after selecting a device

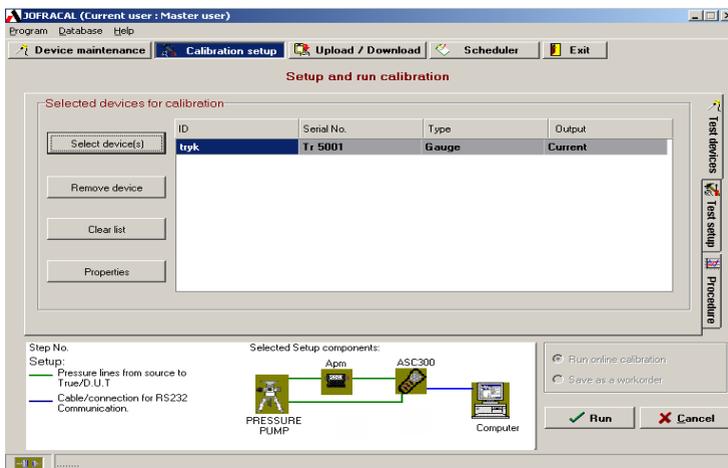



Note the 2 extra vertical tabs now displayed: Test setup and procedures. **The procedure setup tab is not applicable to pressure switch calibration.**

In this case, the device in question has been assigned a setup routine, seen by the graphic scenario summary below the device list.


There are 4 control buttons on the device selection page.



Select device(s) for calibration.



Remove the device currently highlighted from list.



Remove all selected devices from list.



View the properties of the device currently highlighted. See (Section 11 Page 80) for details on the test device dialog.

4.2 Defining the calibration test setup scenario

The second stage of setting up a calibration is defining the test environment.

A "test setup" method can be defined and saved, then later assigned to any other test device in the database.

The **Test setup** can actually first be assigned in the **Edit Test device Dialog** when first creating the Test device See (Section 11.2 Page 84) or later here in the Calibration setup.

Test setup page – Calibration setup

Setup ID : tryk apc [New] [Delete] [Copy]

	Identification	Type	Serial no	Edit	Serial ports
Source 1	pump	PRESSURE PUMP	Serialno	[...]	Com19 [v]
Source 2	Not in use			[...]	
True read	Asc logger	ASC300		[...]	
Ref sensor	apm 70kpa		50406503	[...]	
D.U.T Read	Asc logger	ASC300		[...]	

Test devices | Test setup | Procedure



Required serial communication ports are defined to the right of each component.

The following buttons allow the user to maintain the Test setup definitions database.

Select a predefined Test setup definition.


Create a new Test setup definition.

Delete the current “Test setup” definition. Be sure no other device uses this record.

Copy the current “Test setup”.

4.2.1 Creating a new Test setup

When copying or creating a new scenario, the user is requested to enter a new Test Setup ID.

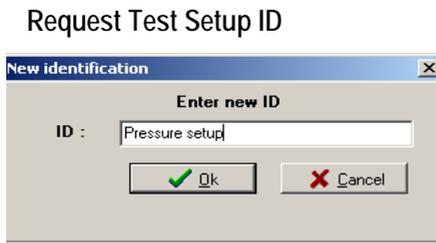

Key in the new ID and click OK. A blank Test Setup page is presented ready for a complete new definition.

	<u>Identification</u>	<u>Type</u>	<u>Serial no</u>	<u>Edit</u>	<u>Serial ports</u>
<u>Source 1</u>	No Selection			...	
<u>Source 2</u>	Not in use			...	
<u>True read</u>	
<u>Ref sensor</u>	N/A			...	
<u>D.U.T Read</u>	

4.2.2 Test Setup parameters

The following calibration variables are defined in this page:

Source 1 : Define the pressure source under calibration, pump, process, tank or other manual pressure source.

To select a pressure source, click on the select  button adjacent source 1 label.

(For details on the source dialog see Section 5 Page 48)

Source 2 : Not applicable to pressure calibration.

True reading method: Defines how the True reference measurement reading will be done.

Click on the select  button adjacent True read label.

For details on the True read method dialog see (Section 6 Page 51).

Reference Sensor: If the True logging instrument is using an “external pressure module”, then this parameter must be defined.

Click on the select  button adjacent Ref Sensor label.

For details on the Reference sensor dialog see (Section 7 Page 59).

D.U.T reading method – Defines how the Test device measurement reading will be done.

Click on the select  button adjacent D.U.T read label.

For details on the D.U.T read method dialog see (Section 8 Page 64).

4.3 Defining the calibration procedure

This window is used to select a calibration procedure.

Setup and run calibration

Procedures : tryk short New Delete Copy

Source setup

Step No.	Set point (kPa)	%Fullscale %
1	0,00	0,00
2	35,00	50,00
3	70,00	100,00

Stability criteria

Delay: 8 Time/sec
Set point tolerance: 0,50 FS %

Selected Setup components:

Step No. Setup:
 — Pressure lines from source to True/D.U.T.
 — Cable/connection for RS232 Communication.

Run online calibration
 Save as a workorder

Run Cancel

The 3rd and final stage of the **calibration setup** is to define the pressure steps called procedures. Procedures can be defined, saved and reused by any test device.

Note: The procedure definition is not required. Serial communication ports are defined to the right of each component.

The **Procedure** can actually first be assigned in the **Edit Test device Dialog** when first creating the Test device (See Section 11.3 Page 84) or later here in the Calibration setup.

The following buttons allow the user to maintain the **Procedures** database.

4.3.1 Selecting an existing Procedure

 Select a predefined Procedure definition. Click on the list box and select the desired Procedure.

4.3.2 Creating a new Procedure

 Create a new Test setup definition.

When creating a new procedure, the user is requested to enter a new Procedure ID.

Request Procedure ID



Type in the new ID and click OK. An initialised Procedure page is presented ready for editing

Procedure definition page

Setup and run calibration

Procedures : tryk short New Delete Copy

Source setup

Step No.	Set point (kPa)	%Fullscale %
1	0,00	0,00
2	35,00	50,00
3	70,00	100,00

Stability criteria

Delay: 8 Time/sec
Set point tolerance: 0,50 FS %

Buttons: Autofill, Add, Delete, Insert

Step No. Setup:

- Pressure lines from source to True/D.U.T
- Cable/connection for RS232 Communication.

Selected Setup components:

Run online calibration
Save as a workorder

Run Cancel

4.3.3 Deleting a procedure

Delete

Delete the currently displayed Procedure definition. JOFRACAL requests confirmation prior to final deletion.

Be sure no other device uses this record.

4.3.4 Copy a procedure

Copy

Copy the currently displayed Procedure. When copying the new procedure, the user is requested to enter a new Procedure ID.

Request Procedure ID

Enter the new ID and click OK. An identical procedure with a new name is displayed in the Procedure page however with a new name.

Procedure definition page

Step No.	Set point (kPa)	%Fullscale %
1	0,00	0,00
2	35,00	50,00
3	70,00	100,00

4.3.5 Test Setup parameters


The following calibration variables are defined in this page:

4.3.6 Pressure points

The calibration set pressure points are entered and must be within the admissible pressure range.



Autofill pressure points.



Add a line to the calibration steps.




Delete a line to the calibration steps.



Insert a line to the calibration steps.

4.3.7 Autofill function

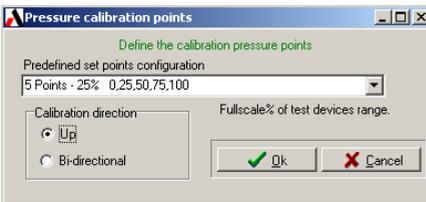

This dialog allows the user to use some pre-defined procedures with varying number of set points and intervals, to define the procedure.


4.3.8 Stability criteria

Stability criteria comprise of 2 elements,

1. Set point tolerance.
2. Delay time.

The set point tolerance is specified as a percentage of the Full scale range and the test device.

Once this has been achieved, JOFRACAL then awaits the Delay time (Specified in seconds) before taking a reading.

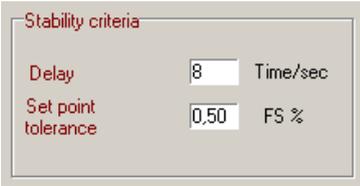

The screenshot shows a window titled "Stability criteria" with two input fields. The first field is labeled "Delay" and contains the value "8", with the unit "Time/sec" to its right. The second field is labeled "Set point tolerance" and contains the value "0,50", with the unit "FS %" to its right.

Parameter	Value	Unit
Delay	8	Time/sec
Set point tolerance	0,50	FS %

5. DEFINING PRESSURE SOURCES

The source dialog is used in the administration of the pressure source database and enables the user to select, create, delete and edit source definition records.

Pressure source dialog

The screenshot shows a software dialog box titled "Source: 1". At the top, there is a "Source:" dropdown menu set to "Pneumatic Hand Pump". To its right are buttons for "New from Device", "New", "Delete", and "Copy". Below this is a form with several sections: "Manufacturer:" with a text field containing "Ametek"; "Serial No:" with a text field containing "200G-A-167"; "Model:" with a dropdown menu set to "Manual pressure pump"; "Description:" with an empty text field; "Resolution:" with a dropdown menu set to "0,01"; "Range:" section containing "Min" and "Max" labels with text fields for "-0,001 MPa" and "0,010 MPa" respectively, and a "Factory defaults" button; "Calibration dates:" section containing "Last calibration date." with a dropdown menu set to "N/A" and "Calibration interval every:" with a dropdown menu set to "12" and the text "months"; "Certificate note:" with a text field and the text "Max. 30 characters."; and "Notes:" with a large text area. At the bottom right are "Ok" and "Cancel" buttons.

If no pressure source type is currently assigned, then “No Selection” is the default.

5.1 Select a pressure source



Use the drop down list of previously defined pressure sources to select the desired source device for the calibration.

5.2 Create a new source record



Select the new button and the user is prompted for an ID for the new source.

5.3 Copy a pressure source record



Copy the current pressure source to a new record. The user is again prompted for a new ID, then the new pressure source with the same properties but new ID is displayed.

5.4 Delete a pressure source record



Delete the current pressure source. JOFRACAL requests confirmation prior to the final deletion.

5.5 Pressure source general data

This section describes the properties in the pressure source dialog.

5.5.1 Manufacturer

The calibrator manufacturer is displayed on the certificate.

5.5.2 Serial number

The pressure source serial number is displayed on the certificate.

5.5.3 Model

Select by dropdown list box the pressure source type.
E.g. JOFRA T-620 pressure pump, Pressure tank etc...

5.5.4 Calibration dates

The date the calibrator was last calibrated and the interval between calibrations.

5.5.5 Description

The users own description of the calibrator.

5.5.6 Minimum/maximum pressure range

This is used to specify the calibrator's admissible pressure range. When the calibration procedure is set up, JOFRACAL controls whether the given test points are admissible, i.e. within the pressure ranges of the calibrator.

5.5.7 Digits

Maximum set point digits displayed.

5.5.8 Calibration notes

This field may be used to enter a comment about sensor usage (maximum 240 characters). Not displayed on the certificate.

5.5.9 Certificate note

This field may be used to enter a certificate comment (maximum 29 characters).

6. TRUE READING METHOD

The true reading method is one of the four main elements of a Calibration test setup and is called from the Calibration Setup page.

The purpose of this form is to define how the true reference pressure is to be measured.

It is important that the True reading method is defined before the device under test reading method, because it directly affects the available reading methods for the Test device.

True reading method dialog

Select : APC 35 BAR New Delete Copy

True reference read method :

Digits : 2

Device :

Manufacturer : Ametek A/S

Serial No : 08555004

Logging type : APC Quick connect

Type : APC05KG

External pressure module

Calibration dates:

Last calibration date : N/A

Calibration interval every : 12 months

Max Decimals : 6

Certificate note :
Max. 30 characters.

General notes :
Max. 240 characters.

Ok Cancel


6.1 User-defined methods

Apart from the one pre-defined reading method, 'Pressure manual', the user must define the reading methods which normally include some form of data logger or manual reading device.

Any User-defined methods can be used in both True and D.U.T reading methods.

Logging devices can be for example one of Ametek's APC, CPC, IPI, AMC900,HPC or ASC's. Any other type unknown to JOFRACAL is considered a manual logger meaning pressure points would have to be manually keyed. (See logging devices Section8.7.2 Page på side 68)

6.2 Selecting a True reading method

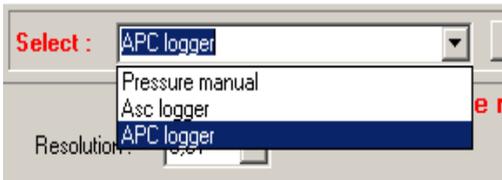

Use the drop down list of previously defined reading methods. The available methods listed depend on the output of the Device under test.

6.3 Creating a user-defined method

Click on the  button and the JOFRACAL prompts the user for an identification name.

Enter new True ID




A small dialog box titled "New identification" with a close button (X) in the top right corner. It contains the text "Enter new ID" and a text input field labeled "ID :". Below the input field are two buttons: "Ok" with a green checkmark and "Cancel" with a red X.

Enter the new ID and Click



A new empty form is displayed

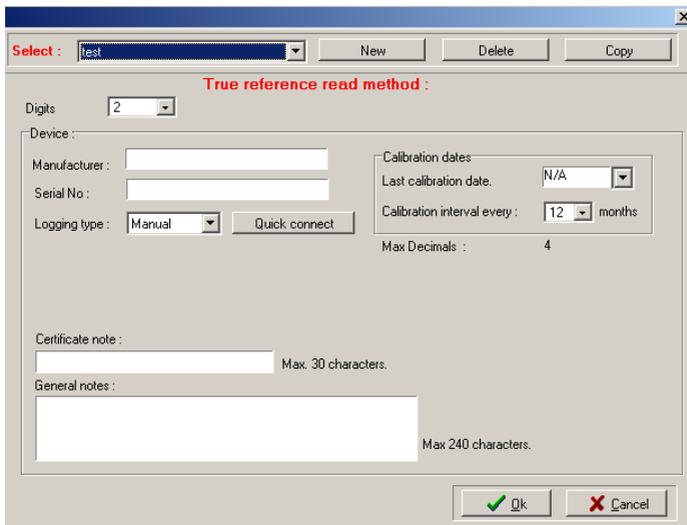

A larger dialog box titled "True reference read method :". At the top, there is a "Select:" dropdown menu with "test" selected, and three buttons: "New", "Delete", and "Copy". Below this, there is a "Digits:" dropdown menu with "2" selected. The main area is divided into several sections: "Device:" with fields for "Manufacturer:" and "Serial No."; "Logging type:" with a "Manual" dropdown and a "Quick connect" button; "Calibration dates:" with "Last calibration date:" set to "N/A" and "Calibration interval every:" set to "12" months; and "Max Decimals:" set to "4". At the bottom, there is a "Certificate note:" field (Max 30 characters) and a "General notes:" text area (Max 240 characters). The dialog box has "Ok" and "Cancel" buttons at the bottom right.

A blank True method dialog (default logger set to manual) appears, enabling the user to define the logging device. (APC, CPC, IPI, ASC, AMC-900, HPC or manual)

See True read parameters. (Section 6.6 Page 55) for a description of the dialog controls.

When all parameters and logger information are keyed, click the



6.4 Copy a User-defined method

Click on the  button and the JOFRACAL prompts the user for an identification name.




Follow the same instructions as if creating a new User-defined method.

6.5 Deleting a True reading method

Only User-defined methods may be deleted from the list.

Select the reading method you wish to delete, then click the delete  button.

JOFRACAL will ask the user to confirm the deletion.

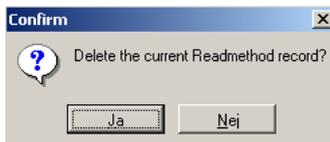

Click Yes (Ja) to confirm deletion.

6.6 True read parameters

6.6.1 General parameters

6.6.1.1 Digits:

Digits

Use the digits control to set the display length of the calibration true measurement reading.

The digits control can be set between: 2 and 7 depending on the device used. E.g. IPI has a maximum of 5-digit display.

6.6.2 Logging device parameters

The device section parameters of the **True read dialog** describe the logging device used for the True reading method and are visible in User-defined reading methods.

Device section of the True read dialog

Device :

Manufacturer :

Serial No :

Logging type :

Modul type :

External pressure module

Certificate note : Max. 30 characters.

General notes : Max 240 characters.

Calibration dates:

Last calibration date.

Calibration interval every : months

Max Decimals : 3

6.6.2.1 Manufacturer

The logger manufacturer is displayed on the certificate.

6.6.2.2 Serial number


The logger serial number is displayed on the certificate.

6.6.2.3 Logging type

Select the device type from the drop down list.


The device list contains the names of logging devices known to JOFRACAL and can communicate via RS-232 serial port.

Select "Manual" if device is other than an APC, CPC, IPI, ASC, HPC or AMC-900.

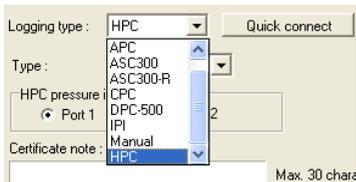

If the logging device is an **APC, CPC, IPI, ASC, HPC or AMC900** use the **Quick connect** to retrieve the type and serial number of the device. (See Section 6.7 Page 58)

6.6.2.4 Logging sub type:

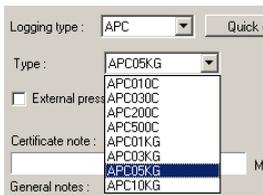

Applies to the CPC, APC, HPC and the IPI where definition of the logging device can be further refined by a Module type.

6.6.2.5 External pressure module

External pressure module

Indicates that an external pressure module is to be used with the true logging device and permits the user to define the module later in the setup procedure.

6.6.2.6 Calibration dates

The date the logger was last calibrated and the interval between calibrations.

6.6.2.7 Resolution

Indicates the maximum decimals displayed on the logger.

6.6.2.8 Notes

Indicates the maximum decimals displayed on the logger. This field may be used to enter a comment about sensor usage (maximum 240 characters). Not displayed on the certificate.

6.6.3 Certificate note

This field may be used to enter a certificate comment (maximum 29 characters).

6.7 Quick connect to logging device:

Use the quick connect button to connect and retrieve information from a logging device through an RS-232 serial port. (APC, CPC, HPC, IPI, AMC900, ASC and DPC-500).


If successful, it will use the information to automatically set the following controls.

- Device type list box
- Manufacturer
- Max decimals
- Serial number (DPC and ASM-80x only).

Using the quick connect is strongly recommended as it avoids any keying errors.

Click on the  button.

Quick connect dialog

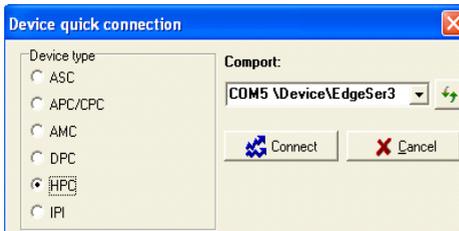

The user must indicate the type of logger and the serial comport then click the  button.

7. REFERENCE SENSORS

The reference sensor dialog is used in the administration of external pressure module database, for example APM's. The dialog enables the user to select, create, delete and edit these records.

Note. Definition of pressure related reference devices is only possible when called from calibration setup not from the Upload / Download screen.

Reference sensor dialog:

You may create any number of external pressure modules within the system, but two external modules may not have the same name or the same serial number.



Closes the dialog and saves any changes.



Closes the dialog and prompts to discard changes.


7.1 Selecting an external reference module



Use the drop down list of previously defined reference modules to select the required module. The Reference module properties are displayed. (See Reference module properties Section 7.5 Page 62).


7.2 New reference module from device

It is possible to create a new reference module record by using the



button. It allows the user to make a quick connection to an APC, AMC, ASC or DPC device connected by a RS-232 serial port. First the user is asked for the serial port and the device type.

Quick connect dialog

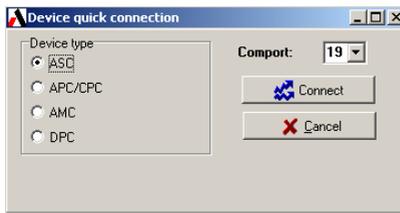


This is not an option for the HPC series. The RS-232 interface and the extern pressure module input use the same connection.

If successful, JOFRACAL retrieves the reference module serial number and the database scanned for an existing reference module.

If a record with the same serial number and device type exists then it will retrieve and present that reference module.


If not, JOFRACAL will ask the user to create a new reference module record.

Confirm creation of a new record

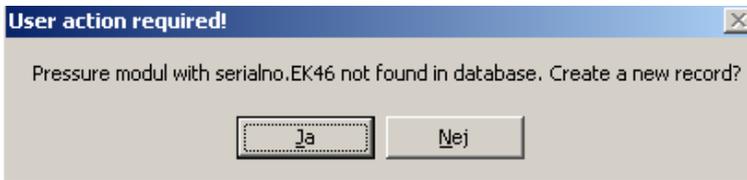

If the user answers yes, the user is prompted for a new ID.

Enter new reference sensor ID

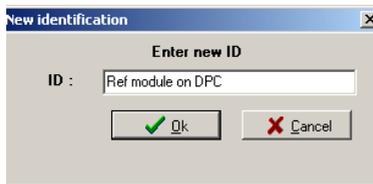

Click OK and a new reference module will be created and displayed.

7.3 Copy reference module

The  button copies the current reference module to a new record. The user is again prompted for a new ID. An identical reference module is displayed albeit with a new ID.

7.4 Delete reference module

The  button deletes the current reference module. JOFRACAL requests confirmation from the user before the actual deletion.

7.5 Reference module properties

This section describes the properties in the reference sensor dialog.

7.5.1 Manufacturer

The reference module manufacturer is displayed on the certificate.

7.5.2 Serial number


The reference module serial number is displayed on the certificate.

It should also be unique. When using the  button, it is the retrieved serial number that is used to scan the database to check if an existing reference module already exists.

7.5.3 Reference module type

This dropdown control lists the available reference module types. The available choices depend upon the type of True logger.


If the reference module is used with the DPC-500 the list contains the available reference modules recognised by the DPC-500.

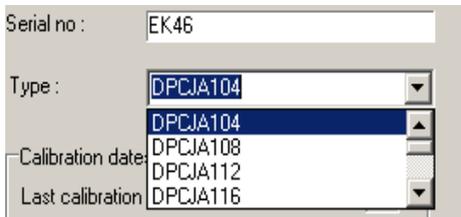

The screenshot shows a dialog box with the following fields:

- Serial no: EK46
- Type: A dropdown menu with 'DPCJA104' selected and highlighted in blue. The list below it shows 'DPCJA104', 'DPCJA108', 'DPCJA112', and 'DPCJA116'.
- Calibration date: (empty)
- Last calibration: DPCJA116

If the reference module is used with the APC, ASC or AMC900, the list contains the available APM's.

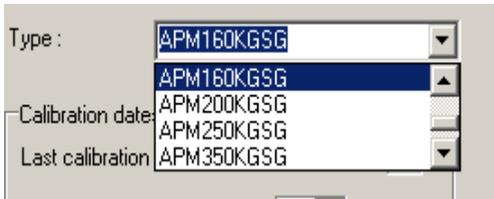

7.5.4 Calibration dates

The date the reference module was last calibrated and the interval between calibrations.

7.5.5 Minimum/maximum pressure

This is used to specify the reference module admissible pressure range.

7.5.6 Notes

This field may be used to enter comments about module's usage. Maximum length 240 characters. Not displayed on the certificate.

7.5.7 Certificate note

This field may be used to enter a certificate comment. (Maximum length of 30 characters).

8. D.U.T READING METHOD

The Device Under Test reading method is one of the four main elements of a Calibration test setup and is called from the Calibration Setup page. (See Section 4.2.2 page 40)

The purpose of this form is to define the measuring method for the device under test.

D.U.T reading method dialog

Select : ASC300 udv New Delete Copy

Device under test reading method :

Read method settings

Digits: 4

Convert to pressure

Certificate note : _____ Max. 30 characters.

Logging device

Manufacturer : Ametek A/S

Serial No : 9416010

Logging method : ASC300 Quick connect

Calibration dates

Last calibration date: N/A

Calibration interval every : 12 months

Certificate note : _____

Ok Cancel

There are 2 types of Reading methods, which can be selected.

- Predefined methods
- User-defined methods.

8.1 Predefined standard methods


Input on true. APC, CPC, DPC, HPC and ASC type instruments.

Manual Read. Manual test devices only.

8.2 User-defined methods

(See True read - User-defined methods. Section 6.1 page 52)

8.3 Selecting a D.U.T reading method

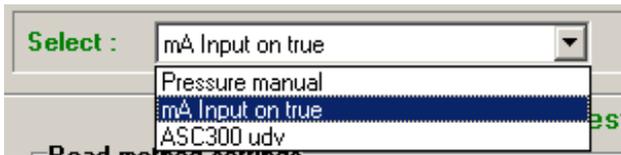

Use the drop down list of previously defined reading methods. The methods listed are directly dependent upon the output on the test device and True reading method.

- ☞ Please note that DPC, APC, HPC and CPC are only available if the device is also defined as True reading. In which case, you must select **'mA Input on true'**.

8.4 Creating a user-defined method

Click on the  button and the JOFRACAL prompts the user for an identification name.


New read method ID



Enter the new ID and Click



A new empty form is displayed and ready for editing.

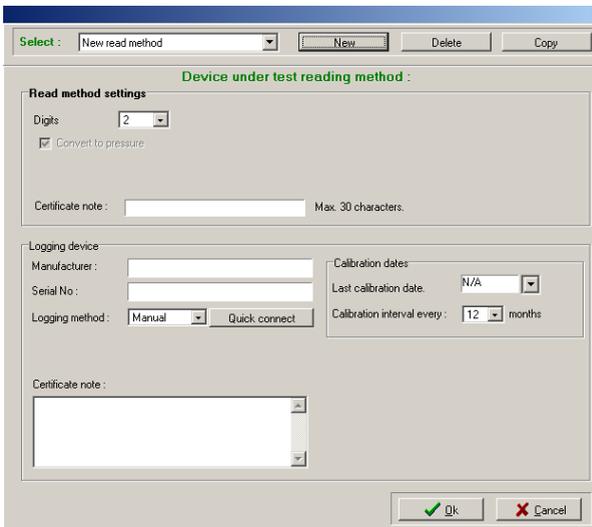

When a user-defined method is selected, the **logging device section** of the dialog is visible to enable the user to define the logging device. Example: APC, CPC, HPC, ASC, ASM-80x or manual.

See D.U.T read parameters (Section 8.7.1 Page 68) for a description of all parameters.

When all parameters and logger information are keyed, click the



button to save the information.

8.5 Copy a User-defined method

Click on the  button and the JOFRACAL prompts the user for an identification name.

Enter new read method ID




Follow the same instructions as if creating a new User-defined method.

8.6 Deleting a D.U.T reading method

Only User-defined methods may be deleted from the list.

Select the reading method you wish to delete then click the delete  button.

JOFRACAL will ask the user to confirm the deletion.

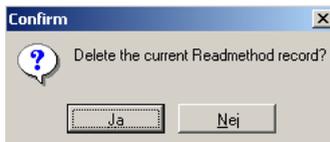

Click Yes (Ja) to confirm deletion.

8.7 D.U.T read parameters

8.7.1 General parameters

Digits:

Digits

Use the digits control to set the display length of the calibration D.U.T measurement reading.

The digits control can be set between: 2 and 6 depending on the device used. E.g. APC has a maximum of 6-digit display.

Convert to pressure:

Convert to pressure

Determines whether the sensor's measured data should be converted into pressure. Calculations are based on the on the low/high scaling properties entered when defining the test device.

8.7.2 Logging device parameters

The device section parameters of the D.U.T **read dialog** describe the logging device used for the True reading method and are visible in User-defined reading methods.

Logging device section of the D.U.T read dialog

Logging device

Manufacturer : Ametek A/S

Serial No : 9416010

Logging method : ASC300

Calibration dates

Last calibration date. : N/A

Calibration interval every : 12 months

Certificate note :

Manufacturer

The logger manufacturer is displayed on the certificate.

Serial number


The logger serial number is displayed on the certificate.

Logging type

Select the device type from the drop down list.

The device list contains the names of the loggers known to JOFRACAL and can communicate via RS-232 serial port.

Select "Manual" if device is other than APC, CPC, HPC, DPC, ASC or ASM-80x.

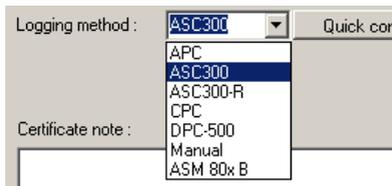

If the logging device is an **APC, CPC, HPC, DPC, ASC or AMC-900**, it is possible to use the **Quick connect** to retrieve the type and serial number of the device. (See Section 6.7 Page 58)

Calibration dates

The date the logger was last calibrated and the interval between calibrations.

Resolution:

Displays the maximum resolution for the logger.

Notes

This field may be used to enter a comment about sensor usage (maximum 240 characters). Not displayed on the certificate.

Certificate note

This field may be used to enter a certificate comment (maximum 29 characters).


9. UPLOAD/DOWNLOAD

This function can only be used with the following JOFRA calibrators

- ATC-B series (temperature)
- RTC/PTC-B series (temperature)
- ASC321 (signal)
- DPC-500 (pressure)

Using this function with the JOFRA DPC-500 pressure calibrator allows calibration procedures to be semi-automated. Calibrations are defined in the JOFRACAL 'Calibration Setup' and saved as work orders. These work orders are then downloaded to the DPC-500 via the RS-232 interface. Calibrations are run offline with the results saved as in the calibrator, which can be later uploaded to JOFRACAL. The resulting certificates can be later displayed or printed in JOFRACAL.

The Reference sensor panel contains a link to the Reference sensor dialog; however only applies to temperature devices from here.

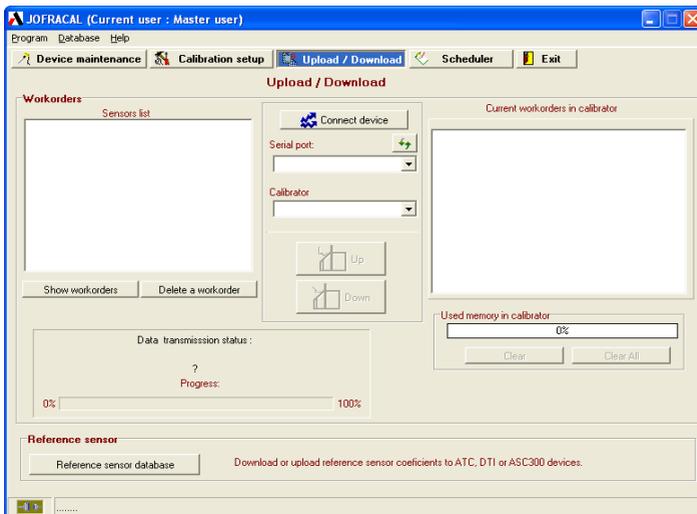

- ☞ **Note.** The user is prevented from leaving the Up/Download page while the communication to the DPC-500 is open.
(See Section 9.1.6 page 75).

9.1 Work orders

The calibrator can store up to 16 work orders. When all the calibrator's memory is used, it is necessary to remove (delete) some of the resident work orders before new ones can be downloaded.

9.1.1 Creating a work order

When a DPC-500 can only be used as a work order (noT online) so JOFRACAL defaults to "Save as work order" when complete.

The user simply selects the  Save button.




JOFRACAL jumps directly to the Up/down screen with the list of defined calibration work orders, ready for downloading.

9.1.2 The work order list

Click on the  Show prepared workorders to display the defined work order calibrations if not already listed.

Work orders ready for download

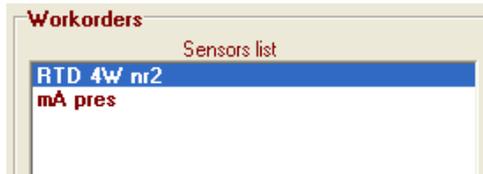

To delete a defined work order in the JOFRACAL database, simply select an ID from the Sensor list and click .

9.1.3 Connecting to the DPC-500.

To connect to the DPC-500, select a serial port, DPC in the calibrator list then click on the connect device button.



After communications are opened successfully, JOFRACAL retrieves the work order list currently in the Calibrator. (See Section 9.1.4 page 74).

Also  upload and  download buttons are active during open communications.

The user can now download or upload calibration procedures to and from the DPC-500 calibrator.

9.1.4 Current work orders in calibrator


These are listed in the Grid to the right hand side of the page along with details of their completion status. Unlike the ATC, the “as found / as left” status is first decided by the user when retrieved from the DPC-500. Status is set to “As left” by default.

List of work orders currently in the **DPC-500**

Current workorders in calibrator		
Sensor ID's	AsF	AsL
Ptx 510	-	-
P1-1 inH2O	-	-
P1-1 inHg	-	-
P1-1 kg/cm2	-	-

There is also a memory gauge indicating the available space in the DPC-500.

Memory usage on the **DPC-500**

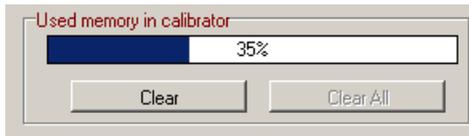

Clear

Delete the selected work order on the DPC-500.

Clear All

Delete all the listed work orders on the DPC-500.



Note: The **Clear** and **Clear All** buttons are not yet functional on the DPC. Workorders in the DPC-500 have to be deleted from the keypad on the calibrator.

9.1.5 Up / downloading work orders

To download a calibration, select a sensor from the work orders list then

Click the  button.

When the download is completed

- The work order ID appears in the "Work orders in calibrator" grid.
- The work order ID is deleted from the PC's "work order" list.
- The ATC memory usage gauge will be updated.

To upload any completed work orders, select from the "work orders" in "calibrator" list then select the job from the list then click the  button.

When upload is complete, JOFRACAL will either delete the work order from the ATC or just change its completion status AsF or AsL. The certificate can then be viewed from the Viewing certificates in the Device maintenance page. (See Section 3.1.3 Page 28)

9.1.6 Disconnecting the device Up/Download

It is important to disconnect the ATC when finished or before proceeding to other areas of JOFRACAL.


Therefore JOFRACAL prevents the user from leaving the Up/Down load page until closing communications by clicking the  button.

The following warning will appear if the user attempts to leave the Up/Down load page.



9.2 Reference sensor

Allows quick access to the reference sensor dialog click on the Reference sensor database button but **only applies to temperature related devices**.



See (Section 7 Page 59) for details regarding maintaining reference sensor databases.

10. SCHEDULER

The scheduler allows a user to easily administrate the calibration of test devices.

Typically a supervisor would build a list of devices due for calibration, flag them for calibration and if required generate a report for those responsible for the actual calibration.

JOFRACTAL scheduler page

The screenshot shows the JOFRACAL scheduler interface. The window title is "JOFRACAL (Current user : Master user)". The menu bar includes "Program", "Database", and "Help". The toolbar contains "Device maintenance", "Calibration setup", "Upload / Download", "Scheduler", and "Exit". The main area is titled "Scheduler" and contains a "Device list" table. On the left side, there are buttons for "Select devices", "Show scheduled", "Remove selected", "Clear list", and "Print list". A "Schedule flag" checkbox is located at the top right of the table area.

Device ID	Type	Last calibrated	Calibration due	Location	Schedule flag
Ptx 510	Gauge (Rel.)	N/A	N/A	//	<input type="checkbox"/>
Ptx 510 2	Gauge (Rel.)	19-09-2007	19-09-2008	fasdfasdf//	<input type="checkbox"/>
ptx510 2 Rdg	Gauge (Rel.)	N/A	N/A	fasdfasdf//	<input type="checkbox"/>
test tryk	Mechanic	N/A	N/A	//	<input type="checkbox"/>
test pressure	Gauge (Rel.)	N/A	N/A	//	<input type="checkbox"/>
test init	Gauge (Rel.)	N/A	N/A	//	<input type="checkbox"/>
tryk	Gauge (Rel.)	04-09-2007	04-09-2008	//	<input type="checkbox"/>

10.1 Selecting devices

To select devices from the Test device database click the  button to open the JOFRACAL search dialog.
(See Section 89 Page 12).

The  button will display all the devices already flagged as scheduled for calibration.

10.2 Scheduling for calibration

The devices displayed in the list can now be scheduled or unscheduled through the checkbox controls on the right hand side.

This can be done on an individual basis by using the checkboxes on each device row 

or

scheduling all devices at once by checking the top checkbox 

10.3 Remove from schedule list

 Remove selected

Remove a selected device from the list.


 Remove all devices

Remove all devices from scheduler list.

10.4 Scheduled devices report

The  button will generate a report from the listed devices. JOFRACAL requests various report parameters.

Scheduled devices report parameters

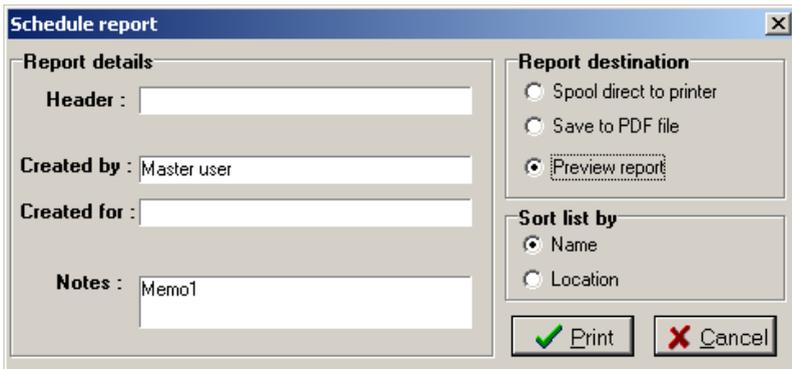

Schedule report

Report details

Header :

Created by : Master user

Created for :

Notes : Memo1

Report destination

Spool direct to printer

Save to PDF file

Preview report

Sort list by

Name

Location

To give the report more flexibility, the user can define the following report parameters:

- Report header. Title of the report.
- Created for. Who is the report for?
- Notes. Any relevant comments.

The user can also determine the destination of the report and the sort sequence for the listed devices.

11. HOW TO EDIT A TEST DEVICE

Device under test data form contains the properties of a test device instrument.

Edit test device properties – Maintenance:

The screenshot shows a software window titled "Test device data" with a blue header and a close button (X) in the top right corner. The main content area is divided into several sections:

- Device under test (DUT):** Fields for Device ID (copy Tryk bar), Manufacturer (Ametek Denmark), Serial No. (Sn. 213513), and Description.
- Range:** Min: 0,000000 bar, Max: 4,000000 bar. Includes a lightbulb icon.
- Pass/Fail criteria:** 0,50 % of fullscale.
- Calibration:** Last certificate No., Last certificate (N/A), Calibration interval (12 months), Scheduled (checkbox), Test setup (Tryk med ASM), Procedure (Tryk proc test).
- Certificate note:** Max. 30 characters.
- Notes:** A text area for additional information.
- Category:** Pressure.
- Device type:** Gauge (Rel.).
- Medium:** Gas.
- Output type:** P/I (4-20mA).
- Measure unit:** bar.
- 24V loop supply:** checkbox.
- Scaling:** Low input: 4 = 0,000000 bar; High input: 20 = 4,000000 bar.
- Location / Tags:** Factory, Department, and Section fields with arrows pointing to the right.

At the bottom right, there are two buttons: "Ok" (with a green checkmark) and "Cancel" (with a red X).



Changes can only be made by a user with MASTER access.

11.1 Test device properties

This section describes briefly the fields where you can enter information and where this information is displayed.

11.1.1 Manufacturer

The sensor's manufacturer is displayed on the certificate.

11.1.2 Serial number

The sensor's serial number is displayed on the certificate.

11.1.3 Sensor type, subtype and output properties

(See Section 11.4 Page 85)

11.1.4 Last calibration date

Last certificate : 

The date of calibration is automatically inserted in this field when JOFRACAL has calibrated a sensor. Any date entered manually will be overwritten when JOFRACAL performs a new calibration using the sensor. The field may be left empty. The current Windows[®] date format is shown to the right of the field.

 Note. Once a calibration date is inserted, JOFRACAL requires confirmation to change the attributes of the test device.

11.1.5 Last certificate number

Last certificate No. :

JOFRACTAL automatically inserts the certificate number of the last calibration. Any text entered will be overwritten when JOFRACAL performs a new calibration using the sensor.

11.1.6 Calibration interval

Calibration interval : 12 months

Scheduled

Test setup : - input

Procedure :

Certificate note :

- 1
- 2
- 3
- 6
- 12
- 18
- 24

Define how often the test device should be calibrated by selecting the interval (months) from the dropdown list. JOFRACAL uses the interval together with the last calibration date to warn uses of outdated test devices.

11.1.7 Scheduled

Check the control to mark the test device as scheduled.

11.1.8 Pass/Fail criteria

Pass/Fail criteria :

±(0,50 %fs. % of fullscale

There are 2 methods in defining the Pass/Fail criteria.

1. As a percent of Full scale
2. As a percent of Reading.

Pass/Fail criteria :
±{ 0,50 %fs. [% of fullscale]
Calibration [% of fullscale]
[% of reading]

Use the dropdown list to define method used.

% of Full scale. Pass/Fail is determined by a percentage of the test devices full scale. (Defined pressure range).

% of Reading. Pass/Fail is determined by a percentage of the current true reading.

Example:

The Pass/Fail criterion is specified as **±1.5% %fs** and the test device pressure range = **2 bar to 10 bar**.

$$(\text{MaxRange} - \text{MinRange}) \times (\text{perc value} / 100) \\ (10 - 2) \quad \times \quad (1.5 \text{ div } 100) = \pm 0.120\text{bar.}$$

11.1.9 Notes

This field may be used to enter a comment about sensor usage (maximum 240 characters). Not displayed on the certificate.

11.1.10 Certificate note

This field may be used to enter a certificate comment (maximum 29 characters).

11.1.11 Sensor location tags

Each test device has 3 location parameters to the identification and search process. The operator determines how many location levels are implemented.

These are optional. The explanatory location labels can be changed in the System Setup, see section 14.4.1 page 114.

11.1.12 Minimum/maximum range

This is used to specify the sensor's admissible pressure range. When the calibration procedure is set up, JOFRACAL controls whether the given test pressure points are admissible, i.e. whether the set points are within the pressure ranges of the sensor.


11.2 Defining a test device calibration setup

It is possible to create or assign an existing calibration setup definition from within the "Edit test device" dialog.

Click on the select  button to define the Test setup. See (Section 4 page 36)

11.3 Defining a test device Procedure

It is possible to create or assign an existing procedure definition from within the "Edit test device" dialog.

Click on the select  button to define the calibration test points. See (Section 4.3 page 42)

 **Note.** There is not procedure definition for the Switch pressure calibration.

11.4 Defining a device type

Every test device has the following properties, which completely describe its attributes.

11.4.1 Category

There are 3 fields of measuring JOFRACAL will work in:

- Temperature (See JOFRACAL temperature manual)
- Pressure (See pressure definitions Section 11.4.2 page 85)
- Signal (See JOFRACAL signal manual)

Each category offers a different set of Device type options, as do different device types offering a different set of Sub types and output unit options.

Details of all the different Types, Subtypes and output options can be found below.

Note: Signal is not implemented in JOFRACAL version 4.0

11.4.2 Pressure device definitions

Category : Pressure

Device type : Gauge (Rel.)

Medium : Gas

Output type : P/I (4-20mA)

Measure unit : bar

24V loop supply

Pressure types

There are 6 categories of test sensors:

- Gauge(relative)
- Absolute
- Difference
- Manual Manual digital, analog and switch
- Mechanic Manual digital, analog and switch
- N/A

Medium

- Liquid
- Gas

Output type

- 0-20mA
- 4-20mA
- 0-1Volt
- 0-2Volt
- 0-4Volt
- 0-5Volt
- 0-10Volt
- Manual Analog
- Manual Digital
- Pressure switch

Pressure measure unit

The following pressure engineering units can be used depending on the logging devices.

- Bar,
- MBar,
- PSI,
- Pa,
- MPa
- HPa,
- KPa,
- kgcm²,
- cmH₂O_C,
- cmH₂O_{20C},
- mH₂O_C,
- mH₂O_{20C},
- mmHg_{0C},
- inHg_{0C},
- inH₂O_{4C},
- inH₂O_{20C},
- inH₂O_{60F},
- ftH₂O_{4C},
- ftH₂O_{20C},
- ftH₂O_{60F},
- Torr
- CmHg
- MmH₂O

24V loop supply

24V loop supply



Test device requires 24V loop supply.

Pressure scale

Used with all output types except for the following.

Analog indicator
Digital indicator

Pressure switch

Scaling	
Low input :	<input type="text" value="4"/> = <input type="text" value="0,0000000"/> bar
High input :	<input type="text" value="20"/> = <input type="text" value="0,7000000"/> bar

Note that the *Convert to pressure* field must be selected in the D.U.T reading method for the scaling to be used.
(See section 8.7.1 page 68).

12. USING THE DEVICE SEARCH DIALOG

The Test device search dialog is used to select one or more devices from the test device database depending from where it is called.


The list of test devices available for selection appears in the left panel while those selected appear in the right.

The test device list is in a typical Windows file browser format where maps can be folded or unfolded.

As the user navigates through the device list by mouse or cursor, details of the individual sensors can be seen below the list in the “device details”. The highlighted device can be selected either by a double

mouse click or by clicking on the  Select button.

Device search & selection dialog:

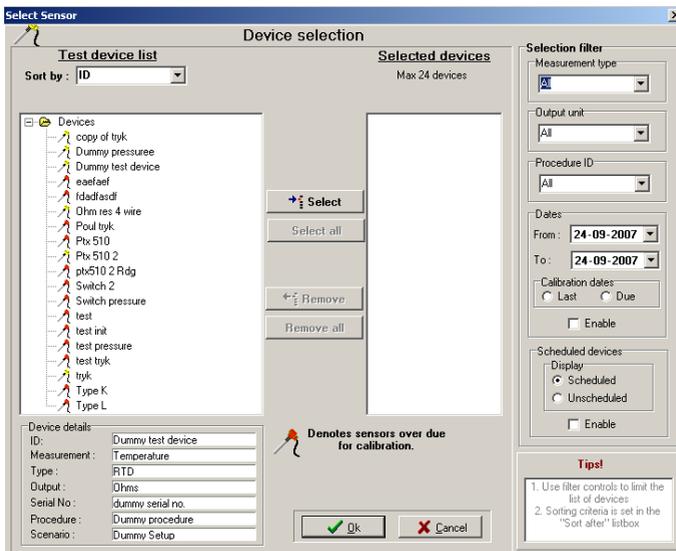

12.1 Selected / deselecting

Depending on where the search dialog is called from, the following controls are used for the selection process.



- Select the highlighted device (or Double mouse click)



- Select all devices listed (when called from the scheduler)



- Remove the highlighted device from the selected list.



- Remove all selected devices.

12.2 Sorting devices

Devices can be grouped and sorted according to their type, location, manufacturer or ID.

Sorting parameters




12.2.1 Sorting by location

When sorting by location, the user can determine the levels of grouping/sorting by clicking the define button indicated by the yellow

arrow. The defined location levels can be activated or deactivated as desired.

Location sort parameters:

Devices sorted by location:

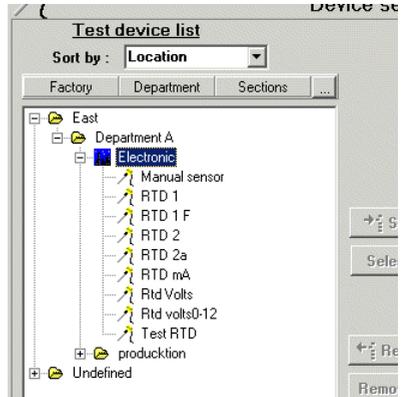

The location descriptions are defined in the system configuration. (See Location labels Section 14.4.1 Page 114).




Note! It is essential that the users are careful with the keying of device location parameters for the location sorting to work correctly.

12.2.2 Sorting by device type

Devices are listed according to their type and subtype.


Devices sorted by device type:

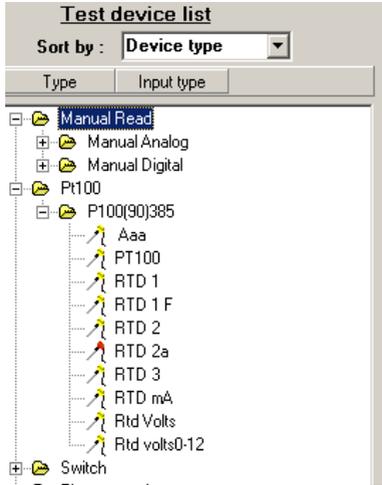

12.2.3 Sorting by manufacturer

Devices are listed according to their manufacturer.

Devices sorted by manufacturer:

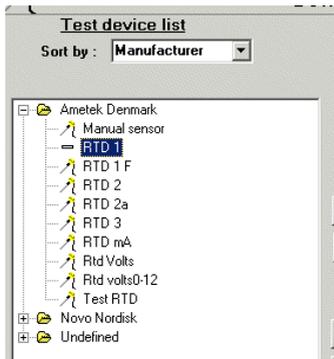


12.3 Selection filters:

The selection filter controls can refine the list of displayed test devices to a manageable level. There are several parameters the user can use to reduce the displayed devices.

12.3.1 Filter with device type and output unit

Type, output filters

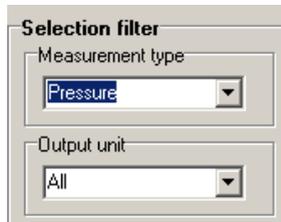

The image shows a software dialog box titled "Selection filter". It contains two sections: "Measurement type" and "Output unit". The "Measurement type" section has a dropdown menu with "Pressure" selected. The "Output unit" section has a dropdown menu with "All" selected.

Measurement type:


- Temperature
- Pressure
- Signal

Output units:

- Native (Ohms, mV, switch, manual)
- mA
- Volts

12.3.2 Filter with dates

Date range filters

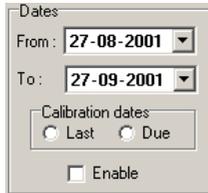

The screenshot shows a dialog box titled "Dates". It contains two date pickers: "From:" with the value "27-08-2001" and "To:" with the value "27-09-2001". Below these is a section labeled "Calibration dates" with two radio buttons: "Last" (selected) and "Due". At the bottom of the dialog is an "Enable" checkbox, which is currently unchecked.

Display devices within certain dates. The date range can be applied to either last calibration or calibration due.

To activate the date range, check the Enable checkbox.

12.3.3 Filter using the device scheduled property

Scheduled property filters




The screenshot shows a dialog box titled "Scheduled devices". It contains a section labeled "Display" with two radio buttons: "Scheduled" (selected) and "Unscheduled". At the bottom of the dialog is an "Enable" checkbox, which is currently unchecked.

All test devices contain a scheduled flag property. This can be used to filter the listed devices.

To activate the date range, check the Enable checkbox.

12.3.4 Due for calibration indicator.

All test devices due for calibration are listed with a red icon.

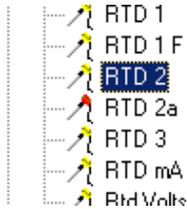

13. ONLINE CALIBRATION

The online **calibration** page enables the user to run and follow progress of a calibration.

The online **calibrating** page tab  is only visible when an online calibration is in progress and actually replaces the **EXIT** tab.

Directly after clicking  from the calibration setup page, the user is presented with either the single device calibration form or the multi device calibration form, depending on the number of test devices.

Communication lines have been established and JOFRACAL awaits the  command from the user.

13.1 Single device calibration

When calibrating a single device, the data grid rows represent the test points for the calibration. The current steps' reading can be seen in the "Current Data" area.

Single online calibration form:

Calibration in standby
Program Database Help

Device maintenance Calibration setup Upload / Download Scheduler **Calibrating**

Online calibration - Device Id : Ptx 510.2 info

CURRENT DATA
Step no. 1 of 3 Set : 0.00 bar Source 1: pump Serial No.: Serialno
True: - Set point tolerance:± 5.00% of fullscale: Delay time 3sec. Awaiting set point stability
Sensor:
Error:

Step No.	Set point (bar)	True (bar)	Sensor (bar)	Deviation (bar)	Pass/Fail
1	0,00		-	-	-
2	3,50		-	-	-
3	7,00		-	-	-

Total time elapsed : 0.00


Start Pause Stop Cancel

Line open:.....

13.2 Multi device calibration



Note! Multiple pressure calibration can only be performed using ASM or manual logging devices.

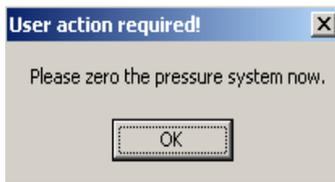

When the user starts the calibration, he is requested to “zero” the pressure system. To ensure precision, this must be performed prior to clicking “OK”.

During multi-device calibration, the data grid rows represent the test devices involved in the calibration. The test device being currently read is always highlighted.

13.3 Multiple manual calibration

Multi device online calibration form:

CURRENT DATA						
Step no.	Set :	0,70 bar	Source 1:	Pneumatic Hand Pump	Serial No :	200G-A-167
3 of 3	True	0,694900 bar	Set point tolerance:	5,00% of fullscale.	Delay time	3sec.
						<input type="button" value="Press when stable"/>
Sensor						
(Channel)	Device Id	True	Device	Time to stability	Deviation	Pass/Fail
(4) - copy		0,704200	0,6987	Not used	-0,0055/-0,79%fs.	Pass
(2) - ptx 510 multi		0,694900	0,6998	Not used	0,0049/0,70%fs.	Pass

Above is an example of a manual multi calibration where devices are read one at a time. After **set point stability** is acquired, the user can then enter the readings by clicking button to display the input dialog.

Then JOFRACAL moves to the next device, again awaiting for set point stability before allowing the user to enter the reading.

When all devices have been read, JOFRACAL prompts the user to set the pressure source to the next test point.

13.4 Multiple calibration with the ASM

If a JOFRACAL recognized scanner is used to read the devices under test, then all devices are read simultaneously once set point stability has been acquired.

Multi device online using scanner

CURRENT DATA

Step no. 1 of 3 Set : 0,00 bar Source 1: pump Serial No : Serialno

True 0,000000 bar Set point tolerance± 5,00% of fullscale; Delay time 3sec.

Sensor

Error : 0,34%fs.

(Channel) Device Id	True	Device	Time to stability	Deviation	Pass/Fail
{ 4 } - copy	0,000000	-0,0000	Not in use	-0,0000/0,00%fs.	Pass
{ 2 } - ptx 510 multi	0,000000	-0,0004	Not in use	-0,0004/-0,06%fs.	Pass

13.4.1 Viewing previous steps in multi-device calibration

Results from previous steps can be viewed by Left clicking the devices' row followed by a right mouse click. See the below picture.

Note. The test device being currently read is always highlighted regardless of the device results you may be viewing

(Channel) Device Id	True	Device	Time to stability	Deviation	Pass/Fail
{ 12 } - P1-11 kPa CH1	0,01	0,35	Not in use	0,34/0,07%fs.	Fail
{ 10 } - P1-11 kPa	0,01	0,04	Not in use	0,03/0,01%fs.	Pass

13.5 Online control buttons

Only the **Start** and **Cancel** buttons are enabled which are used to begin and cancel the online calibration.

No data is logged initially. Start the calibration process by clicking



Online control buttons



When the calibration is in progress, the remaining control buttons are enabled.



The  button closes down the calibration completely and returns to the Calibration setup page.

To interrupt the calibration process, click . Click



again to continue the process.

To stop the calibration, click the  button. The  is then enabled to allow the user to restart the calibration at test step 1, and all previously logged data is deleted.

13.6 Calibration completion

When the calibration is complete, the  button appears allowing the user to close and save the calibration results as a certificate.




The user is asked if the results are to be saved. If Yes, then the 'Save certificate' form is displayed.

13.7 Saving the calibration certificate

When the user chooses to save the calibration results the following screen is presented.

Save results as certificate dialog

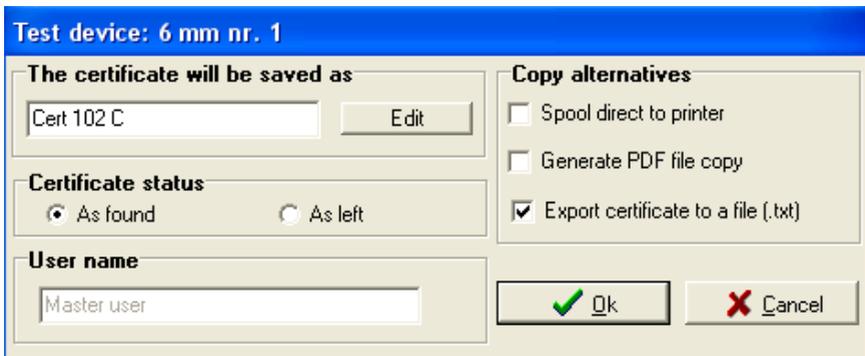A dialog box titled "Test device: 6 mm nr. 1" with a blue header. It is divided into several sections: "The certificate will be saved as" with a text field containing "Cert 102 C" and an "Edit" button; "Certificate status" with radio buttons for "As found" (selected) and "As left"; "User name" with a text field containing "Master user"; "Copy alternatives" with checkboxes for "Spool direct to printer", "Generate PDF file copy", and "Export certificate to a file (.txt)" (checked); and "Ok" and "Cancel" buttons at the bottom right.

The default values when the Window is displayed are defined in the system configuration. See (Section 14 page 108).

13.7.1 Certificate name

If Automatic certificate number applies (see Section 14.2.1 page 109), it is still possible to edit the default certificate ID by clicking


A rectangular button with the text "Edit" inside.

button.

13.7.2 Certificate copy alternatives

Apart from saving the certificate to the database, copy of the certificate can be also:

- **Sent direct to the printer**

A checkbox with the text "Spool direct to printer" next to it.

- **Saved as a PDF file**

A checked checkbox with the text "Generate PDF file copy" next to it.

- **Saved to text file.**

A checked checkbox with the text "Export certificate to a file (.txt)" next to it.

13.7.3 AsFound AsLeft

Define the certificate status by checking the relevant control.

AsFound AsLeft

A control titled "Certificate status" with two radio buttons: "As found" (selected) and "As left".

Certificate status
 As found As left

13.8 Online Information

Information regarding the ongoing calibration can be viewed by clicking on the  info .

13.9 Reading of data from devices

Data is read from the connected device(s) and displayed in the top left *CURRENT DATA* box. The live data consists of the true pressure reading and the device under test value either in pressure or the measured unit (mA, Volts etc.)

CURRENT DATA		<u>Online Calib</u>
Step no.	Set :	0,00 bar
1 of 3	True	0,000000 bar Si
	Sensor	-0,000350 bar
	Error :	-0,05%fs.


If manual reading has been selected, the corresponding field will be shown as *Manual*.

CURRENT DATA		
Step no.	Set :	0,00 bar
1 of 3	True	0,000000 bar
	Sensor	Manual


- ☛ JOFRACAL retrieves data from the devices approximately once every second. A change in, for example, the calibrator switch input will, therefore, be displayed by JOFRACAL up to one second later.

13.10 Test points

At the beginning of every pressure test point, JOFRACAL will display a window, which reminds the user to set the correct pressure point.

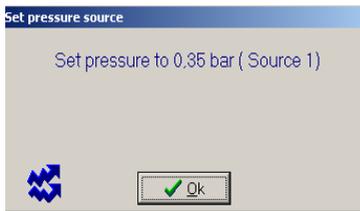


13.11 Set point stability



The set point stability parameters are displayed also in the “current data” Panel. Once stability has been achieved, the “Awaiting set point stability” button caption, changes to .

If reading method is “Manual”, the following dialog is displayed for user input.

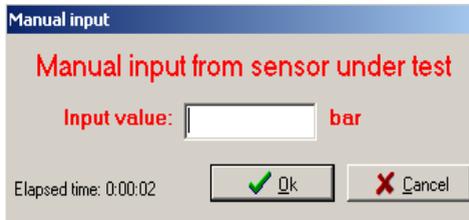

Otherwise the device(s) are read and logged automatically.

14. SYSTEM CONFIGURATION

Click 'program' from the main menu then select 'system configuration'.



The system configuration dialog consists of 5 main areas:

- Company information
- Certificate configuration
- User registration
- Default measure units
- Miscellaneous

System setup - menu:




These options are described in the following sections.

14.1 Company information

Click  **Company information** to edit company information.

System setup - company information:

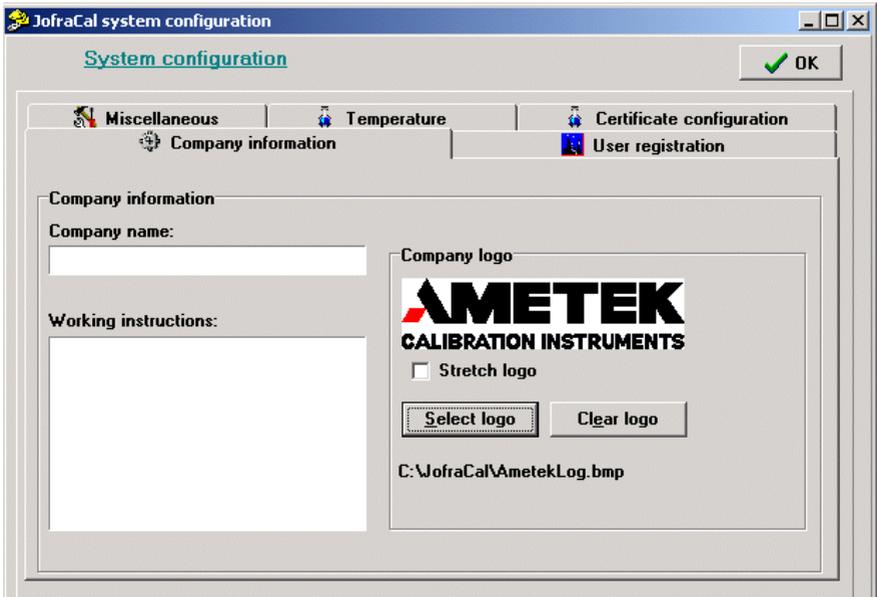

There are three main parameters:

14.1.1 Company name

The name is inserted at the top of all new certificates.

14.1.2 Working instructions

Working instructions are inserted on all new certificates immediately below the company name. The field may be used to enter general information.


14.1.3 Company Logo

This inserts a logo in the top right-hand corner of your certificates. The logo is included as a Bitmap (*.BMP) file. For the best results, the logo

should have the dimensions 200 x 50 pixels. However, if the logo does not match these dimensions exactly, it can be stretched to fit.

To include a logo in your certificate, Click **Select logo** and use the Select Logo dialog to locate and select your logo.

System setup – select logo:

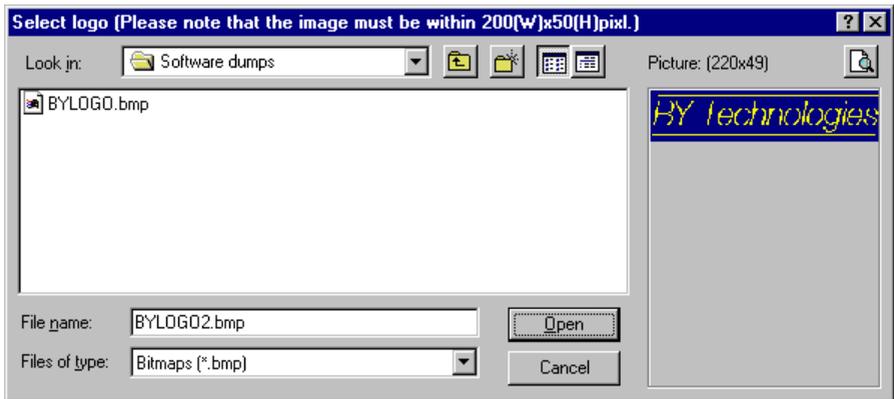

If, as in the example above, your logo does not fit the 200 x 50 pixels, use the *Stretch logo* option to fill out the space. However, note that this may result in your logo being distorted.

To change the logo, repeat the above step. To remove the logo from your certificates click **Clear logo**.

14.2 Certificate

Click on the **Certificate configuration** page tab to edit the certification setup.

System setup - certificate:

Certificate configuration

Create pdf file certificate
 Automate certificate no.

Export certificate to a file (.txt)
 Next certificate No: _____

Create online graph file (.gif)
 Lead text:

PDF files path : ...
 Number:

Send copy to printer

 Translate certificate texts

Key	Value
Identification	Tanýmlama
Device type	Cihaz Tipi
Manufacturer	Üretici
Serial number	Seri Numarası
Note	Not

The certificate setup consists of three parts, certificate numbering, default output selection, (PDF, text & graph files) and certificate translation.

14.2.1 Certificate numbering

All certificates are assigned an ID as they are created. JOFRACAL can be set to two possible numbering methods:

- Automatic numbering. If you select this option, IDs will consist of a *Lead text* (which you define) followed by a consecutive number. You define the first number in the series, e.g. *AMETEK certificate No. 7*. The Lead text (*AMETEK certificate No.*) and the number (7) are automatically separated by a space.
- Manual numbering. The ID must be entered manually when a new certificate is created. JOFRACAL checks whether the ID assigned to the certificate is already in use. Two certificates may not have the same ID.

Three parameters are used to control certificate numbering:

14.2.2 Automatic numbering of certificates

Automate certificate no.

Check this field if you want JOFRACAL to number certificates automatically.

14.2.3 Next certificate - lead text

Only used with automatic numbering. The field contains the fixed text for the certificate ID.

14.2.4 Next certificate - number

Only used with automatic numbering. The field contains the number of the next certificate. Certificates are numbered consecutively.

14.2.5 Certificate translation

All certificate texts can be translated. This option may be used if a different language or different explanations are required. Certificate translation is based around a table and a number of additional parameters.



Please note that translated texts are not saved with each certificate. This means that when a certificate is printed using the translated texts, the current translated texts are used. This may lead to confusion if the meanings of texts are changed once a certificate has been generated and the certificate is reprinted at a later date.

14.2.6 Translate certificate texts

Check this field if you want JOFRACAL to translate all certificate texts. The original English texts will be used if the field is not checked. Arial typeface supports text in all languages.

14.2.7 Translation table

The table consists of two columns. The left-hand column contains the original English texts, while the right-hand column contains the translated texts. Initially, the two columns are identical. Please note that only the right-hand column may be edited.

Certificate translation table

<input checked="" type="checkbox"/> Translate certificate texts	
Key	Value
Identification	Identifikation
Device type	Apparattype
Manufacturer	Fremsteller

The translation text is stored in a file: AmTransl.INI. This can be edited manually, but it is recommended that edits be made from JOFRACAL.

14.2.8 Certificate output defaults.

Set the default output for when the calibration is complete and the certificate is generated.

- Save a copy in PDF format and select the location.
 - Save the online graph file.
 - Send copy to the printer.
 - Export certificate data to text file.
- The export function creates a semi-colon separated file, which can be imported to Microsoft Excel or Access.

14.3 Default measure units

Click on the  page tab in system setup to edit the measuring related parameters for temperature and pressure.

System setup – Default measuring units

The screenshot shows a software interface for system setup. It is divided into several sections:

- Default temperature unit:** A sub-section containing a 'Measuring unit' group with three radio buttons: °C Celsius, °F Fahrenheit, and °K Kelvin.
- Device storage temperature:** A field with the value '35' and a unit dropdown set to '°C'.
- Mains frequency:** A group with two radio buttons: 50hz and 60hz.
- Default pressure engineering unit:** A section with a 'Select unit' dropdown menu currently showing 'hPa' and a label 'Select the default engineering pressure unit'.

The window contains the following parameters:

14.3.1 Default temperature measuring unit

JOFACAL incorporates the following three temperature units:

- Celsius (°C)
- Fahrenheit (°F)
- Kelvin (K)

14.3.2 Default pressure engineering unit

Select the preferred pressure unit from the below list.

- Bar,
- MBar,
- PSI,
- Pa,
- MPa
- HPa,
- KPa,
- kgcm2,
- cmH204C,
- cmH2020C,
- mH204C,
- mH2020C,
- mmHg0C,
- inHg0C,
- inH204C,

- inH2020C,
- inH2060F,
- ftH204C,
- ftH2020C,
- ftH2060F,
- Torr
- CmHg
- MmH20

14.3.3 Storage temperature

(Temperature only)

14.3.4 Mains frequency

Frequency parameter sent to ASM-80x during configuration.

14.4 Miscellaneous

Click on  Miscellaneous page tab in system setup to edit various parameters:

System setup - miscellaneous:

Database field	Location description
Loc1	Factory
Loc2	Department
Loc3	Sections

DTI resolution message

Show "Set DTI resolution" info message when starting calibration

Calibration uncertainty message

Select uncertainty information :

new uncert tex

Add

Delete

Select language: English

The window contains the following parameters:


14.4.1 User defined sensor location labels

Location: The miscellaneous page allows the user to define the devices' location structure. Each test device has 3 location parameters to simplify identification and search of a device.

The example below from the test sensor selection & editing window uses all 3 levels starting with a factory ID, department and finally sections.

(See **Sorting by location** section 12.2.1 page 90).

Sensor under test window – location tags:

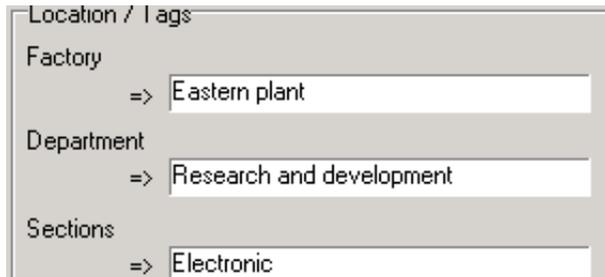

The screenshot shows a window titled "Location / Tags" with three input fields. The "Factory" field contains "Eastern plant", the "Department" field contains "Research and development", and the "Sections" field contains "Electronic". Each field is preceded by an arrow symbol "=>".

14.4.2 DTI resolution message

(Temperature only)

14.4.3 Calibration Uncertainty information

This field allows you to type in comments about factors that may affect the reliability of the calibration. These comments are stored in a database and can be displayed when a calibration commences. Select from the previous defined comments from the dropdown list.

To define a new uncertainty description, click on the **Add** button.

Uncertainty description



The screenshot shows a dialog box titled "New identification" with the subtitle "Enter new uncertainty text". It contains an "ID:" label followed by an empty text input field. At the bottom, there are two buttons: "Ok" with a green checkmark icon and "Cancel" with a red X icon.

Type in the new description and click OK.


14.4.4 Language selection



JOFACAL is now available in several languages. The available languages are restricted by the licence which is downloaded on installation. Select the desired language from the available languages in the dropdown list. Default is English.

14.5 User registration

Click on the  User registration page tab in system setup to define user's ID, name and Password. Check the Master access to allow the user full access to JOFRACAL.

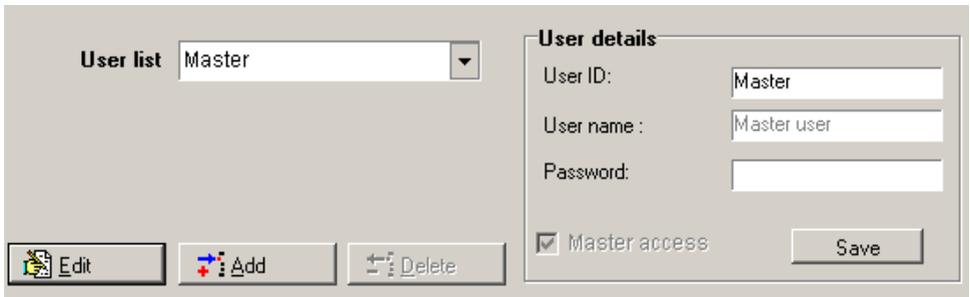A screenshot of a software interface for user registration. On the left, there is a "User list" section with a dropdown menu showing "Master". Below this are three buttons: "Edit" (with a pencil icon), "Add" (with a plus icon), and "Delete" (with a minus icon). On the right, there is a "User details" section with four input fields: "User ID:" (containing "Master"), "User name:" (containing "Master user"), "Password:" (empty), and a checked checkbox for "Master access". A "Save" button is located at the bottom right of the "User details" section.


14.6 Database Conversion program

The database conversion program converts an existing Amecal-Temperature database (MSACCESS) to a JOFRACAL database (Client dataset based database - CDS files).

This is done using the conversion program that is installed together with JOFRACAL.

1. Click *Start*.
2. Select *Programs*.
3. Select *JOFRACAL*.
4. Select *Database conversion*.

Database conversion program

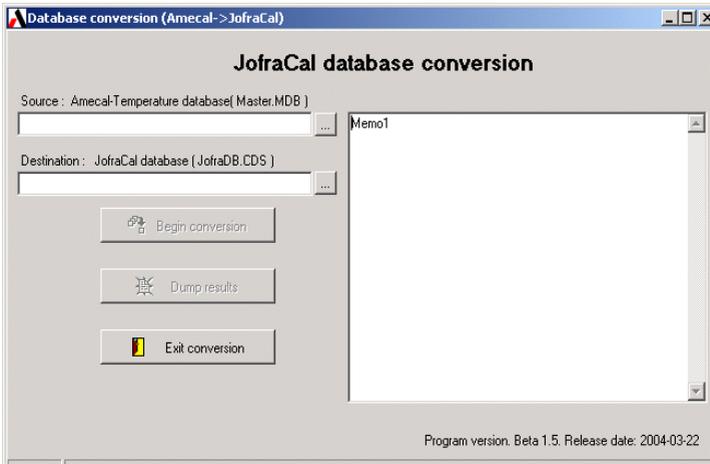


14.6.1 Selecting the Amecal-Temperature database


Click on the Select button to find the **Source** database.



A standard windows search dialog is displayed.

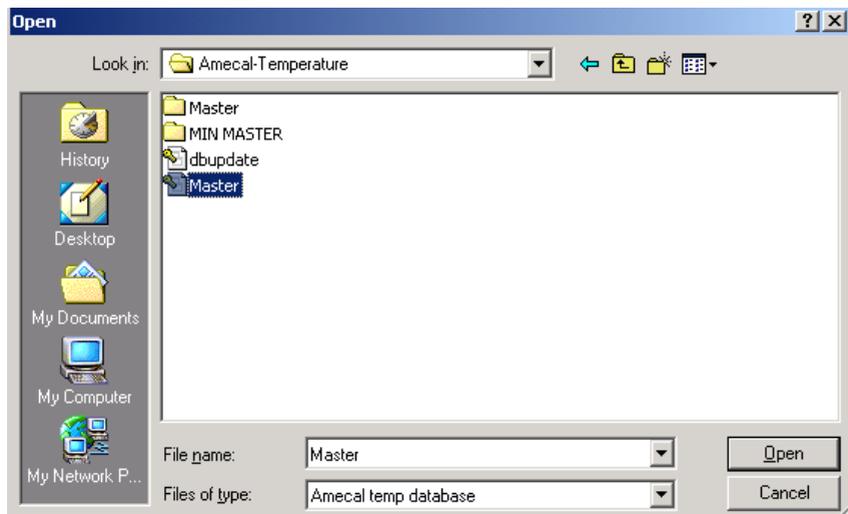

Locate and select the Amecal-Temperature database file and click open.



The
displayed in the source component.


file path is now

14.6.2 Selecting the JOFRACAL database

Click on the Select button to find the **Destination** database.



Using the same windows search dialog, locate the JOFRACAL database. JOFRACAL.CDS file.

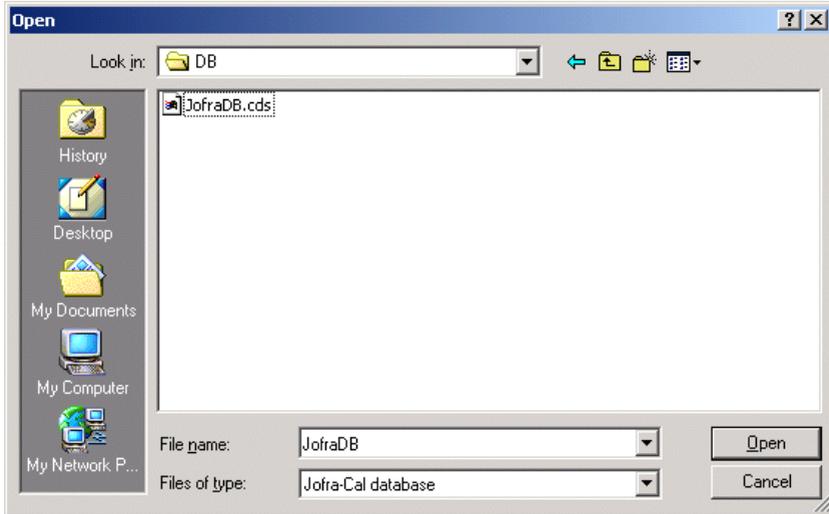

Locate and select the JOFRACAL database “JOFRACAL.CDS” file and click open.




The file path is now displayed in the source component.

14.6.3 Running the conversion

To begin the conversion, click the button.



Occasionally the program requires more information to ensure that the correct data is converted and will prompt the user to determine a Test device type.

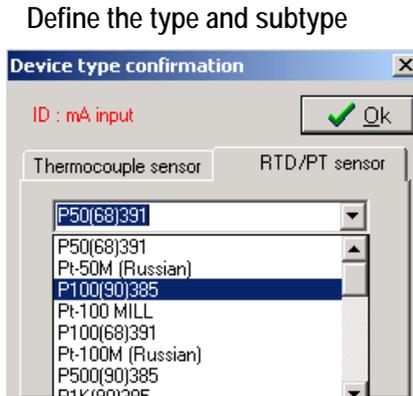

Select the type and/or subtype of the test device then click OK.


14.6.4 Conversion log panel

Progress of the conversion can be seen in the scrolling window to the right of screen.

A scrolling screen displays the conversion of

- Test devices
- Heat sources
- Procedures
- Certificates

Conversion log window

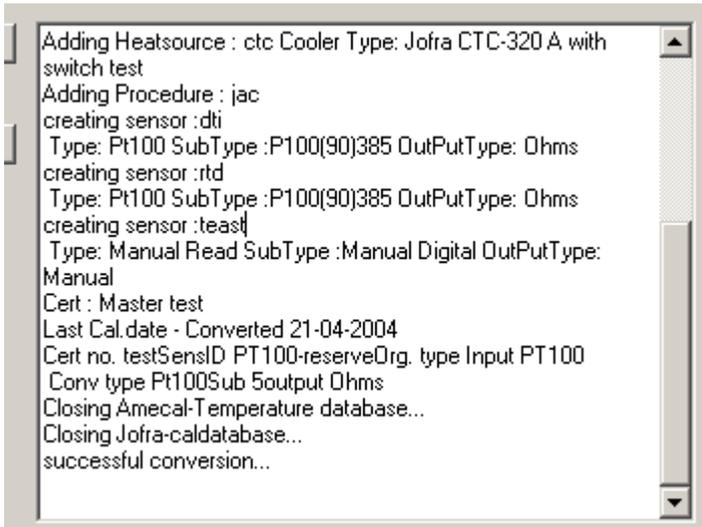

The last line of the log file will report if the conversion was successful or was aborted.

14.6.5 Close and save the conversion details

When completed, the user has the possibility to save the conversion log details to a file.

Click the  button to save details to the "DBConv.log" file saved in the JOFRACAL folder.

The conversion program informs the user where the file is saved.



To close, simply select the  Exit conversion button.

14.7 Export certificate database

It is possible to export the contents of the certificate database to an external file in XML format. XML is a widely accepted standard and compatible with most database systems.

From the top menu in the main form under database select 'Export certificates data to XML file'.



The following message informing the user where the data is saved is displayed.



Both pressure and temperature certificates are saved in the default database folder.

File containing pressure -> prcertifile.xml.

File containing temperature -> certFile.xml.

APP. A. SERIAL COMMUNICATION

The PC and the JOFRA devices must be connected using the correct type of serial cable. Use a JOFRA cable and ensure that the device is switched off when you connect the cable from the PC. Both the device and the PC should be earthed to avoid noise interference and damage to the equipment. The PC and the device should also be connected to the same mains circuit.

AMETEK Calibration Instruments
is one of the world's leading manufacturers and developers of calibration instruments for temperature, pressure and process signals as well as for temperature sensors both from a commercial and a technological point of view.

JOFRA Temperature Instruments
Portable precision thermometers. Dry-block and liquid bath calibrators: 5 series, with more than 25 models and temperature ranges from -90° to 1205°C / -130° to 2200°F. All featuring speed, portability, accuracy and advanced documenting functions with JOFRACAL calibration software.

JOFRA Pressure Instruments
Convenient electronic systems ranging from -25 mbar to 1000 bar (0.4 to 15,000 psi) - multiple choices of pressure ranges, pumps and accuracies, fully temperature-compensated for problem-free and accurate field use.

JOFRA Signal Instruments
Process signal measurement and simulation for easy control loop calibration and measurement tasks - from handheld field instruments to laboratory reference level bench top instruments.

JOFRA / JF Marine Instruments
A complete range of calibration equipment for temperature, pressure and signal, approved for marine use.

FP Temperature Sensors
A complete range of temperature sensors for industrial and marine use.

M&G Pressure Testers
Pneumatic floating-ball or hydraulic piston dead weight testers with accuracies to 0.015% of reading.

M&G Pumps
Pressure generators from small pneumatic "bicycle" style pumps to hydraulic pumps generating up to 1,000 bar (15,000 psi).

AMETEK[®]
TEST & CALIBRATION INSTRUMENTS

www.jofra.com

UK
AMETEK Calibration Instruments
Tel +44 (0)1243 833 302
jofra@ametek.co.uk

France
AMETEK S.A.S.
Tel +33 (0)1 30 68 89 40
general.lloyd-instruments@ametek.fr

Germany
AMETEK GmbH
Tel +49 (0)2159 9136 510
info.mct-de@ametek.de

Denmark
AMETEK Denmark
Tel +45 4816 8000
jofra@ametek.com

USA
AMETEK Mansfield & Green
Tel +1 (800) 527 9999
cal.info@ametek.com

India
AMETEK Instruments India Pvt Ltd.
Tel +91 22 2836 4750
jofra@ametek.com

Singapore
AMETEK Singapore Pte Ltd
Tel +65 6494 2388
jofra@ametek.com

China
AMETEK Inc. - Shanghai
Tel +86 21 5868 5111

AMETEK Inc. - Beijing
Tel +86 10 8526 2111

AMETEK Inc. - Guangzhou
Tel +86 20 8363 4768
jofra.sales@ametek.com.cn